

RISO MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS USER'S GUIDE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. RISO SHALL NOT BE LIABLE FOR ERRORS CONTAINED HEREIN OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, PERFORMANCE OR USE OF THIS USER'S GUIDE. RISO ASSUMES NO LIABILITY FOR DAMAGES RESULTING FROM THE USE OF THE INFORMATION CONTAINED HEREIN.

FCC Warning - For RN2000UI and 2130UI Models Only

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Warning - For RN2050AW and RN2150AW Models Only

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Warning

The Back Light Tube of the LCD of the Control Panel on this model contains mercury which must be recycled or disposed of as hazardous waste.

CONTENTS

Welcome to the RISOGRAPH RN Series Model	5
--	---

Introduction to Your RISOGRAPH **7**

Safety Guides - Installation	8
Installation	8
Power Connection	8
Overview of Features	9
Knowing the Parts and Components	10
Upper Area	10
Paper Feed Area	10
Master-Making Area	11
Front Area	11
Paper Receiving Area	11
The Control Panel	12
Main Control Panel	12
Display	13
Sub Control Panel	13
The Main Display	14

Getting Ready to Use Your RISOGRAPH **17**

Paper Recommendations	18
Size and Weight Restrictions	18
Guides for Trouble-Free Use	18
Storing Environment	18
Originals and Processing	19
Size and Weight Restrictions	19
Guides for Selecting Processing	19
Preparing to Print	20
Setting Up the Paper Feed Tray	20
Adding or Replacing Paper	21
Setting Up the Paper Receiving Tray	21
Closing the Paper Receiving Tray	22

Basic Features **23**

Safety Guides - Handling and Operation	24
Operation Environment	24
Handling Precautions	24
Basic Processes	25
Master-Making	25
Printing	25
Basic Operation	26
Photo/Half-Tone Processing	30
Producing Proof Copies	31
Automatic Printing	32

Adjustment Features **33**

Reducing and Enlarging Originals	34
Using Preset Reduction and Enlargement	34
Using Zoom	35
Changing Image Contrast on Prints	36
Producing Dotted Images	37
Reproducing Bound Documents	38
Repositioning the Print	39
Adjusting Vertical Print Position	39
Adjusting Horizontal Print Position	39
Changing Print Speed	40
Changing Print Density	41
Return to Initial Settings	42

Special Features 43

Printing Originals Side by Side.....44
Printing the Same Original Multi-Up.....45
Printing Different Originals Multi-Up.....46
Protecting Confidential Documents48
Automatic Sorting into Groups49
Setting Up Single-original Program.....50
Setting Up Plural-original Program.....53
Saving the Current Program Setting56
Renaming a Saved Program Setting58
Calling Up a Saved Program Setting60
Erasing a Saved Program Setting.....61
Storing Settings in Memory62
Saving the Current Print Job Setting.....62
Renaming a Saved Print Job Setting64
Calling Up a Saved Print Job Setting.....66
Erasing a Saved Print Job Setting67
Automatic Idle.....69
Customizing the Initial Settings70
Changing Print Color74
Changing Print Cylinders (Drums)74
Interfacing with a Computer76

Computer Interface Guides - Optional for RN20 Series Models 77

Connecting to a Computer78
Using the Standard Printer Cable78
Using the Public Telecommunication Lines79
PC Data Mode Display.....80
Basic Interface Operation82
Selecting Output Pages on Your RISOGRAPH.....84
Clearing Document Data from the Memory85
Rotating Images by 180 Degrees86
Changing Print Job Flow87
Renewing the Current Page.....87
Job Flow List88
Changing the PC Data Mode Configuration.....89

Replenishing and Disposing Supplies 95

Replacing the Ink Cartridge.....96
Replacing the Master Roll.....98
Emptying the Master Disposal Box100

Advisory Messages 101

Alphabetical Reference List102

Troubleshooting Tips 109

Troubleshooting Tips (PC Data Mode) 113

Maintenance

117

Safety Guides - Maintenance	118
Replacing the Lithium Battery	118
Cleaning: Preventing Defective Prints	119
Cleaning the Thermal Print Head.....	119
Cleaning the Stage Glass and Stage Cover.....	119
Cleaning the Pressure Roller	119
Cleaning the RISOGRAPH Exterior.....	120
Cleaning the Optional ADF Scanner Glass.....	120
Cleaning the Optional ADF White Sheet.....	120

Appendices

121

Optional Accessories	122
Specifications - RN2000	123
Specifications - RN2030	124
Specifications - RN2050	125
Specifications - RN2130	126
Specifications - RN2150	127

Index

128

Welcome to the RISOGRAPH RN Series Model

Thank you for purchasing a RISOGRAPH RN series model, which combines the clear reproduction of a printing machine with the convenient functions of a copier, keeping the operation sound as low as possible.

With its large-size LCD display and key entry for most procedures, this equipment has been specially designed for simple operation.

About This User's Guide

This Guide provides all information necessary to use your RISOGRAPH RN series model. It is designed to help you take advantage of the features built into your RISOGRAPH RN series model, and provides information on maintenance and troubleshooting.

[Pictorial Guide]



Operation Instruction

Describes operation procedures with simple numbered steps.

Cross-reference Remark

Indicates other sections of the User's Guide where you can find related descriptions.

Advice Remark

Gives you helpful advice for trouble-free operation under the following heads:

NOTE
Important!

Protecting Confidential Documents

After printing is complete, the master remains on the First Cylinder (drum). Copies of this master can be printed at any time by pressing the START key. To protect confidential documents from unauthorized duplication, press the CONFIDENTIAL key to discard the master after printing.

- 1 Confirm that printing has ended.
- 2 Press the CONFIDENTIAL key.
The CONFIDENTIAL indicator lights and the following message appears in the Main Display.
NOTE To cancel the Confidential feature, press the STOP key or the CONFIDENTIAL key again.
- 3 Press the START key.
The current master is discarded and replaced with a blank one. The CONFIDENTIAL indicator goes out, and the Confidential feature is cancelled.
NOTE The master is discarded into the Master Disposal Bin.
→ p. 150 For ability confidential documents, discard the contents of the Master Disposal Bin.

Panel Highlight

Indicates the key and/or indicator to be used or referred to during operation.

Main Display Frame

Indicates the message to be displayed in relation to an instructed operation.

Basic Operation

- 3 Place an original on the Stage Glass or in the optional ADF Unit.
Glass or in the optional ADF Unit.
- Placing originals on the Stage Glass: open the Stage Cover and place an original face down. Position the original according to the indicators on the left-hand side of the glass. Close the cover, making it parallel on the original.
- Placing originals in the optional ADF Unit: turn open the ADF Original Feeding Tray, adjust the position of the ADF Original Stop to the length of the originals and adjust the ADF Original Guide to the width of the originals. Then insert the originals face down into the ADF Unit and they stop. The originals are automatically fed and set into place.
NOTE A maximum of 50 originals can be set into place on the ADF Tray at one time.
Caution Do not force the cover down on top of a scanned original placed on the Stage Glass.
NOTE When an original is in place, the process automatically changes to master-making even printing. The "Ready to Make Master" message appears in the Main Display when the MASTER-MAKING indicator on the control panel lights.

Safety Remark

Gives you safety instructions under the following icons:





Introduction to Your RISOGRAPH

This section provides the basic information about your RISOGRAPH, including initial installation, an overview of features, and names of parts.



Safety Guides - Installation 8

Overview of Features 9

Knowing the Parts and Components 10

The Control Panel 12

The Main Display 14

Safety Guides

- Installation

This section explains the precautions you have to observe when installing your RISOGRAPH. Read this section before installing your RISOGRAPH.

NOTE Your dealer will help determine a proper location for your unit at the time of delivery.

Installation

⚠ WARNING

- Do not place water containers or metallic objects on the unit. If water drips inside the unit or a metallic object drops inside it, it can result in a fire or an electric shock.

⚠ Caution

- Install the unit near the electrical outlet to avoid using an extension cord between the unit and the electrical outlet.
If an extension cord is unavoidable, do not use one longer than 15 ft. (5 m).
- Place the unit on a flat and stable surface [maximum of 3/8 inches (10 mm) differential allowed]. Injury might occur if the unit falls.
- Do not place heavy objects on the unit. The objects might fall and cause injury.
- Keep the unit away from dusty or humid areas. Otherwise, a fire or an electric shock might occur.
- Unplug the power cord before moving the unit. Otherwise, the power cord might be damaged and a fire or an electric shock might occur.

Important!

- Avoid installing your RISOGRAPH in the locations listed below. Failure to observe this precaution may lead to machine failure or human injury.
 - Extremely bright locations such as locations close to windows or locations that are exposed to direct sunlight (provide a curtain if you have no choice but to install your RISOGRAPH in such a location)
 - Locations that are subject to sudden temperature change
 - Extremely hot and humid locations or cold and dry locations
 - Heated locations
 - Locations exposed to direct cold air, direct hot air, or direct radiant heat
 - Badly ventilated locations
 - Locations where it is impossible to provide a clearance of 4 inches (10 cm) or wider behind your RISOGRAPH

Power Connection

⚠ WARNING

- Do not overload an electrical outlet or extension cord, nor damage the power cord by placing heavy objects on it or pulling or bending it. Otherwise, a fire or an electric shock might occur.
- Do not plug or unplug the power cord if your hands are wet. Otherwise, an electric shock might occur.

⚠ Caution

- Do not pull the power cord but hold the plug itself when unplugging it. Otherwise, it could become damaged and a fire or an electric shock might occur.
- Pull out the power plug from the electrical outlet more than once a year and clean the teeth of the plug and their surroundings. If dust piles on them, a fire might occur.

Important!

- Check the power plug for poor connections. Plug the power cord securely into a nearby electrical outlet.
- Be sure to turn off the POWER switch when connecting or disconnecting a cable.





Overview of Features

Your RISOGRAPH is a high-quality digital printer that is as easy to use as a copier.

- **User-friendly Display Design**

The large-size LCD display provides you with helpful information for the current operation in well-designed screens, enabling you to finish your print jobs with much ease.

- **Print Speed and Density Control**

Any of five print speeds and densities can be selected for optimum performance.

- **Confidential Feature**

An original can be printed and the master can be automatically discarded to prevent further, unauthorized printing.

- **Image and Text Processing Options**

In addition to the standard processes for sharp line definition and accurate shading patterns, 4-pattern dot-screen processes are available. The binding of a bound document can also be erased.

- **Color Printing Options**

Optional ink colors are available, by simply changing the Print Cylinder (Drum).

- **Vertical Print Position Key Control**

The Print position can be shifted vertically only by pressing the adjustment keys on the control panel.

- **Zoom Enlargement and Reduction Capabilities**

Prints can be reduced or enlarged from 50% to 200% in 1% increments, according to your needs. Preset standard reduction and enlargement are also available (e.g., legal→letter or A3→A4).

- **Programmable Print Groupings**

Simple control panel entries can automate different types of groupings to save time finishing your print jobs.

- **Programmable Print Jobs**

Frequently used or complex print job settings can be stored in memory for instant recall.

- **Multi-Up Printing**

Originals can be printed side by side on a single sheet.

You can select their arrangement pattern from 4 choices.

- **Automatic Idle**

This feature ensures an excellent first copy when printing starts again after a period of idle time.

- **Preventive Maintenance Call**



An advice display is given in advance when the periodical maintenance service is required, preventing your RISOGRAPH from remaining out of operation unexpectedly.

- **Direct PC Connection (optional for RN20 series models)**

PC document data can also be printed out by connecting your RISOGRAPH directly to the PC with a printer cable. No additional control box is required.

Knowing the Parts and Components

=With the optional ADF Unit=

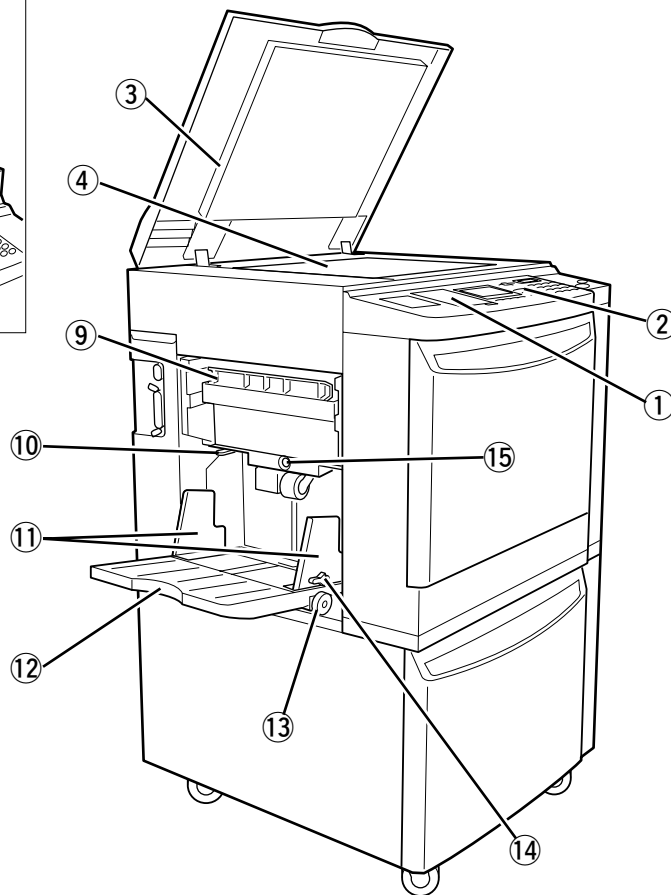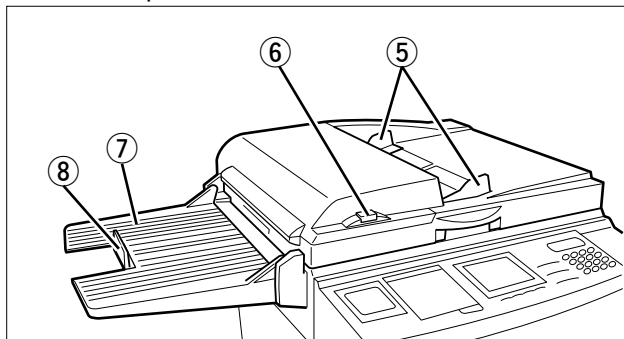

Upper Area


- ① **Sub Control Panel** (☞ p.13)
- ② **Main Control Panel** (☞ p.12)
- ③ **Stage Cover** (☞ p.119)
Secures the original placed on the Stage Glass.
- ④ **Stage Glass** (☞ p.119)

=With the optional ADF Unit=

- ⑤ **ADF Original Guides**
Holds and guides originals in the ADF Unit.
- ⑥ **ADF Original Release Button**
Releases the original fed in the ADF Unit for removal or realignment.
- ⑦ **ADF Original Receiving Tray**
Receives originals after scanning in the ADF Unit.
- ⑧ **ADF Original Stop**
Stops originals ejected into the Original Receiving Tray.

Paper Feed Area

- ⑨ **Master Disposal Box** (☞ p.100)
Holds discarded masters.
- ⑩ **Paper Feed Pressure Adjustment Lever** (☞ p.20)
Adjusts the paper feed pressure according to the paper being used.
- ⑪ **Feed Tray Paper Guides** (☞ p.20)
Holds and guides paper.
- ⑫ **Paper Feed Tray** (☞ p.20)
- ⑬ **Horizontal Print Position Adjustment Dial** (☞ p.39)
Moves the print position to the left or right.
- ⑭ **Feed Tray Paper Guide Lock Lever** (☞ p.20)
Locks the Feed Tray Paper Guide.
- ⑮ **Feed Tray Descent Button** (☞ p.21)
Lowers the Paper Feed Tray for replacing or adding printing paper.

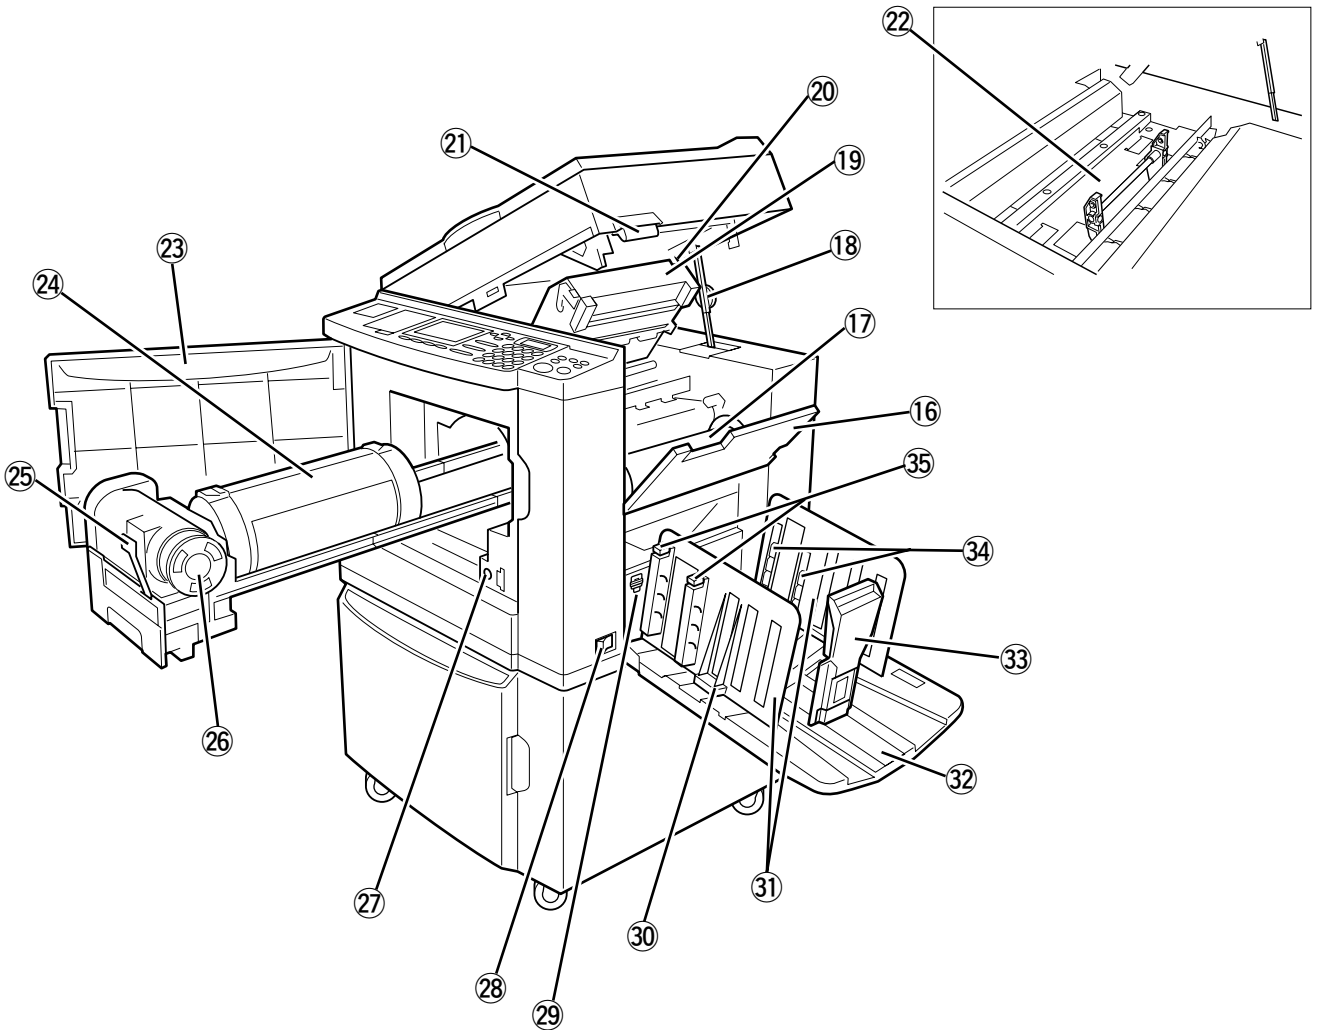

Master-Making Area

- ①⑥ **Master Roll Cover** (☞ p.98)
Protects the Master Roll.
- ①⑦ **Master Roll** (☞ p.98)
- ①⑧ **Scanner Table Support** (☞ p.99)
Holds the Scanner Table when it is opened.
- ①⑨ **Master Making Unit** (☞ p.98)
Makes a master.
- ②① **Master Making Unit Release Lever**
(☞ p.98)
Opens the Master Making Unit.
- ②① **Scanner Table Release Lever** (☞ p.98)
Unlocks and opens the Scanner Table.
- ②② **Disposal Entrance Cover**
Opened to remove jammed used master.

Front Area


- ②③ **Front Cover**
- ②④ **Print Cylinder (Drum)** (☞ p.74)
Holds the master.
- ②⑤ **Ink Cartridge Locking Lever** (☞ p.96)
Secures the Ink Cartridge in position.

- ②⑥ **Ink Cartridge** (☞ p.96)
- ②⑦ **Print Cylinder (Drum) Release Button**
(☞ p.74)
Positions and unlocks the Print Cylinder (Drum) for removal.
- ②⑧ **Main Power Switch** (☞ p.26, 82)

Paper Receiving Area

- ②⑨ **Paper Ejection Wing Adjustment Levers**
Change the position of the Paper Ejection Wings 1 and 2 according to the paper being used.
- ③① **Receiving Tray Paper Guide Adjustment Knob** (☞ p.21)
- ③① **Receiving Tray Paper Guides** (☞ p.21)
Aligns printed paper neatly.
- ③② **Paper Receiving Tray** (☞ p.21)
- ③③ **Paper Stop** (☞ p.22)
Stops printed paper ejected into the Paper Receiving Tray.
- ③④ **Paper Arranger** (☞ p.21)
Helps arrange printed paper ejected into the Paper Receiving Tray.
- ③⑤ **Paper Arranger Adjustment Knob** (☞ p.21)


The Control Panel

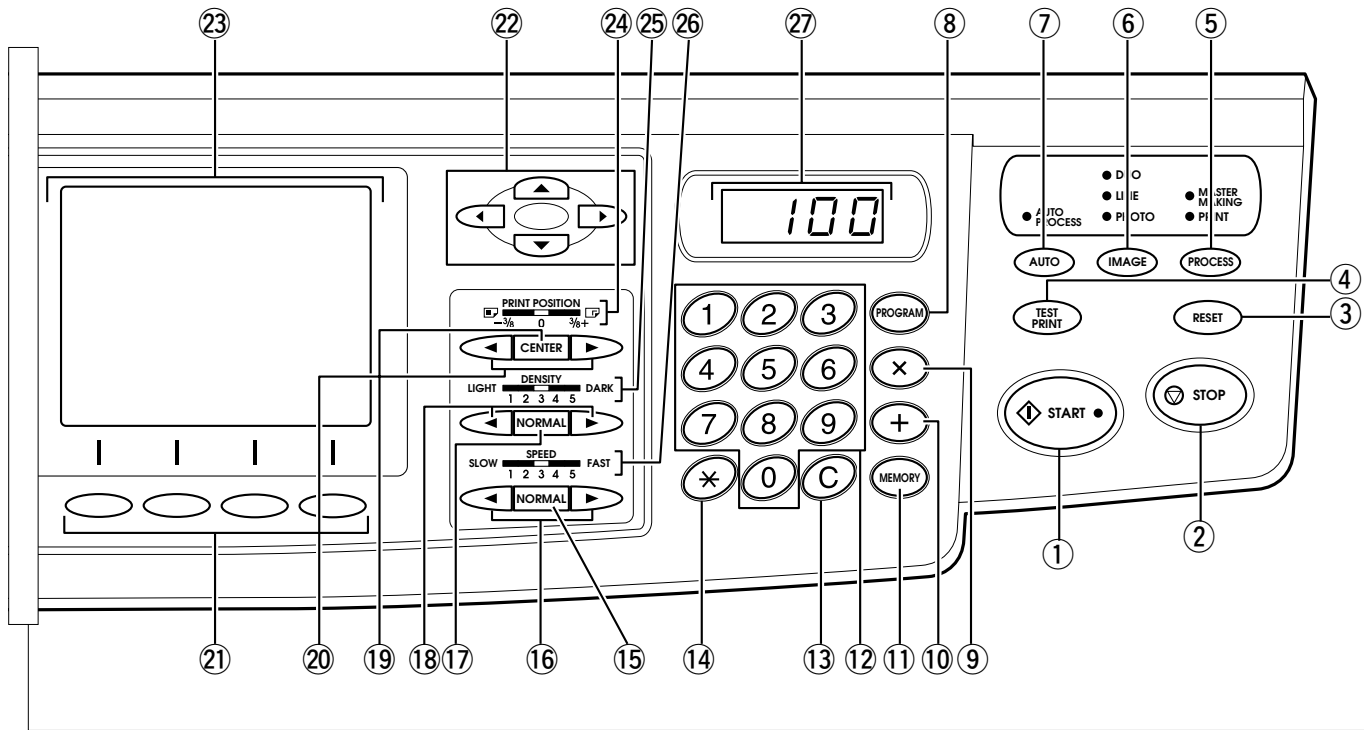

Main Control Panel

- ① **START Key** (☞ p.42)
Starts printing or master-making process. The indicator is "GREEN" when the key is active. This key is also used to resume operation after troubleshooting.
- ② **STOP Key**
Interrupts printing, and cancels confidential feature.
- ③ **RESET Key** (☞ p.42)
Returns all settings to initial status.
- ④ **TEST PRINT Key** (☞ p.31)
Prints a sample from the current master to allow you to check print quality and printing position.
- ⑤ **PROCESS Selection Key**
Switches between master-making and printing processes. Normally, selection is made automatically according to the current process.
- ⑥ **IMAGE PROCESSING Selection Key** (☞ p.30)
Switches the current processing mode among Line, Photo and Duo. The indicators light according to the selected mode.
- ⑦ **AUTO PROCESS Key** (☞ p.32)
Automates the process of master-making through printing. The indicator lights when the feature is active.
- ⑧ **PROGRAM Key** (☞ pp.49-55)
Provides access to programmed grouping of prints.
- ⑨ **× Key** (☞ pp.50-52)
Use when making program settings.
- ⑩ **+ Key** (☞ pp.50-55)
Use when making program settings.
- ⑪ **MEMORY Key** (☞ pp.62-68)
Provides access to the Print job memory mode.
- ⑫ **Print Quantity Keys (0 to 9 Keys)**
Use these keys to enter the number of copies to be printed, or to enter other numeric values.
- ⑬ **C Key** (☞ p.58, 64)
Cancels the number entered and resets the Print Quantity Display to zero. Or deletes a word in naming programmed items.
- ⑭ **✖ Key** (☞ p.50, 53)
Used for making settings for programs.
- ⑮ **NORMAL PRINT SPEED Key** (☞ p.40)
Returns the print speed to the initial setting.
- ⑯ **PRINT SPEED Adjustment Keys (◀▶)** (☞ p.40)
Adjust print speed (on a 1 to 5 scale).
- ⑰ **NORMAL PRINT DENSITY Key** (☞ p.41)
Returns the print density to the initial setting.
- ⑱ **PRINT DENSITY Adjustment Keys (◀▶)** (☞ p.41)
Adjust print density (on a 1 to 5 scale).

The Control Panel

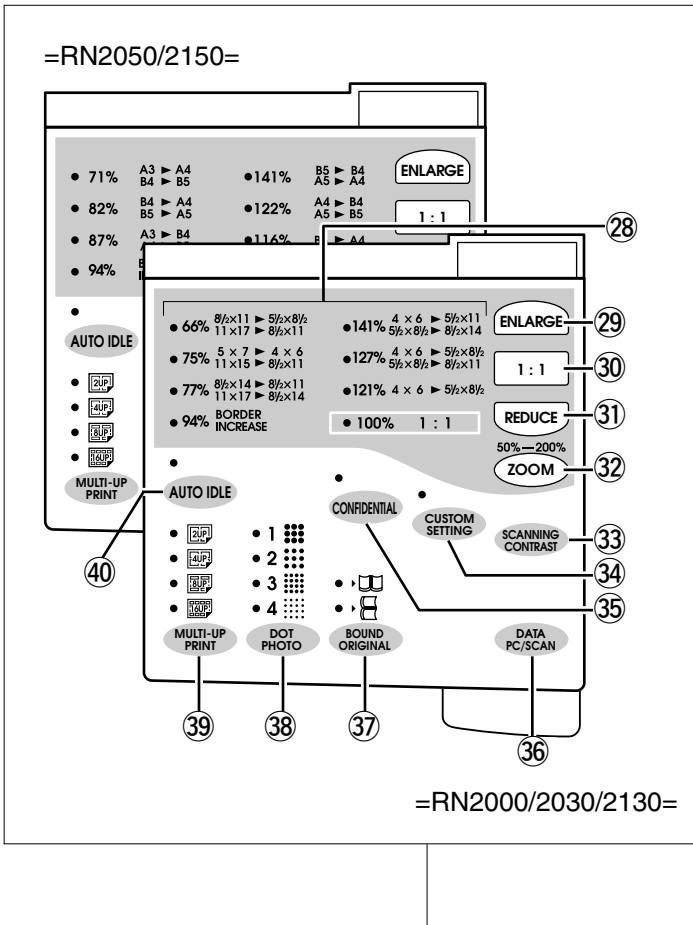

26 PRINT SPEED Indicator (☞ p.40)

Shows the selected print speed.

27 Print Quantity Display

Counts the number of printed copies.

Sub Control Panel

28 Preset Reduction/Enlargement Size Indicator (☞ p.34)

Shows the current preset reduction or enlargement size.

29 ENLARGE Key (☞ p.34)

Selects one of three preset enlargement sizes.

30 1:1 Key (☞ p.34, 35)

Returns the reproduction size to 1:1 (100%). This key is also used to cancel the zoom feature.

31 REDUCE Key (☞ p.34)

Selects any of four preset reduction sizes.

32 ZOOM Key (☞ p.35)

Opens the zoom selection window.

33 SCANNING CONTRAST Adjustment Key (☞ p.36)

Selects contrast adjustments (on a 1 to 5 scale) for the darkness of the original to be scanned.

34 CUSTOM SETTING Key (☞ p.70)

Provides access to the settings whose initial condition can be customized.

35 CONFIDENTIAL Key (☞ p.48)

Protects confidential documents from unauthorized duplication. The indicator lights when the feature is active.

36 DATA Source Selection Key (☞ p.76, 80, 82)

Switches between the PC data mode and Scan data mode.

37 BOUND ORIGINAL Selection Key (☞ p.38)

Erases the binding shadow (gutter) of an open, bound original placed on the Stage Glass. The indicator lights when the feature is active.

38 DOT PHOTO Selection Key (☞ p.37)

Selects among 4 kinds of Dot screens. The Dot Photo feature processes a photo original with dot screen. The corresponding indicator lights when the feature is active.

39 MULTI-UP PRINT Key (☞ p.45, 46)

Reproduces multiple prints (2, 4, 8 or 16) side by side on one sheet of paper. The corresponding indicator lights when the feature is active.

40 AUTO IDLE Key (☞ p.69)

When switched ON, the Print Cylinder (Drum) is automatically rotated on a preset basis to ensure excellent first print quality. The indicator lights when AUTO IDLE is switched ON.

19 VERTICAL PRINT POSITION CENTER Key (☞ p.39)

Moves vertical print position back to center.

20 VERTICAL PRINT POSITION Adjustment Keys (◀▶) (☞ p.39)

Adjust vertical print position.

21 Function Keys

Functions differently depending on the menu in the Main Display.

22 Cursor Keys

Change selection in the Main Display.

Display

23 Main Display (☞ p.14)

Shows the current equipment status or gives instructions for operation.

24 VERTICAL PRINT POSITION Indicator (☞ p.39)

Shows the current vertical print position.


25 PRINT DENSITY Indicator (☞ p.41)

Shows the selected print density.


The Main Display

In the Main display, various windows appears according to the current operation as illustrated below. Among them, the basic window acts as the home of the multi-window guidance display, indicating the current printer configuration and status.


Basic Window

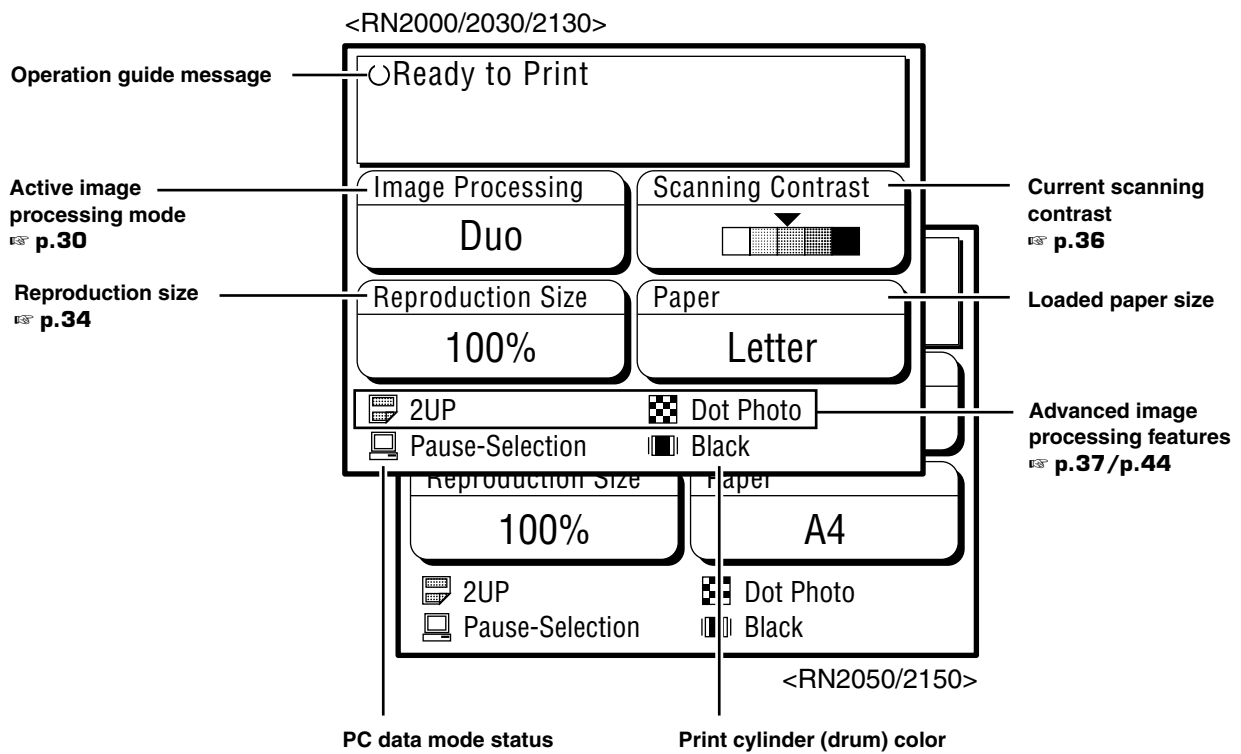

Advice Window

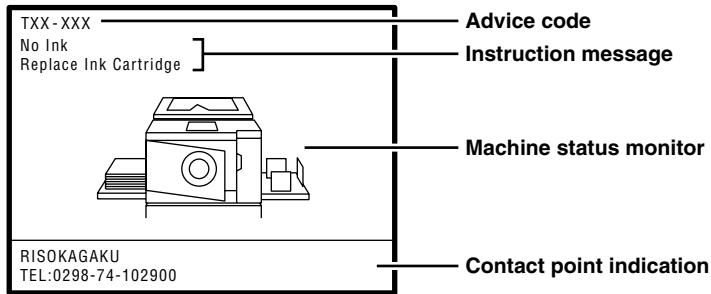


Feature Window

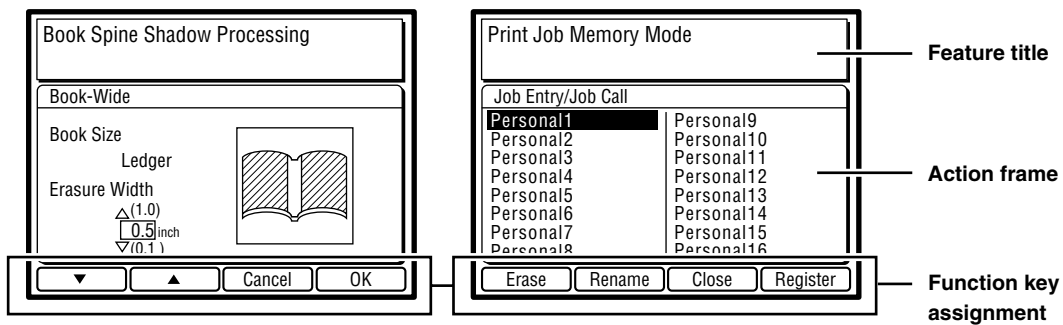

PC Data Mode Window

< Optional for RN20 Series Models >

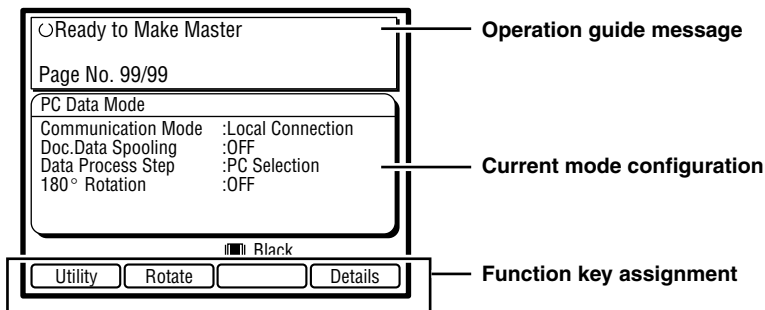



etting Ready to Use Your RISOGRAPH

This section describes how to set your RISOGRAPH for initial use, with basic information on printing paper and originals.



Paper Recommendations **18**

Originals and Processing **19**

Preparing to Print **20**

Paper

Recommendations

Size and Weight Restrictions

Usable printing paper is as follows:

Size: Max. 11½" × 15½" (290 mm × 395 mm) | Weight: Max. 110-lb index (210 g/m²)
Min. 3½" × 5½" (90 mm × 140 mm) | Min. 13-lb bond (46 g/m²)

The maximum printing area is as follows:

= RN2000 =


- Letter Cylinder (Drum) - 8¼" × 11½" (210 × 290 mm)

= RN2030/2130 =

- Legal Cylinder (Drum) - 8¼" × 14" (210 × 357 mm)

= RN2050/2150 =


- B4 Cylinder (Drum) - 9⅞" × 14" (251 × 357 mm)

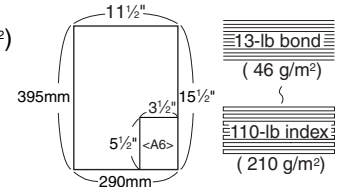

Important!

Do not use the following types of paper, as they can cause jams or misfeeds:


- Extremely thin paper (less than 13-lb bond, or 46 g/m²)
- Extremely thick or heavy paper (greater than 110-lb index, or 210 g/m²)
- Wrinkled, curled, folded, or torn paper
- Chemically treated or coated paper (such as thermal or carbon paper)

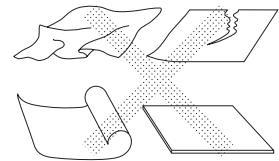

Guides for Trouble-Free Use

To prevent paper jams and misfeeds, follow the directions below:


- When using standard paper, set the Paper Feed Pressure Adjustment Lever and the Paper Ejection Wing 1 Adjustment Lever to "NORMAL", select "Standard" in the Paper feed mode and open all four Paper Arrangers. **pp.20-22**
- When using thick paper (such as card stock), set the Paper Feed Pressure Adjustment Lever and the Paper Ejection Wing 1 Adjustment Lever to "CARD", select "Card Stock" in the Paper feed mode and open the two inner Paper Arrangers. Note that the Paper Ejection Wing 2 Adjustment Lever should be lowered as well. **pp.20-22**
- When using light-weight paper, set the Paper Feed Pressure Adjustment Lever and the Paper Ejection Wing 1 Adjustment Lever to "NORMAL", select "Light-Weight" in the Paper feed mode and open all four Paper Arrangers. **pp.20-22**
- When using slippery paper, set the Paper Feed Pressure Adjustment Lever to "CARD". **p.20**
- Slide the Feed Tray Paper Guides, Receiving Tray Paper Guides, and Paper Stop to fit the paper size. **pp.20-22**
- Use flat printing paper that is free of folds. If curled paper is unavoidable, place the printing paper so that the curl faces down.
- Paper may stick to the Cylinder (Drum) surface if the top margin is too narrow on the original or if the upper portion of the original uses a large amount of ink. To solve this problem, lower the print position to provide a wider top margin or reverse the top and bottom of the original. Then restart printing from the beginning. **p.39**

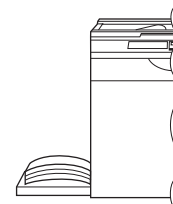

Storing Environment

Store printing paper in a level, dry area. Storing the paper in an excessively humid area could cause paper jams as well as poor print quality.

After unpacking printing paper, keep the remaining paper wrapped and store it in a moisture-proof box. It is highly recommended to put silica gel in the paper storage box.

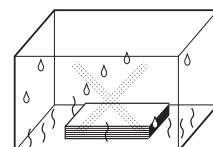

Originals and Processing


Size and Weight Restrictions

Using the Stage Glass


The Stage Glass can be used to print from bound originals or sheet originals. Usable originals are as follows:

Size: Max. 11 $\frac{5}{8}$ " \times 17" (297 mm \times 432 mm) | Weight: Max. 22lbs. (10 kg)
Min. 2" \times 3 $\frac{1}{2}$ " (50 mm \times 90 mm)

The margins indicated on the figure to the right are required for the original. Reduce the original if necessary to fit it inside these margins.

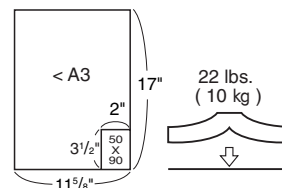

- NOTE**
- If an original is wrinkled, curled, or creased, flatten it thoroughly so that the originals can be pressed directly onto the Stage Glass during processing.
 - If correction fluid or glue is used on an original, thoroughly dry it before you place the original on the Stage Glass.

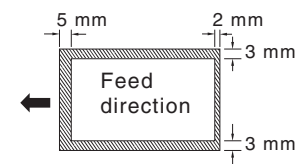


Using the Optional ADF

You can use the optional ADF (Automatic Document Feeder) to feed automatically up to 50 original sheets.

Usable original sheets are as follows:

Size: Max. 11 $\frac{5}{8}$ " \times 17" (297 mm \times 432 mm) | Weight: Max. 28-lb bond (110 g/m²)
Min. 3 $\frac{1}{2}$ " \times 5 $\frac{1}{2}$ " (90 mm \times 140 mm) | Min. 15-lb bond (50 g/m²)

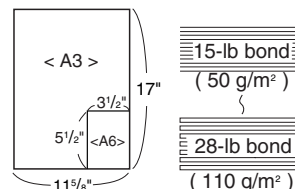

NOTE Use the Stage Glass when printing the following originals:

- Patched or worn originals
- Wrinkled, curled, folded, or torn originals
- Transparent originals (such as tracing paper or OHP transparencies)
- Chemically treated originals (such as thermal or carbon paper)
- Originals with correction fluid or glue
- Extremely thin originals (less than 15-lb bond (50 g/m²))
- Extremely thick originals (greater than 28-lb bond (110 g/m²))
- Heavy drawing paper
- Bound originals
- Originals with staples or clips

Guides for Selecting Processing

You can use various image processing modes to produce printed copies according to the contents of the original.

- IMAGE PROCESSING Selection Key - **p.30**

- LINE For ordinary documents with lines and text.
- PHOTO To reproduce different shades of photo or half-tone images.
- DUO To reproduce photo or half-tone images clearly without deteriorating line sharpness.

- DOT PHOTO Selection Key - **p.37**

To process a photo original using a dot screen.

- BOUND ORIGINAL Selection Key - **p.38**


To print a two-page spread of a bound original on one sheet with the binding shadow erased.

- WIDE Erases the binding shadow horizontally.
- LONG Erases the binding shadow vertically.

Preparing to Print

Setting Up the Paper Feed Tray

1 Open the Paper Feed Tray.

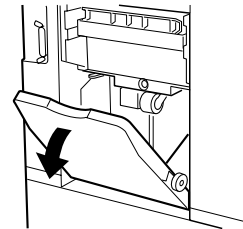


2 Load printing paper and slide the Feed Tray Paper Guides to fit the paper width.

Push down the Feed Tray Paper Guide Lock Levers to lock the guides.

Important!


Do not mix printing paper of different sizes.

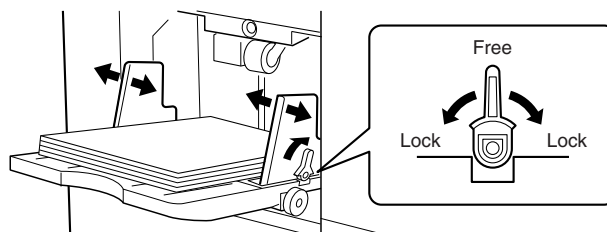

3 Set the paper feed pressure.

Position the Paper Feed Pressure Adjustment Lever at either "NORMAL" or "CARD," according to the paper to be used.

- NORMAL Standard paper
- CARD Thick paper such as card stock

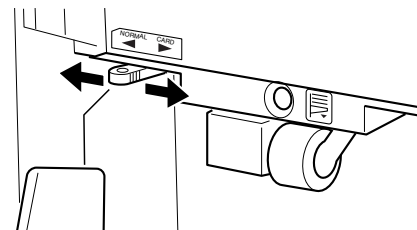



Tips

Selecting the paper feed mode

You can adjust the paper feed range according to paper type as well. It may improve the paper feed conditions with certain types of paper. To adjust the paper feed range, open the Custom Initial setting window in the Main Display and proceed to [Paper Feed Mode]. Then select an appropriate item according to paper type. **p.70, 73**

- Standard Standard paper
- Card Stock Thick paper such as card stock
- Light-weight Light-weight paper
- Custom Paper for which special adjustment is required in feeding


NOTE For detailed information about the "Custom" paper feed mode, consult your service representative.

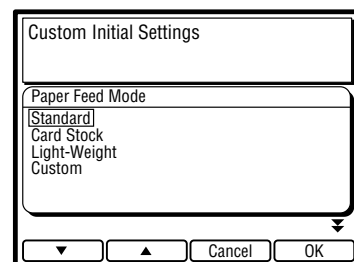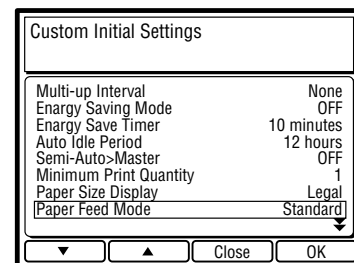

Adding or Replacing Paper

If you want to add paper or use paper of different size, lower the Paper Feed Tray so that you can load the paper easily.

When the Feed Tray Descent Button is pressed lightly, the Paper Feed Tray lowers to the bottom. When you keep on pressing it on the other hand, the tray stops immediately when you release it.

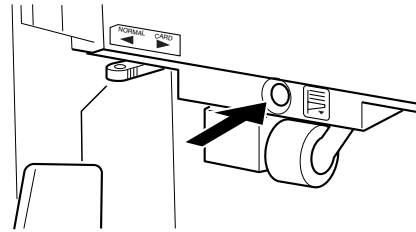


Important!

Do not mix different paper sizes in the Paper Feed Tray.


Setting Up the Paper Receiving Tray

1 Open the Paper Receiving Tray.

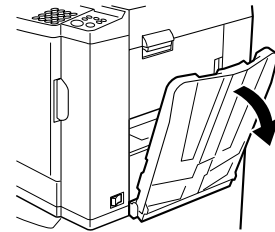

2 Raise and slide the Receiving Tray Paper Guides to fit the paper width.

Holding the Receiving Tray Paper Guide Adjustment Knob, slide the guides.

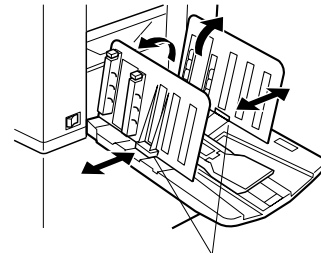


Receiving Tray Paper Guide Adjustment Knob

- NOTE**
- For thick paper, set the guides a little wider than the actual paper width.
 - When you change the horizontal print position, adjust the position of the Receiving Tray Paper Guides as well.


3 Adjust the Paper Arrangers.

Select the best combination of Paper Arranger settings, referring to the following instruction.

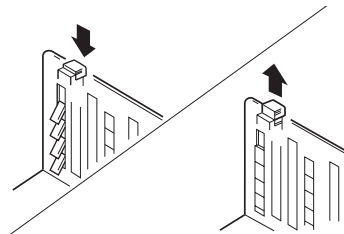

NOTE = How to Set Paper Arrangers =

- Ordinary paper

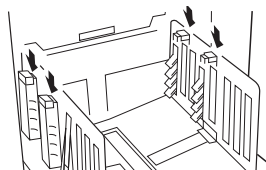


Open all four Paper Arrangers.

- Ordinary paper with images lopsided on page



Open two Paper Arrangers on the more heavily printed side.


- Thick paper

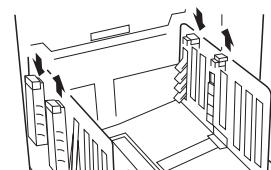

Open two Paper Arrangers closest to the machine.

Preparing to Print


- 4** Raise and slide the Paper Stop to fit paper length.

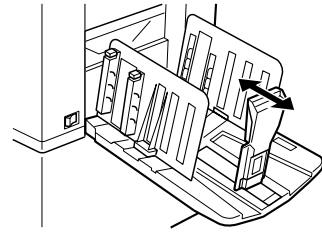

- 5** Set the Paper Ejection Wings 1 and 2.

Position the Paper Ejection Wing Adjustment Levers according to the size and thickness of the paper to be used, as described below.


	Wing 1	Wing 2
Standard (\leq Letter-size/A4)	Up	Up
Standard ($>$ Letter-size/A4)	Up	Down
Thick paper	Down	Down

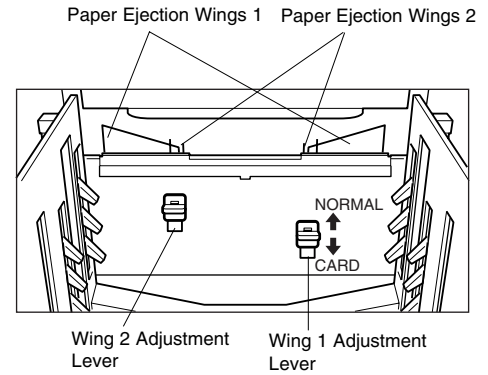

Closing the Paper Receiving Tray


- 1** Slide the Paper Stop inwards and turn it down and outwards.

Do not let the Paper Stop protrude from the Paper Receiving Tray.

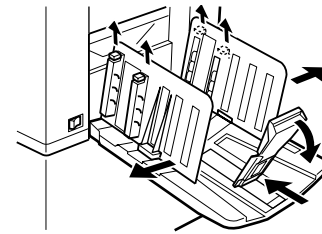


- 2** Close all four Paper Arrangers and spread the Receiving Tray Paper Guides to the B4 position.

- 3** Turn down the Receiving Tray Paper Guides.

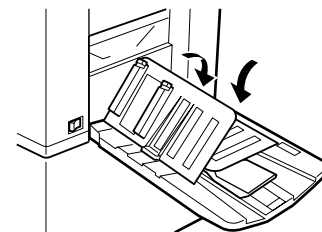

- 4** Close the Paper Receiving Tray.

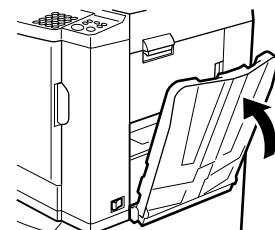

B

asic Features

This section describes the basic operation procedures and the features which are easy to use even for inexperienced operators in order to enhance the utility of your RISOGRAPH.



Safety Guides - Handling and Operation 24

Basic Processes 25

Basic Operation 26

Photo/Half-Tone Processing 30

Producing Proof Copies 31

Automatic Printing 32

Safety Guides

 
- Handling and Operation

This section describes the precautions to be observed when handling your RISOGRAPH. Read this section before operating your RISOGRAPH.

Operation Environment

Important!

- Operate the unit under the following appropriate ambient environment conditions.
 - Temperature range: 59°F to 86°F (15°C to 30°C)
 - Humidity range: 40% to 70% (noncondensing)



Handling Precautions

⚠️ WARNING

- Do not insert or drop any metallic material or flammable substance into this unit through any opening. Otherwise, a fire or an electric shock might occur.
- Do not remove the covers. Otherwise, you might be electrically shocked by the high-voltage parts inside.
- Do not disassemble or rebuild this unit by yourself. Otherwise, a fire or an electric shock might occur.
- If this unit gets uncomfortably hot, smokes or smells bad, immediately turn off the power, unplug the electrical (power) cord and contact your service representative because a fire or an electric shock might occur.
- If something drops inside this unit, turn off the power switch first, then unplug the electrical (power) cord and contact your service representative. If you continue using it, a fire or an electric shock might occur.
- Never stick your hands or fingers in the openings around the Paper Feed Tray and the Paper Receiving Tray during operation.
- Keep loose clothing or long hair away from moving parts to avoid becoming entangled.
- Before cleaning any part of this unit, turn off the power.

⚠️ Caution

- Do not open any covers or move this unit during operation.
- Unplug the electrical (power) cord, if you do not use this unit for a long time.

Important!

- Do not unplug the electrical (power) cord or turn off the power during operation.
- Be sure to open and close any cover gently.
- Do not place heavy objects on or apply shocks to this unit.
- This unit has precision parts and driving parts inside. Do not handle this unit in other ways than described in this guide.
- Contact your local service representative before moving this unit.

⚠️ Caution - Handling of Ink

- If ink gets into your eyes, flush it out immediately with plenty of water.
- If ink comes into contact with your skin, wash it off thoroughly using soap.
- Allow plenty of ventilation during printing.
- If you feel unwell during use, seek medical advice.
- Only use the ink for printing purposes.
- Keep the ink out of the reach of children.

Important! - Materials Not to Be Printed

Remember not to infringe copyrights or violate laws when using the equipment, even during personal use. Consult your local authorities for further details. In general, use discretion and common sense.

Basic Processes


The basic processes of your RISOGRAPH can be divided into two stages: making a master of an original/PC data (master-making), and then printing copies from the master.

Your RISOGRAPH has been designed so that these two processes flow smoothly from one to the other, with the current action shown clearly in the display.


Master-Making

When you create a master, an original is scanned. The master is imaged and then automatically placed on the Print Cylinder (Drum).

1 Set an original in place.

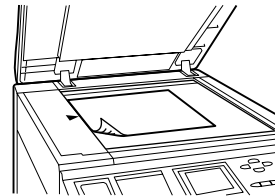


2 Scan the original.

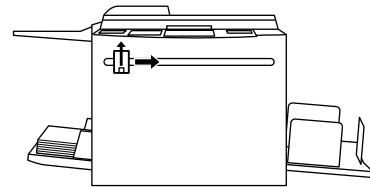

3 Create a master.

The master is placed on the Print Cylinder (Drum) and a proof copy is produced.

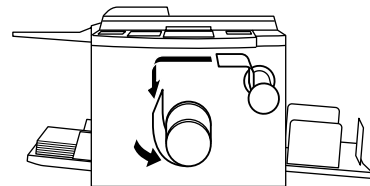


NOTE When document data is sent from a PC to your RISOGRAPH, the first 2 steps (original scanning) are skipped.

Printing

When you print, the Print Cylinder (Drum) rotates to print the specified number of copies.

4 Enter the number of copies you want.


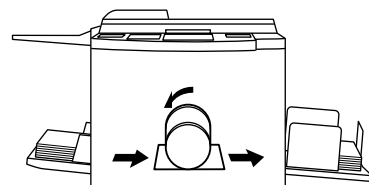


5 Start printing.

Basic Operation


1 Turn the power switch ON.

The power switch is located on the lower right side of the machine.

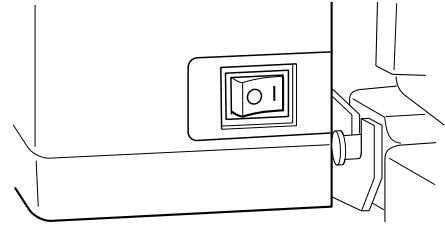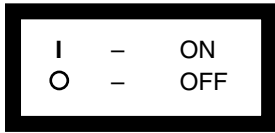

NOTE When your RISOGRAPH is sleeping in the Energy saving mode, the indicator on the START key lights. In this case, press the START key to wake up your RISOGRAPH.

 
☞ p.72



2 Check the settings on the control panel.


When the power is connected, the Main Display and control panel indicators show the initial settings.

Make any necessary changes, such as reproduction size and processing mode.

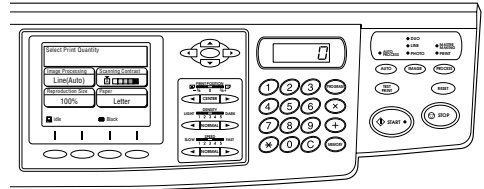



NOTE • When "Processing Data" appears as PC data mode status at the base of the Main Display, it indicates that document data have already been received from the computer and are being processed in the system of the machine. In normal operation, the print job of this document data will start within a few minutes. If it is not required to proceed with your original urgently, wait until this print job finishes.

If the PC data mode status display changes to "Pause-Selection" or "Pause-Master" in this case, however, you can proceed with your original.

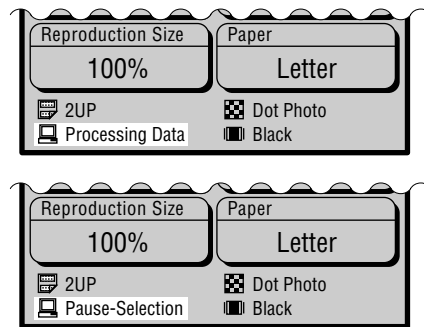

- If the Main Display shows the PC data mode window, press the Data Source Selection key on the Sub control panel to open the window for the stand-alone operation mode (Scan data mode). Before pressing this key in this case, however, make sure no print job is proceeding for any computer document data. You can close the PC data mode window safely when the window displays to the right appear in the Main Display.

DATA
PC/SCAN

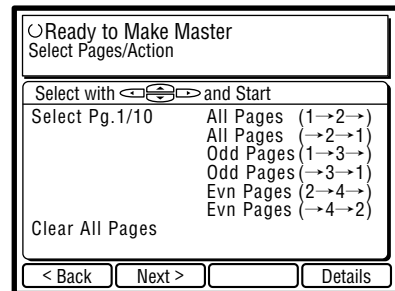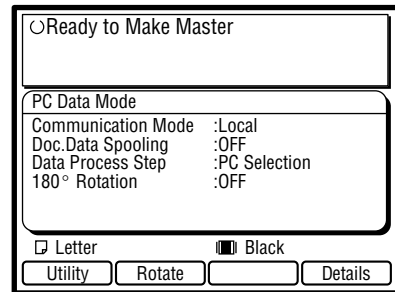

Holding down the RESET key longer than one second returns the control panel to the initial settings.

- ☞ **p.42** ...You can return to initial settings.
- ☞ **p.70**You can customize the initial settings.
- ☞ **p.62**Frequently used combinations of settings can be saved in memory for quick recall.

Basic Operation






3 Place an original on the Stage Glass or in the optional ADF Unit.

- If placing originals on the Stage Glass, open the Stage Cover and place an original face down. Position the original according to the indicators on the left-hand side of the glass. Close the cover, resting it gently on the original.
- If placing originals in the optional ADF Unit, turn open the ADF Original Receiving Tray, adjust the position of the ADF Original Stop to the length of the originals and adjust the ADF Original Guides to the width of the originals. Then insert the originals face down into the ADF Unit until they stop. The originals are automatically fed and set into place.

NOTE A maximum of 50 originals can be set into place on the ADF Tray at one time.

Caution Do not force the cover down on top of a bound original placed on the Stage Glass.

NOTE When an original is in place, the process automatically changes to master-making from printing. The "Ready to Make Master" message appears in the Main Display while the MASTER-MAKING indicator on the control panel lights.

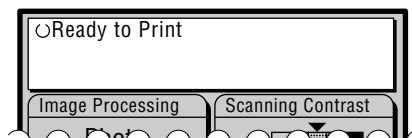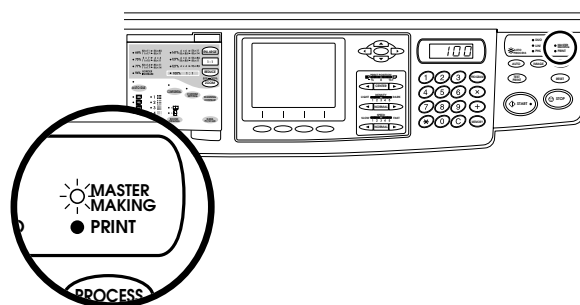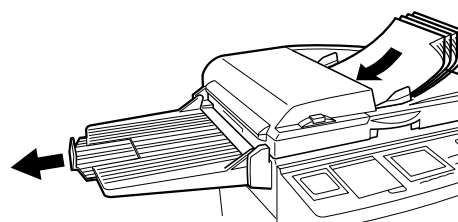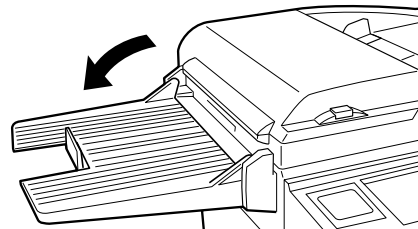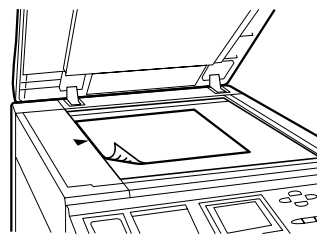



4 Press the START key.

After an original is scanned, a master is created. A sample is automatically printed to allow you to check the print quality, position and density.

☞ **p.39**To change the position of the printed image, press the VERTICAL PRINT POSITION Adjustment keys on the control panel and/or turn the Horizontal Print Position Adjustment Dial.

☞ **p.41**To change the printing density of the printed copies, change the print density setting.



 
If settings are changed, press the TEST PRINT key to check the results with sample prints.

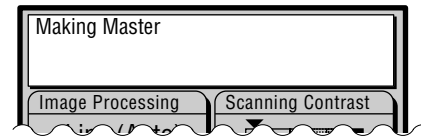

5 Enter the number of copies to be printed.

Specify the number of copies to be printed using the Print Quantity keys; the number is displayed in the Print Quantity Display.



NOTE If you enter a number incorrectly, press the C key to reset the Print Quantity Display to zero, then enter the correct number.

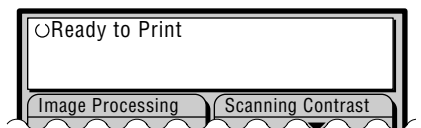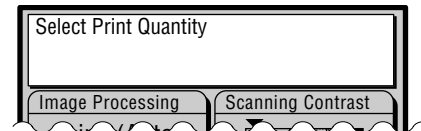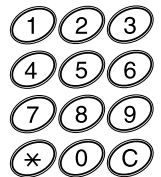

6 Press the START key.

The specified number of copies is printed.

 NOTE If printing stops and the "Add Paper" message appears in the Main Display, paper has run out in the Paper Feed Tray. Load paper into the tray.

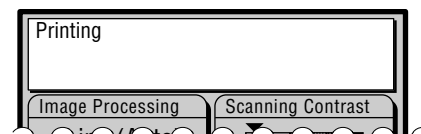

7 Press the RESET Key.

After printing has finished, press the RESET Key to restore the initial settings.



Photo/Half-Tone Processing

If an original contains photographs or half-tone images, or a multi-colored original is used, select PHOTO or DUO processing by pressing the IMAGE PROCESSING Selection key. The current selection appears in the Main Display.

Since the image is processed graphically, degrees of shading are accurately reproduced.

PHOTO

Reproduces different shades of photograph or half-tone images most clearly.

Lines and texts become less sharp if they are included in an original.

DUO

Reproduces photograph or half-tone images clearly without deteriorating the sharpness of lines and texts.

This processing mode is recommended for multi-colored originals or photo originals with sharp lines and texts included.



p.36The scanning contrast setting should be checked and adjusted according to image density, if necessary.

- NOTE**
- If DUO is selected for light-density originals, lines might be broken. In this case, select LINE.
 - If LINE is selected to print an original that contains a darkly shaded photograph, on the other hand, copies might be smudged. In this case, select PHOTO or DUO.

Holding down the RESET key longer than one second returns processing to the initial setting.

p.62The selected processing can be saved in memory for quick recall.

p.70You can customize initial settings.

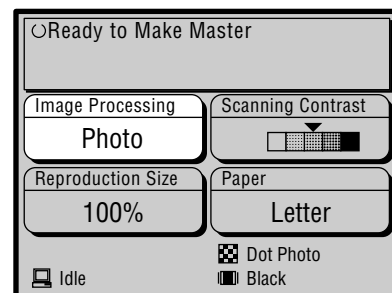
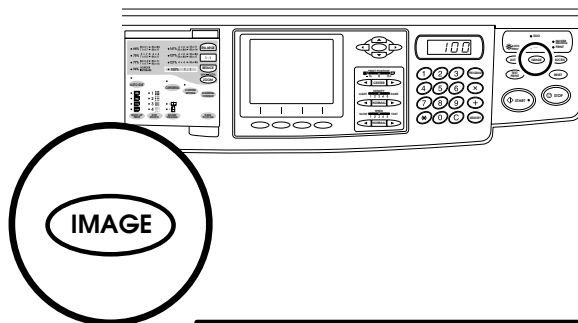


Producing Proof Copies

If changes have been made to the print position and other settings, check the print quality by producing proof copies.

By holding down the TEST PRINT key, you can print continuously.

NOTE Test printing does not affect the quantity in the Print Quantity Display.

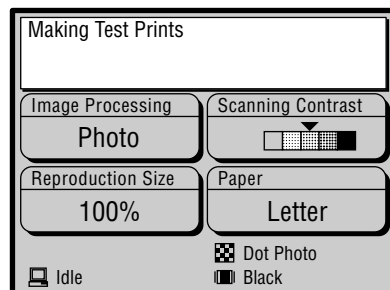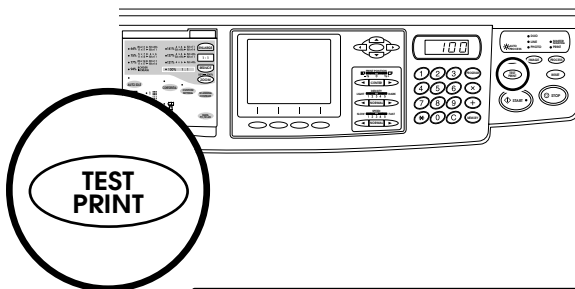


Automatic Printing

If you do not need to check print samples before making prints, press the AUTO PROCESS key before pressing the START key to activate the Auto Process feature. This feature enables nonstop operation from master-making through printing.

NOTE If you need to check or adjust the print position, cancel the Auto Process feature by pressing the AUTO PROCESS key again. Or, activate the [Semi-Auto (Master)] feature in the Custom Initial Setting window.

1 Press the AUTO PROCESS key.

The Auto Process Indicator lights and the "Auto Process" message appears in the Main Display.

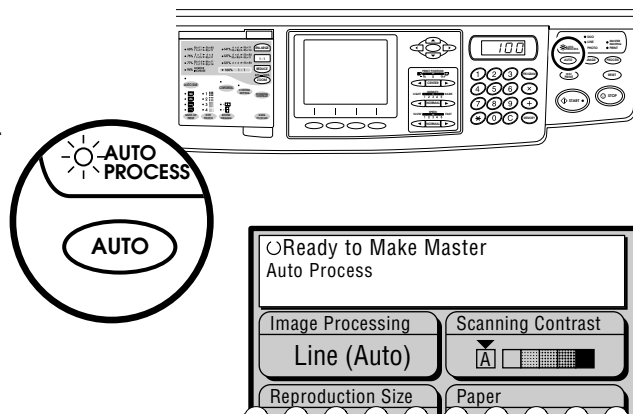


2 Set an original into place.

Open the Stage Cover and place an original face down on the Stage Glass. Close the cover gently on the original.

= With the Optional ADF Unit =

Insert originals face down into the optional ADF Unit until it stops. A maximum of 50 originals can be placed on the optional ADF Tray at one time.

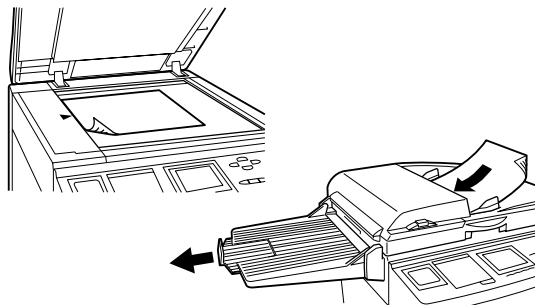

3 Enter the number of copies to be printed.

 
If you enter a number incorrectly, press the C key to reset the Print Quantity Display to "0," then enter the correct number.



NOTE If "0" is selected as the print quantity, the machine will not start.

4 Press the START key.

The specified number of copies are produced with an extra proof copy.



☞ **p.62**The Auto Process feature can be saved in memory for quick recall.

Holding down the RESET key longer than one second returns the Auto Process feature to the initial setting.


☞ **p.70**You can customize initial settings.



Adjustment Features

This section describes the features that enhance your RISOGRAPH's capabilities.

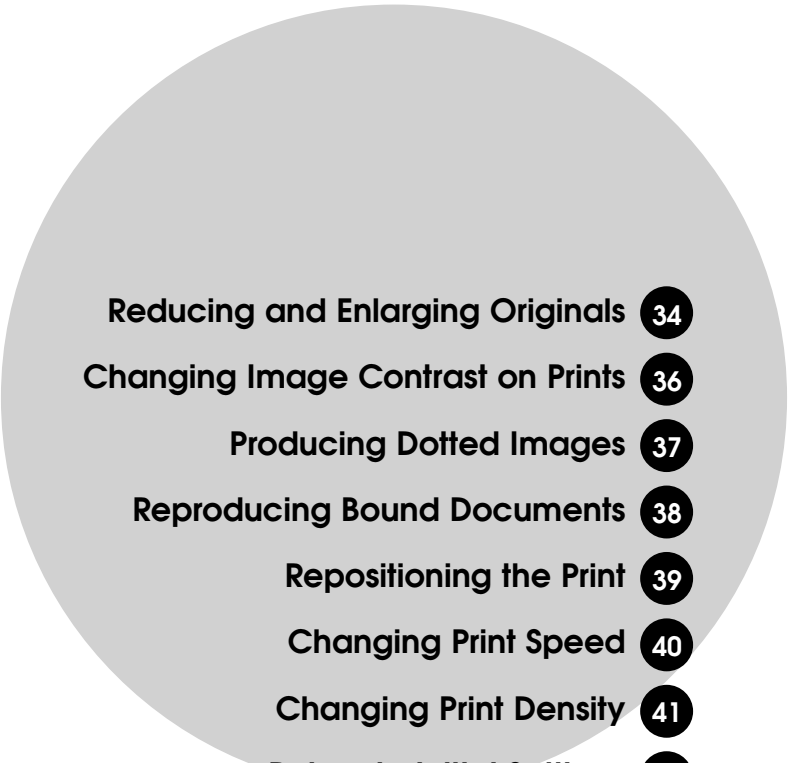


- 
- Reducing and Enlarging Originals **34**
 - Changing Image Contrast on Prints **36**
 - Producing Dotted Images **37**
 - Reproducing Bound Documents **38**
 - Repositioning the Print **39**
 - Changing Print Speed **40**
 - Changing Print Density **41**
 - Return to Initial Settings **42**

Reducing and Enlarging Originals

Originals can be reduced or enlarged, using either preset reduction and enlargement or zoom that you specify.


p.62Reproduction percentage can be adjusted and saved in memory for quick recall.

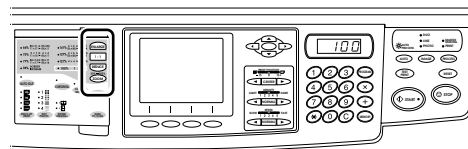

Using Preset Reduction and Enlargement

To reduce or enlarge any standard-size original to another standard size, use the Preset Size method. Seven Preset Reduction and Enlargement percentages are available. The chosen percentage appears in the Main Display, and the Preset Reduction/Enlargement Size indicator in the Sub Control Panel lights up.

<RN2050/2150>

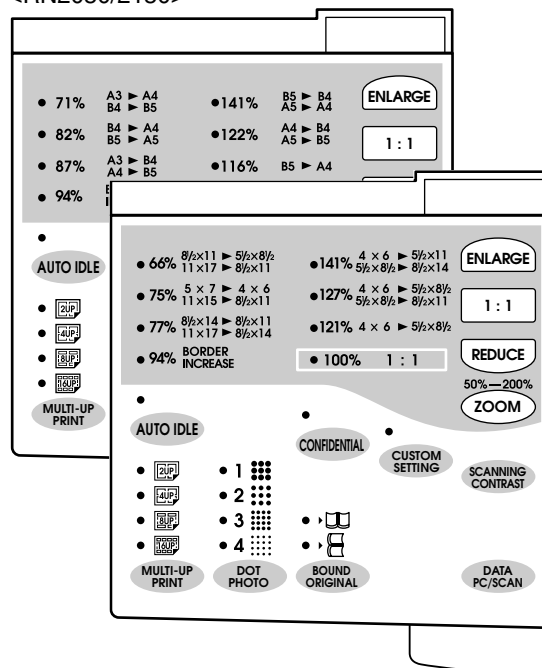

<RN2000/2030/2130>

Press the REDUCE or ENLARGE key to select a desired percentage.

Each time the REDUCE or ENLARGE key is pressed, the indicators light and the percentage appearing in the Main Display changes in the following order:

< RN2000/2030/2130 >


94% → 77% → 75% → 66% → 94%
121% → 127% → 141% → 121%

< RN2050/2150 >


94% → 87% → 82% → 71% → 94%
116% → 122% → 141% → 116%

When you press the 1:1 key, the percentage returns to the original size (100%).

Holding down the RESET key longer than one second returns print size to the initial setting (1:1).

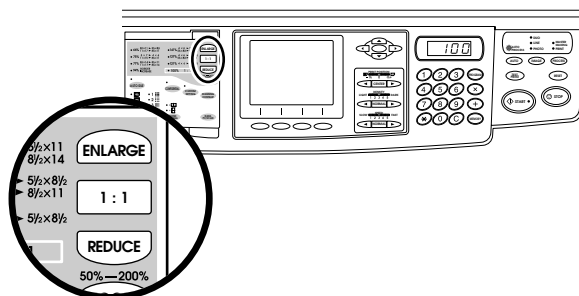

<RN2000/2030/2130>

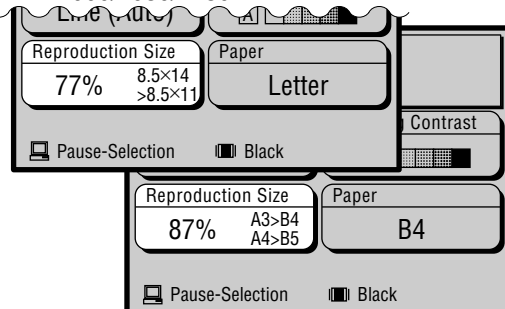

<RN2050/2150>


Using Zoom

You can specify any reduction or enlargement between 50% and 200%.

NOTE When you press the 1:1 key, the Zoom mode is canceled and the percentage returns to the original size (100%).

1 Press the ZOOM Key.

The Zoom selection window appears in the Main Display.

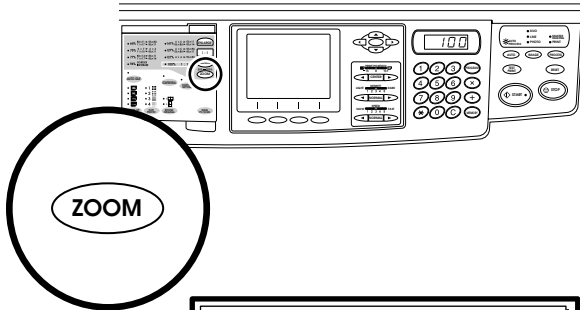


2 Specify a desired reproduction size.

Specify a desired percentage by pressing the or function key.

: The percentage is increased by one each time this button is pressed.

: The percentage is decreased by one each time this button is pressed.


- NOTE**
- You can specify the percentage also by pressing the cursor keys on the Main Control Panel.
 - To cancel the zoom mode, press the function key.

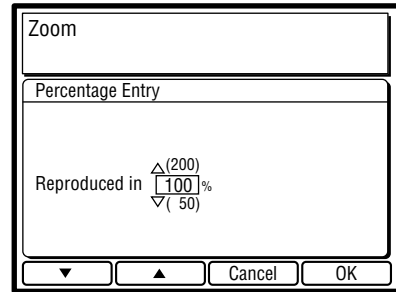

3 Press the function key.

The Zoom selection window is closed and the specified percentage is indicated in the [Reproduction Size] frame.

NOTE To return the percentage to 100%, press the 1:1 key.

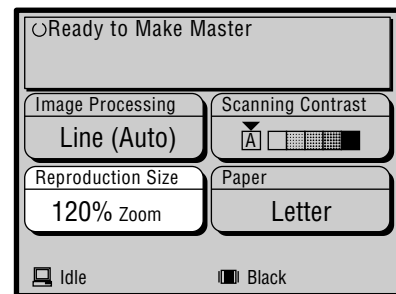


Changing Image Contrast on Prints

To achieve different tones on printed copies from those of an original, adjust the scanning contrast manually by canceling the Auto Scanning Contrast Adjustment mode.

NOTE The Auto Scanning Contrast Adjustment mode is available only for the Line processing mode. However, this mode is not available with the Bound Original feature even when the Line processing mode is selected.

When the Auto Scanning Contrast Adjustment mode is selected, [A] is highlighted in the [Scanning Contrast] frame and [Line (Auto)] appears in the [Image Processing] frame in the Main Display.


In this case, the scanning contrast will be adjusted automatically according to the darkness of the original scanned.

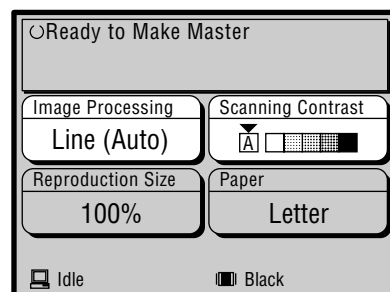

Press the SCANNING CONTRAST Adjustment Key in the Sub control panel.

The [Scanning Contrast] frame indicates the contrast currently selected.

Each time the key is pressed, the contrast changes in the following order:

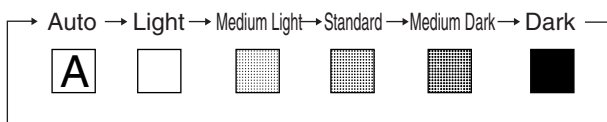

For newspaper or colored originals.



For poor copies or pencil-written originals.

NOTE After adjusting the scanning contrast, make another master to make the adjustment effective for further printed copies.

Holding down the RESET key longer than one second returns the Scanning Contrast Adjustment mode to the initial setting.

☞ **p.62**Scanning contrast can be adjusted and saved in memory for quick recall.

☞ **p.70**You can customize initial settings.

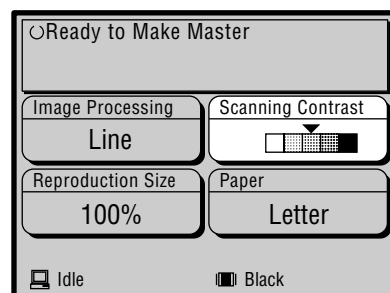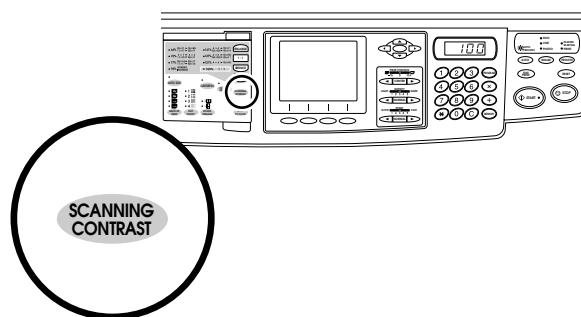

Producing Dotted Images

You can enhance photograph or half-tone images on an original copy by processing images with a dot screen. 4 types of dot screens are available.

Press the DOT PHOTO Selection key in the sub control panel.




When this feature is selected, the corresponding indicator lights and " [dot pattern] (, [dot pattern], [dot pattern] or [dot pattern])Dot Photo" appears in the Main Display.

- 1 [dot pattern] - 30 lpi equivalent Coarse
- 2 [dot pattern] - 40 lpi equivalent ↑
- 3 [dot pattern] - 60 lpi equivalent ↓
- 4 [dot pattern] - 120 lpi equivalent Fine

NOTE This feature is not available in the line processing mode.


Hold down the RESET key longer than one second returns processing to the initial setting.

p.62The selected processing can be saved in memory for quick recall.

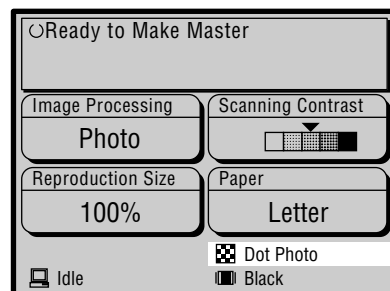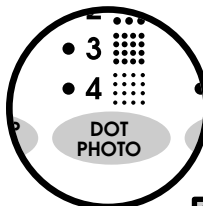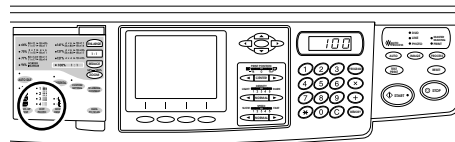

Reproducing Bound Documents (Book Spine Shadow Processing)





The Bound Original feature can be used to process originals that are printed on facing pages of a book, such as an atlas, printed report, or other types of bound originals. When this feature is active, the binding "gutter" shadow can be erased.

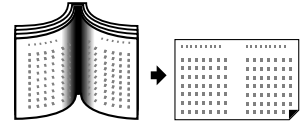

- NOTE**
- The Auto scanning contrast adjustment mode is not available for this feature.
 - When the printing paper size is set to "Custom", this feature is not available.

1 Press the BOUND ORIGINAL Selection key and select either [Book-Wide] or [Book-Long].


Book-Wide : When a book is placed as shown in Fig.1
 Book-Long : When a book is placed as shown in Fig.2

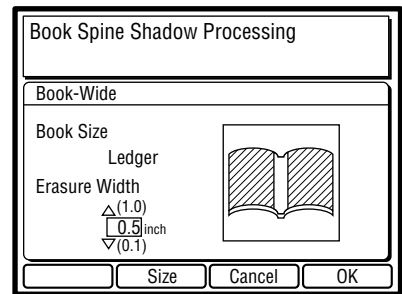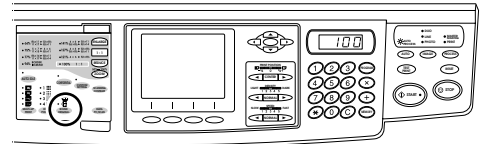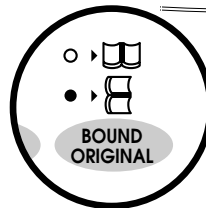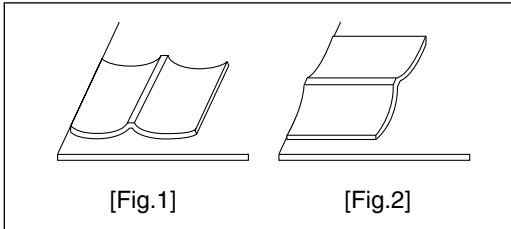

2 Select the book size.

Press the **Size** function key and select the opened book size by pressing the **▼** or **▲** function key.
 Then press the **OK** function key.
 The book size is defined and you go back to the Book Spine Shadow Processing window.


- NOTE** To cancel the book size selection, press the **Cancel** function key.

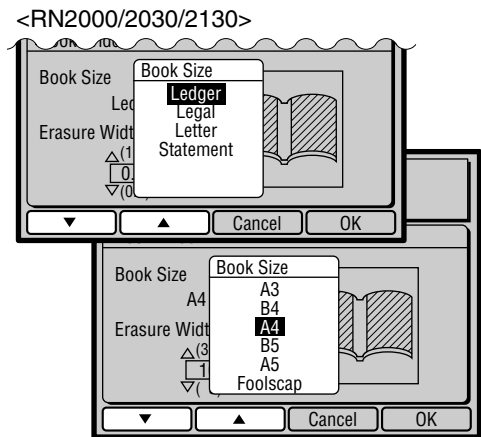

3 Specify the erasure width.

Press the cursor keys on the control panel to specify the width of the spine shadow to be erased.
 Press the **OK** function key to confirm the specified value.
 The settings of the Book spine shadow processing is defined and you go back to the Initial window.

- NOTE** To cancel the erasure width setting, press the **Cancel** function key.

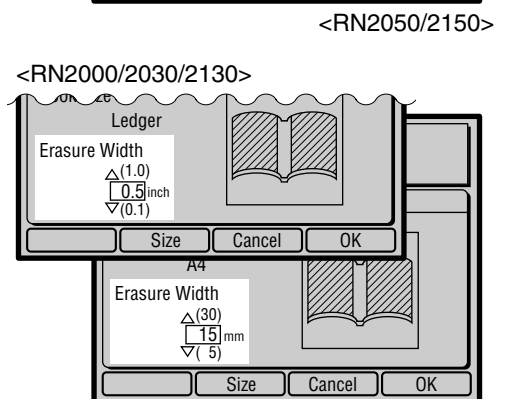

p.62The selected processing can be saved in memory for quick recall.


 

Repositioning the Print

The print position can be adjusted vertically (up and down) and horizontally (to the right and left).


NOTE If you adjust the print position, be sure to produce test prints to verify the new print position.

Adjusting Vertical Print Position


You can move the print position vertically by pressing either of the VERTICAL PRINT POSITION Adjustment keys. The allowable range is $\pm 3/8"$ ($\pm 10\text{mm}$). When the key is pressed, the distance of print position shift appears in the Main Display and the adjusted vertical print position is roughly given by the VERTICAL PRINT POSITION indicator. Produce proof prints and check the print positions.

-  Moves print position down.
-  Returns print position to the center.
-  Moves print position up.

p.62The vertical print position can be adjusted and saved in memory for quick recall.

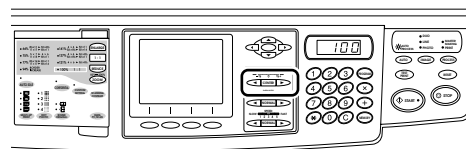


<RN2050/2150>

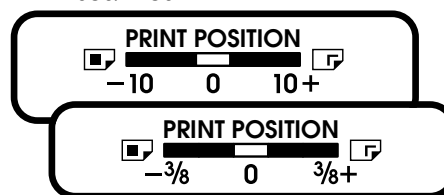

<RN2000/2030/2130>


<RN2050/2150>

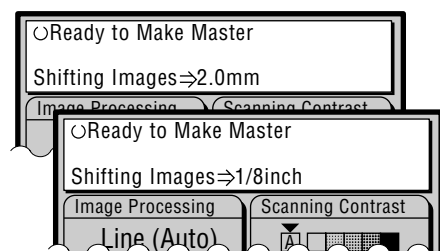

<RN2000/2030/2130>


Adjusting Horizontal Print Position

Lower the Paper Feed Tray by pressing the Feed Tray Descent Button, and adjust the horizontal positions by the Horizontal Print Position Adjustment Dial. The print position moves to the left when you turn the dial upward, and moves to the right when you turn the dial downward.

NOTE The solid triangle  indicates the center position of the tray. If you shift it, it is recommended to return the Paper Feed Tray to the center position after your print job.

Important!

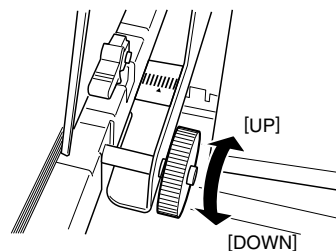


When you adjusted the horizontal positions, be sure to readjust them to the original position after printing is finished.




Changing Print Speed


Print speed can be set at any of five levels, ranging between 60 and 130 sheets per minute .



Press the PRINT SPEED Adjustment keys to change print speed.

-  Decreases print speed.
-  Returns the print speed to the standard level (Level 3).
-  Increases print speed.

 **p.62**Print speed setting can be saved in memory for quick recall.

Holding down the RESET key longer than one second returns print speed to the initial setting.

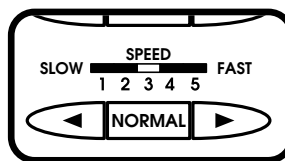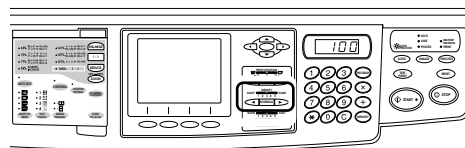


 **p.70**You can customize initial settings.



Changing Print Density

Print density can be set at any of five levels.

Press the PRINT DENSITY Adjustment keys to change print density.

-  Makes print density lighter.
-  Returns the print density to the standard level (Level 3).
-  Makes print density darker.

☞ **p.62**Print density setting can be saved in memory for quick recall.



When the print density setting is changed, press the TEST PRINT key to check the results with proof copies.

NOTE ☞ If the print density levels do not provide the desired result, adjust scanning contrast and create another master.

☞ **p.36**

Holding down the RESET key longer than one second returns print density to the initial setting.


☞ **p.70**You can customize initial settings.

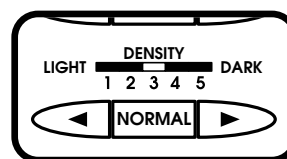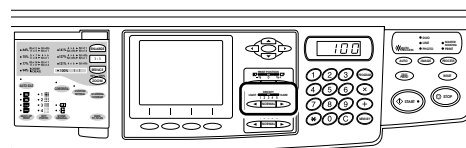

Return to Initial Settings

To return all the settings to initial status, including print position and reproduction percentage, turn the power off and on again, or hold down the **RESET** key for more than one second.

NOTE If you have customized the initial settings, they will be the ones recovered when you perform the procedure above.
 p.70

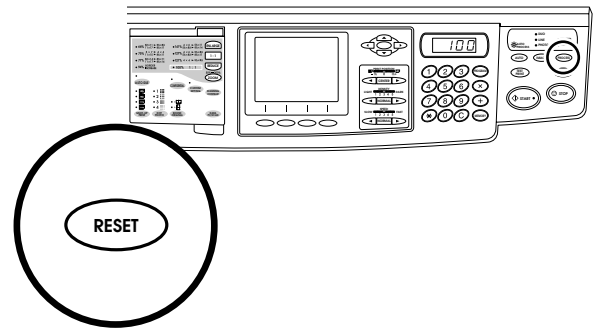

INITIAL SETTINGS (at time of purchase)

• Image Processing Mode Selection	→	<input checked="" type="radio"/> DUO <input type="radio"/> LINE <input checked="" type="radio"/> PHOTO				
• Size Adjustment	→	<input type="radio"/> 100% 1 : 1				
• Print Quantity Display	→	<div style="border: 1px solid black; padding: 5px; display: inline-block;">0</div>				
• Print Speed	→	<p style="text-align: center;">SPEED</p> <p>SLOW 1 2 3 4 5 FAST</p>				
• Print Density	→	<p style="text-align: center;">DENSITY</p> <p>LIGHT 1 2 3 4 5 DARK</p>				
• Print Position	→	<p style="text-align: center;">PRINT POSITION</p> <p> <input type="checkbox"/> -3/8 0 3/8+ <input type="checkbox"/> </p>				
• Master-Making/Print	→	<input checked="" type="radio"/> MASTER MAKING <input type="radio"/> PRINT				
• Main Display	→	<div style="border: 1px solid black; padding: 5px;"> <p>Select Print Quantity</p> <table border="0" style="width: 100%;"> <tr> <td style="width: 50%;">Image Processing Line (Auto)</td> <td style="width: 50%;">Scanning Contrast <input checked="" type="radio"/> [A]</td> </tr> <tr> <td>Reproduction Size 100%</td> <td>Paper Letter</td> </tr> </table> <p>Idle Black</p> </div>	Image Processing Line (Auto)	Scanning Contrast <input checked="" type="radio"/> [A]	Reproduction Size 100%	Paper Letter
Image Processing Line (Auto)	Scanning Contrast <input checked="" type="radio"/> [A]					
Reproduction Size 100%	Paper Letter					
• Original Scanning Contrast	→	<input checked="" type="radio"/> [A]				

Special Features

This section describes special features that may be used for special needs.




- Printing Originals Side by Side 44
- Protecting Confidential Documents 48
- Automatic Sorting into Groups 49
- Storing Settings in Memory 62
- Automatic Idle 69
- Customizing the Initial Settings 70
- Changing Print Color 74
- Interfacing with a Computer 76

Printing Originals Side by Side (Multi-Up Printing)

The same or different originals can be printed side by side and, if required, each original can have different settings: reproduction size (Reduce/Enlarge), scanning contrast and processing (Line/Photo/Duo).

You can select how they are arranged side by side on a single sheet, from the following pattern: 2-by-1 (2UP), 2-by-2 (4UP), 4-by-2 (8UP) and 4-by-4 (16UP).

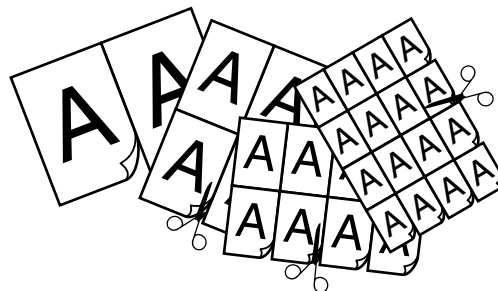


p.62Frequently used combinations of settings can be saved in memory for quick recall.

Productivity can be multiplied several fold by cutting the multi-image prints into pieces and/or folding them in half, to finish your print job.

p.32The Auto Process feature can be used with the Multi-Up printing.

p.62The Multi-Up printing feature can be saved in memory for quick recall.

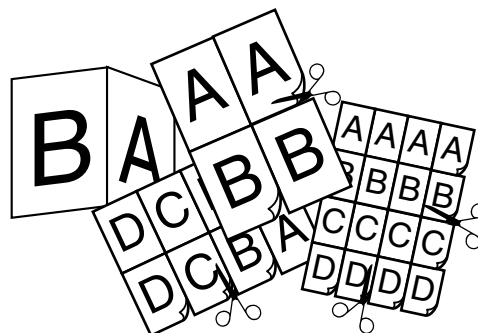

Holding down the RESET key longer than one second cancels this feature.

NOTE When the printing paper size is set to "Custom", this feature is not available.

<Reference Charts for Multi-Up Printing Operation>

Regular size original and printing paper can only be used with the Multi-Up printing feature.

Refer to the charts below for the combinations of the following items in the respective Multi-Up patterns: original size, printing paper size and size adjustment requirement.

NOTE Only one original placement direction is possible for the respective Multi-Up patterns.

<RN2000/2030/2130>

[2UP / 8UP]


Original Placement	←	Original Size		
		2UP		8UP
Direction		Letter	Statement	Statement
Printing	Legal	77%	100%	50%
Paper	Letter	66%	100%	50%
Size	Statement	50%	66%	-

[4UP / 16UP]


Original Placement	←	Original Size		
		4UP		
Direction		Legal	Letter	Statement
Printing	Legal	50%	50%	77%
Paper	Letter	-	50%	66%
Size	Statement	-	-	50%

<RN2050/2150>

[2UP / 8UP]

Original Placement Direction	← 	Original Size						
		2UP				8UP		
		A4	B5	A5	B6	B5	A5	B6
Printing	B4	87%	100%	122%	141%	50%	61%	71%
Paper	A4	71%	82%	100%	116%	-	50%	58%
Size	B5	61%	71%	87%	100%	-	-	50%

[4UP / 16UP]




Original Placement Direction	← 	Original Size						
		4UP					16UP	
		B4	A4	B5	A5	B6	B6	A6
Printing	B4	50%	61%	71%	87%	100%	50%	61%
Paper	A4	-	50%	58%	71%	82%	-	50%
Size	B5	-	-	50%	61%	71%	-	-

Printing the Same Original Multi-Up


- 1 Press the **MULTI-UP PRINT** key to select a desired pattern.

The corresponding indicator lights and the corresponding message appears in the Main Display when a desired pattern is selected.

NOTE To cancel this feature, press the key repeatedly until the indicators are turned off.

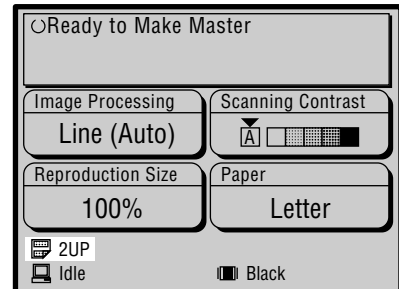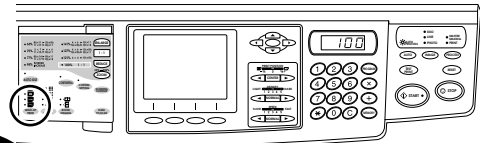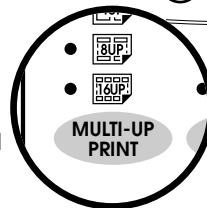


- 2 Place an original face-down on the Stage Glass.

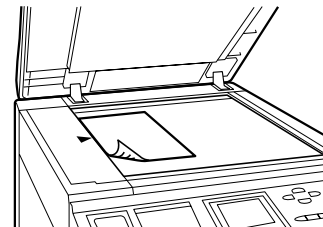

- 3 Press the **START** key.

 The original is scanned twice or four times and a sample Multi-Up print is produced.



NOTE If a 15-second beep sounds and a copy is produced that is half or three quarter blank, change the initial setting of the Multi-Up printing feature to cancel the interval time.

Printing Different Originals Multi-Up

When different originals are used in the Multi-Up printing feature, place them on the Stage Glass individually. The RISOGRAPH scans the first original and then provides a 15-second period (a beep sounds) within which to place the second original.

NOTE If you press the STOP key or do not place the following original during the 15-second period, the sample print will be produced, partly blank.

If the optional ADF Unit is installed on your RISOGRAPH:


You can place all originals there at the same time. In this case, you have only to press the START key after selecting a desired Multi-Up pattern and placing originals, in order to make desired-pattern Multi-Up prints. By activating the Auto Process feature, besides, different Multi-Up prints can be produced without interruption until all originals placed there are processed. For the Auto Process feature, refer to page 32.

NOTE When different settings are required for each original, place originals on the Stage Glass or in the optional ADF Unit individually, as instructed below.

1 Change the initial setting of the Multi-Up printing feature to provide a 15-second interval for placing the following originals.

☞ p.72




NOTE Skip this step when you place an original in the optional ADF Unit.

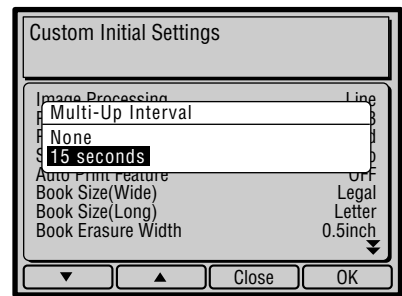


2 Press the MULTI-UP PRINT key to select a desired pattern.

The corresponding indicator lights and the corresponding message appears in the Main Display when a desired pattern is selected.

NOTE To cancel this feature, press the key repeatedly until the indicators are turned off.

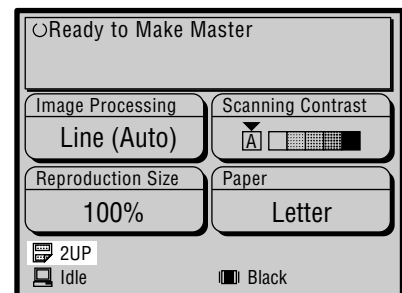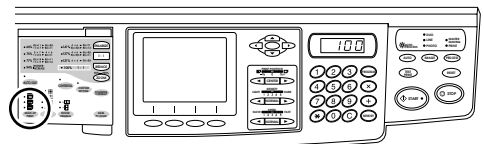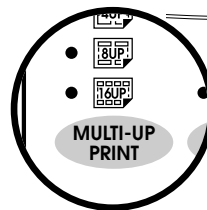


- 3** Place an original face-down on the Stage Glass or in the optional ADF Unit.

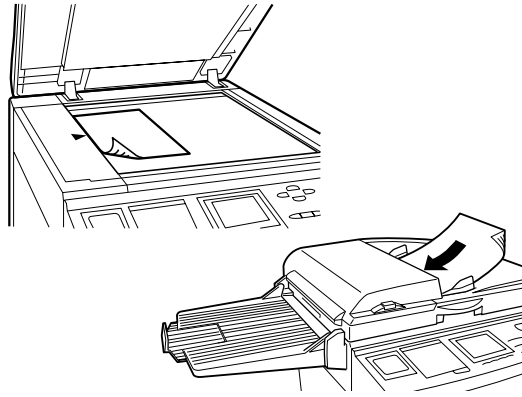

- 4** Press the **START** key.

 After the first original is scanned, a 15-second beep sounds.



- 5** During the 15-second beep, enter the setting for the second original, if necessary, and place the second original on the Stage Glass or in the optional ADF Unit.

- When selecting 2Up or 4Up pattern -

After it is scanned, a sample 2Up or 4Up print is automatically printed.

- When selecting 8Up or 16Up pattern -

After it is scanned, a 15-second beep sounds again to request the third original to be placed. When the third one is placed, it is scanned and another 15-second beep requests the placement of the fourth original.

After the fourth one is placed and scanned, a sample 8Up or 16Up print is automatically printed.

Protecting Confidential Documents


After printing is complete, the master remains on the Print Cylinder (Drum). Copies of this master can be printed at any time by pressing the START key. To protect confidential documents from unauthorized duplication, press the CONFIDENTIAL key to discard the master after printing.

1 Confirm that printing has ended.

2 Press the CONFIDENTIAL key.

The CONFIDENTIAL indicator lights and the following message appears in the Main Display.

NOTE To cancel the Confidential feature, press the STOP key or the CONFIDENTIAL key again.

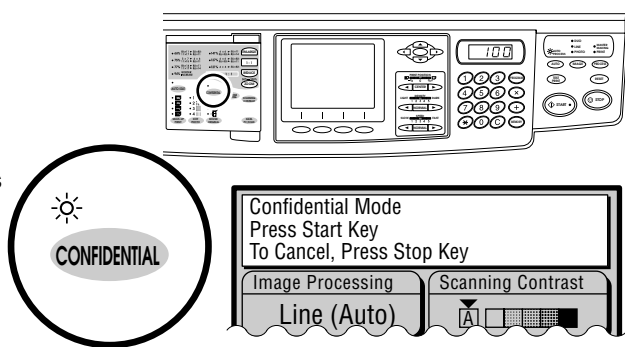


3 Press the START key.

The current master is discarded and replaced with a blank one. The CONFIDENTIAL indicator goes out, and the Confidential feature is canceled.

NOTE The master is discarded into the Master Disposal Box.

p. 100 ...For strictly confidential documents, discard the contents of the Master Disposal Box.

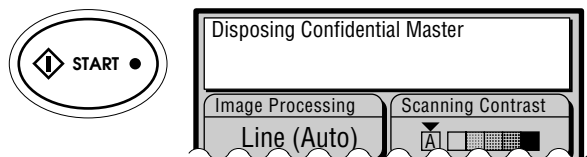

Automatic Sorting into Groups

The Programmed Printing feature can be used to print and sort printed sheets into various groups automatically. One of two programmed printing methods, "Single-original Program" and "Plural-original Program", can be selected using the PROGRAM key. The programmed printing setting can be saved in the dedicated program memory, given a desired program name, allowing you to retrieve it quickly from the program list.


p.62Frequently used combinations of settings can be saved in memory for quick recall.

p.62The Programmed printing setting can be saved in memory for quick recall.

- NOTE**
- Up to 20 groups can be set up, with a maximum of 9999 copies in each group.
 - The Job Separator (option) is useful for the Programmed printing.


Single-original Program

One original is printed in different quantities.

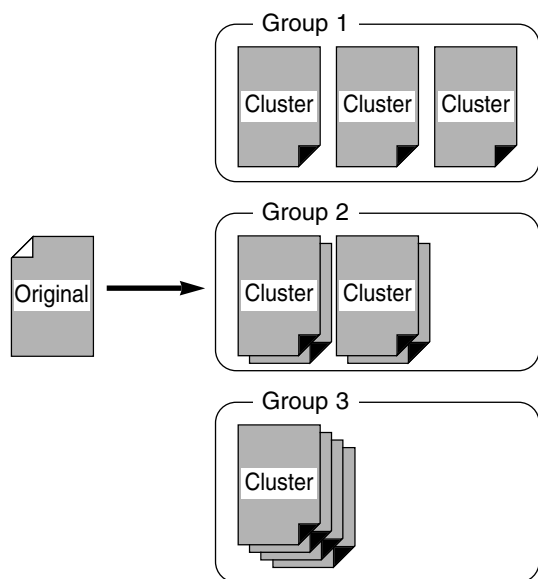

Plural-original Program

Different originals are printed in different quantities.

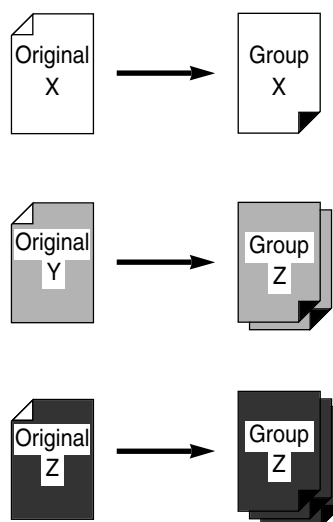





If more than one original (up to 50 sheets) is placed in the optional ADF Unit with the Auto Process feature activated, the Single-original Program set-up runs completely for each original, until all the originals are printed and sorted into groups as specified in the program.

Setting Up Single-original Program

1 Press the PROGRAM key.


 
The Single-original program entry window appears in the Main Display.

NOTE To close this window, press the  function key.

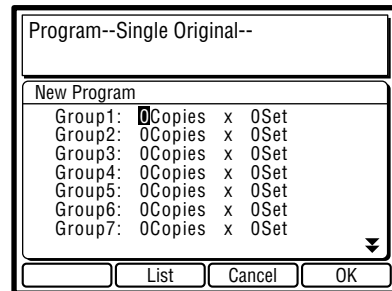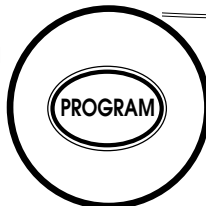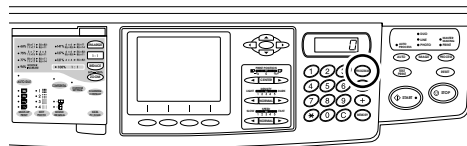



2 Input the number of copies to be printed for each cluster of the first group using the Print Quantity keys.

NOTE If you enter a number incorrectly, press the "C" key to reset the number to zero and then enter the correct number.

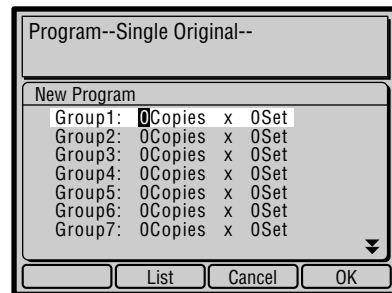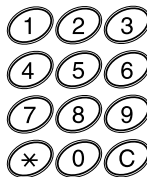

3 Press the "X" key and input the number of clusters of the first group.


 
NOTE You can also use the "*" key in place of the "X" key.

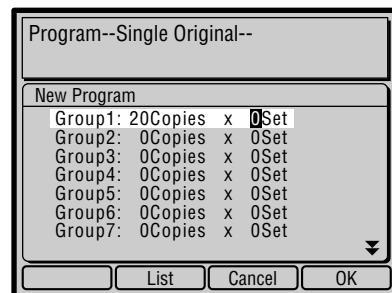

4 Press the "+" key to set the print quantity for the second group.

The cursor  moves to the next group.

 NOTE You can also use the "*" key in place of the "+" key.

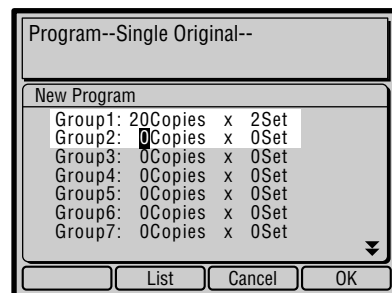



5 Use the Print Quantity keys, "X" key and "+" key and input print quantities and cluster numbers for any remaining groups.

Up to 20 groups can be specified.

If you want to correct the number of clusters and/or copies already specified, move the cursor **■** to a desired position using the cursor keys and enter a correct number. Press the "C" key to reset the number to zero.



NOTE To cancel the current program setting, press the function key. (This window is closed and the basic window appears again.)

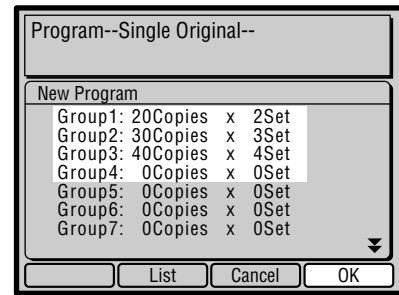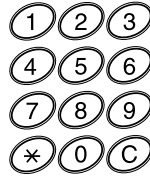

6 Press the function key.



The current program setting is confirmed and made available for the original you selected. The Single-original program entry window is closed and the basic window appears again in the Main Display, showing the program for the group specified last.

NOTE You can save the current program setting in memory for repeated use.
p.56

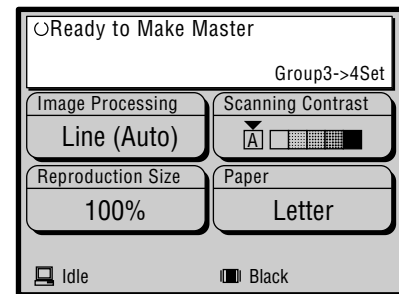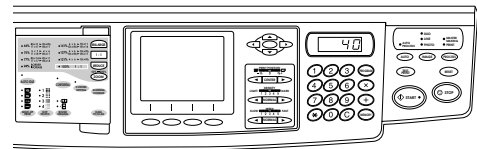

7 Place an original face-down on the Stage Glass.

NOTE If the optional ADF Unit is installed, more than one original can be placed there.

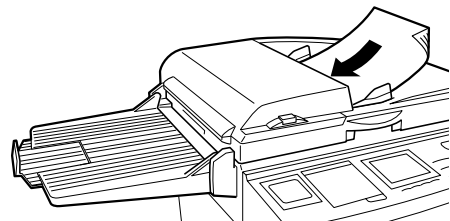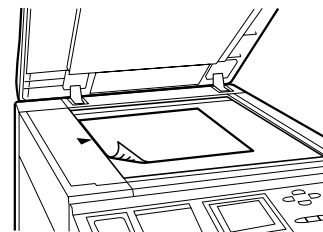

Automatic Sorting into Groups

8

Specify other print job settings for the selected original.

You can specify all the features available in normal operation, such as enlargement/reduction and Multi-Up printing.

NOTE If you activate the Auto Process feature with multiple originals in the optional ADF Unit, the current program setting is applied for all originals there.

9

Press the START Key.

 
A sample print is produced.

If the Auto Process feature is not activated, press the START key again.

Copies are produced and sorted according to the specified program, starting with the last group specified.

To interrupt the programmed printing, press the STOP key.

NOTE The current program setting remains available for other originals even after the programmed printing operation finishes for the selected one.
To clear it, therefore, press the RESET key.





Setting Up Plural-original Program

1 Press the PROGRAM key twice.

The Plural-original program entry window appears in the Main Display.


NOTE To close this window, press the **Cancel** function key.

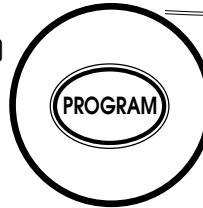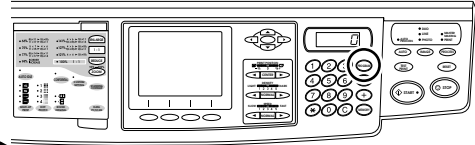

Program--Plural Original--	
New Program	
Original 1:	0Copies
Original 2:	0Copies
Original 3:	0Copies
Original 4:	0Copies
Original 5:	0Copies
Original 6:	0Copies
Original 7:	0Copies
▼	
List Cancel OK	

2 Input the number of copies to be printed for the first original using the Print Quantity keys.

NOTE If you enter a number incorrectly, press the "C" key to reset the number to zero and then enter the correct number.

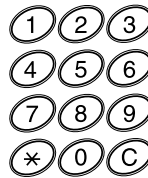

Program--Plural Original--	
New Program	
Original 1:	0Copies
Original 2:	0Copies
Original 3:	0Copies
Original 4:	0Copies
Original 5:	0Copies
Original 6:	0Copies
Original 7:	0Copies
▼	
List Cancel OK	

3 Press the "+" Key and set the print quantity for the second original.

NOTE You can also use the "*" key in place of the "+" key.

Program--Plural Original--	
New Program	
Original 1:	10Copies
Original 2:	0Copies
Original 3:	0Copies
Original 4:	0Copies
Original 5:	0Copies
Original 6:	0Copies
Original 7:	0Copies
▼	
List Cancel OK	

4 Input the print quantity for the remaining originals using the Print Quantity keys and the "+" key.

Up to 20 originals can be specified.

If you want to correct the number of copies already specified, move the cursor **■** to a desired position using the cursor keys and enter a correct number.

Press the "C" key to reset the number to zero.

NOTE To cancel the current program setting, press the **Cancel** function key. (This window is closed and the basic window appears again.)

Program--Plural Original--	
New Program	
Original 1:	10Copies
Original 2:	20Copies
Original 3:	0Copies
Original 4:	0Copies
Original 5:	0Copies
Original 6:	0Copies
Original 7:	0Copies
▼	
List Cancel OK	



Automatic Sorting into Groups

5 Press the **OK** function key.

The current program setting is confirmed and made available for the originals you selected. The Plural-original program entry window is closed and the basic window appears again in the Main Display, showing the program for the original specified last.



NOTE You can save the current program setting in memory for repeated use.

➤ p.56

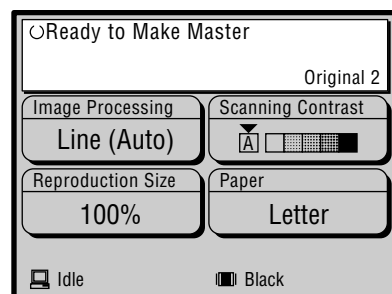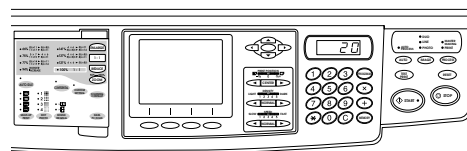

6 Place an original face-down on the Stage Glass.

NOTE If the optional ADF Unit is installed, up to 20 programmed originals can be placed there at one time.

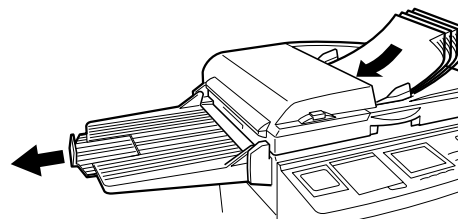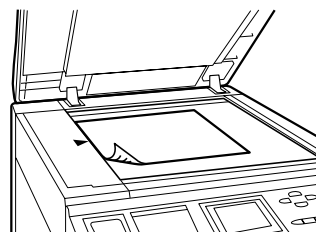


7 Specify other print job settings for the selected originals.

You can specify all the features available in normal operation, such as enlargement/reduction and Multi-Up printing.

8 Press the **START** Key.

 A sample print is produced. If the Auto Process feature is not activated, press the START key again. Copies are produced according to the specified program, starting with the last original specified. When printing is completed for the current original, place the next original on the Stage Glass and press the START key again. To interrupt the programmed printing, press the STOP key.



- NOTE** ▶
- When printing is completed for all originals, the current program setting is automatically cleared.
 - If the optional ADF Unit is used, it is not required to change originals during operation.
In this case, it is recommended to activate the Semi-Auto Process feature to save one key operation.
▶ See below.

Semi-Auto Process Feature

With this feature activated, the master-making process automatically starts for the following original placed in the optional ADF Unit after the current printing process, even if the Auto Process feature is not selected.

As a result, you can still check a sample print, saving one key operation.


To activate this feature, open the Custom Initial setting list window and proceed to [Semi-Auto>Master].

▶ **p.73**

Saving the Current Program Setting


You can save the current program setting in memory and apply it to another print job whenever desired only by calling it up from the memory.

1 Set up a program.

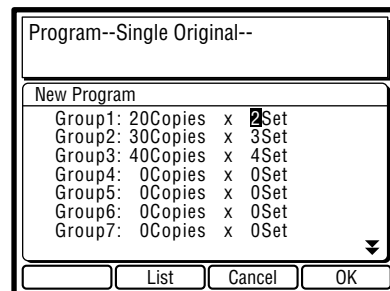

2 Press the **List** function key.

The Entry list box appears.


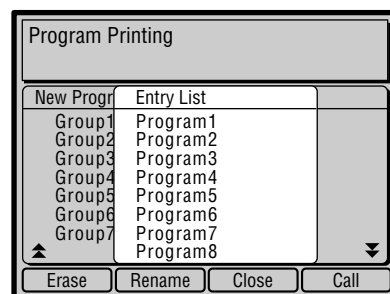


3 Select a program name.

Highlight a desired program name by pressing the cursor keys. Free program names appear dimmed.

When they are not dimmed, they are already occupied and not available for new entry.

 NOTE If no dim program name exists in the list or a desired one is not dimmed, erase the program setting saved under the selected program name first.

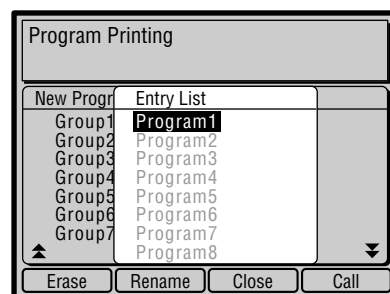


4 Press the **Register** function key.

The current program setting is saved under the selected program name, whose appearance changes accordingly.

NOTE

- You can give a desired name to the saved program setting in this step.
- To cancel this operation, press the **Close** function key in place of the **Register** function key.

p.58Renaming a Saved Program Setting

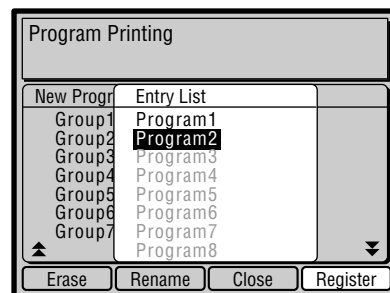

Automatic Sorting into Groups

5 Press the function key.

The Entry list box is closed.

Program--Single Original--		
New Program		
Group1:	20Copies x 2Set	
Group2:	30Copies x 3Set	
Group3:	40Copies x 4Set	
Group4:	0Copies x 0Set	
Group5:	0Copies x 0Set	
Group6:	0Copies x 0Set	
Group7:	0Copies x 0Set	
▼		
<input type="button" value="List"/>	<input type="button" value="Cancel"/>	<input type="button" value="OK"/>


 
Renaming a Saved Program Setting

You can give a desired name to the program settings saved in the memory to make it easier to find a desired program setting in the list when calling it up from the memory.

1 Open the Entry list box.



Press the **List** function key in the program entry window.

NOTE To open the program entry window, press the PROGRAM key.

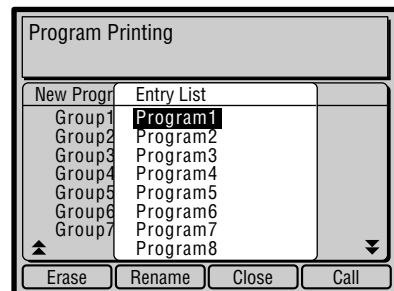


2 Select the program name to be changed, using the cursor keys.

 Highlight a desired program name.

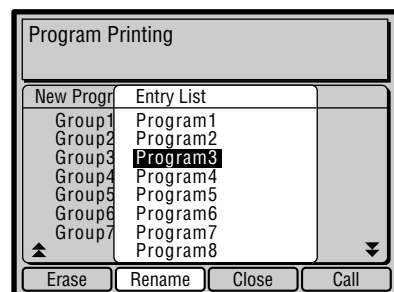

3 Press the **Rename** function key.


The Name entry window appears.

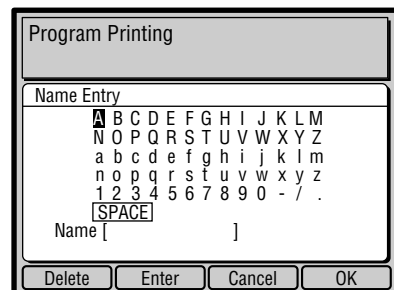

4 Enter a new program name for the selected program setting.

Select the characters you want to use with the cursor keys and enter them one by one by pressing the **Enter** function key.

 - NOTE**
- To enter a space, select **SPACE** in the window with the cursor keys and press the **Enter** function key.
 - To cancel this operation, press the **Cancel** function key. The Name entry window is then closed.



Program Printing

Name Entry

A	B	C	D	E	F	G	H	I	J	K	L	M
N	0	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m
n	o	p	q	r	s	t	u	v	w	x	y	z
1	2	3	4	5	6	7	8	9	0	-	/	.

SPACE
Name [RISO]

Delete Enter Cancel OK

5 Press the **OK** function key.

The new program name is confirmed and the Name entry window is closed.

The program name of the selected program setting now changes to the new one in the Entry list.

Program Printing

New Progr	Entry List
Group1	Program1
Group2	Program2
Group3	RISO
Group4	Program4
Group5	Program5
Group6	Program6
Group7	Program7
Group7	Program8

Erase Rename Close Call

6 Close the Entry list box.

Press the **Close** function key.


Calling Up a Saved Program Setting

You can apply a desired program setting saved in the memory to any print job whenever desired only by calling it up from the memory.

1 Open the Entry list box.

Press the function key in the desired program entry window.

NOTE To open the program entry window, press the PROGRAM key.


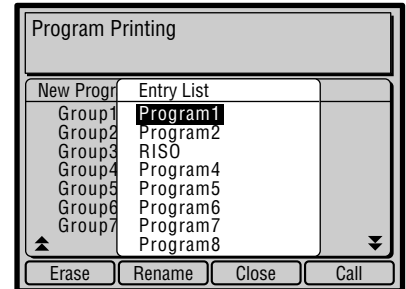


2 Select a desired program setting.

Highlight the program name of a desired program setting in the list with the cursor keys.

NOTE

 
- When the program name is dimmed, no program setting is saved under it.
- To cancel this operation, press the function key. The Entry list box is then closed.

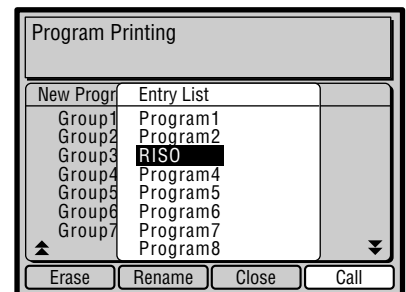

3 Press the function key.

The Entry list box is closed and the selected program setting appears in the program entry window.

NOTE To start printing with the selected program setting, press the function key in this window.

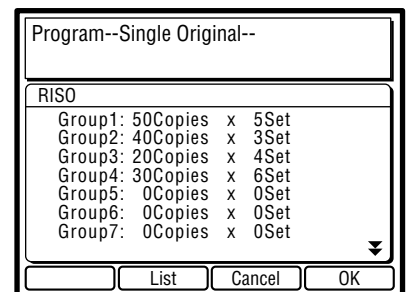



p.51

Erasing a Saved Program Setting

1 Open the Entry list box.

Press the **List** function key in the desired program entry window.

 NOTE To open the program entry window, press the PROGRAM key.

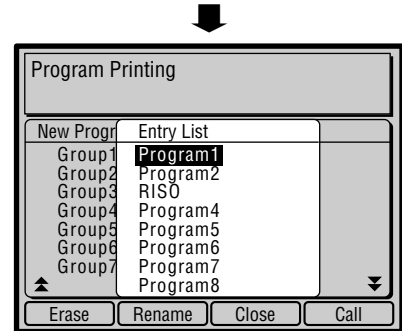



2 Select the program setting to be erased.

Highlight the program name of the corresponding program setting in the list with the cursor keys.


NOTE

 - When the program name is dimmed, no program setting is saved under it.
- To cancel this operation, press the **Close** function key. The Entry list box is then closed.

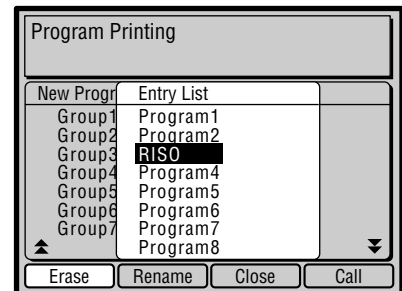

3 Press the **Erase** function key.

The confirmation message box appears.

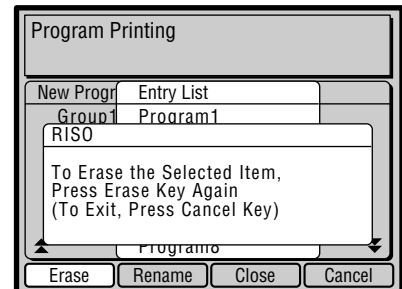


4 Press the **Erase** function key again.

The selected program setting is erased from the memory and the selected program name will be dimmed.

If the name was changed from the initial one, it will be returned to the initial one after the corresponding program setting is erased from the memory.

NOTE To cancel this operation, press the **Cancel** function key in place of the **Erase** function key.

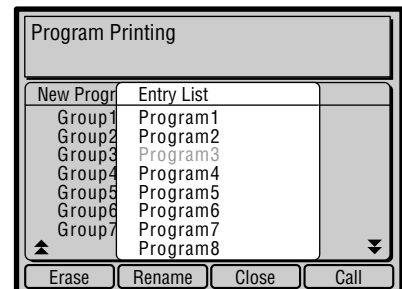

Storing Settings in Memory

The Print Job Memory feature is a flexible tool for automating frequently used or complicated combinations of settings for print jobs.


You can store up to 16 combinations of frequently used or complex print-job settings and apply them to new print jobs whenever necessary.

The settings of the following print job elements can be registered in memory for quick recall.

- Image processing mode
 - Line/Photo/Duo
 - Dot photo
- Scanning contrast
- Reproduction size
- Print quantity
- Vertical print position
- Print speed
- Print density
- Print options
 - Auto Process
 - Bound Original processing
 - Multi-Up printing




Saving the Current Print Job Setting

1 Set up desired settings.

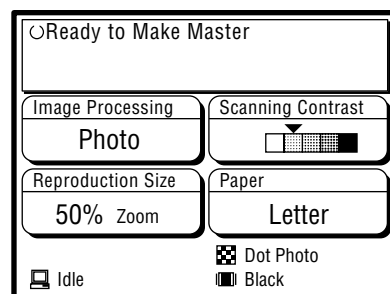

2 Press the MEMORY key.

The Print job memory window appears in the Main Display.

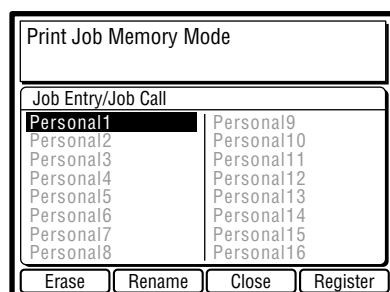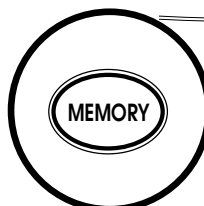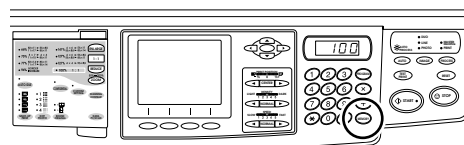

3 Select a job register name.

Highlight a desired job register name by pressing the cursor keys.

Free job register names appear dimmed.

When they are not dimmed, they are already occupied and not available for new entry.

NOTE If no dim job register name exists in the list or a desired one is not dimmed, erase the job setting saved under the selected job register name first.

☞ **p.67**Erasing a Saved Print Job Setting.

4 Press the function key.

The current print job setting is saved under the selected job register name, whose appearance changes accordingly.

NOTE




- You can give a desired name to the saved print job setting in this step.
- To cancel this operation, press the function key in place of the function key.

☞ **p.64**Renaming a Saved Print Job Setting.

5 Press the function key.

The Print job memory window is closed and the basic window appears again.




NOTE It is recommended that you maintain a list of job register names and their associated settings.

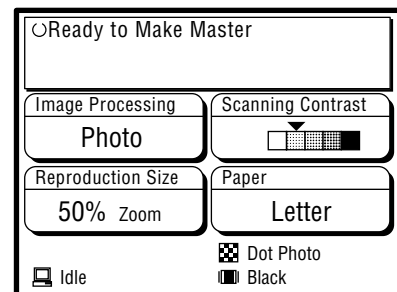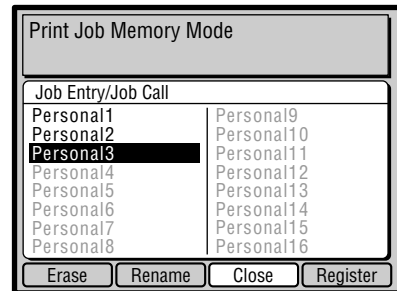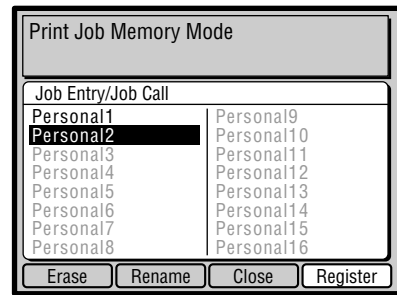

Renaming a Saved Print Job Setting



1 Press the **MEMORY** key.

The Print Job Memory window appears in the Main Display.

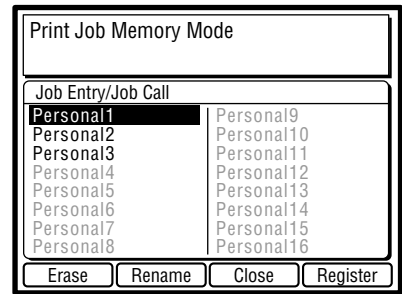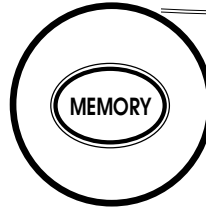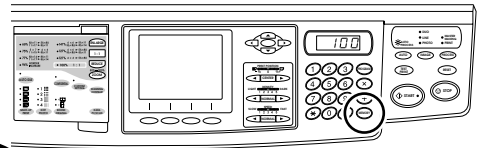


2 Select the job register name to be changed, using the cursor keys.

 Highlight a desired job register name.

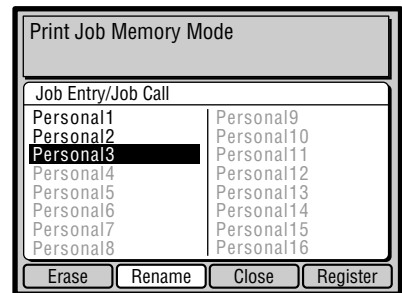

3 Press the **Rename** function key.


The Name Entry window appears.

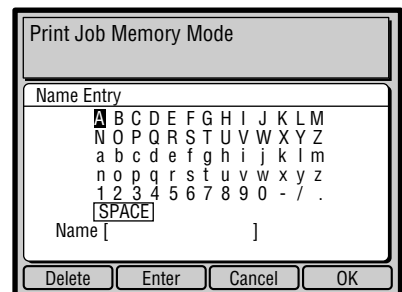

4 Enter a new job register name for the selected print job setting.

Select the characters you want to use with the cursor keys and enter them one by one by pressing the function key.

 - NOTE**
- To enter a space, select in the window by the cursor keys and press the function key.
 - To cancel this operation, press the function key. The Name entry window is then closed.



Print Job Memory Mode

Name Entry

A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m
n	o	p	q	r	s	t	u	v	w	x	y	z
1	2	3	4	5	6	7	8	9	0	-	/	.

Name [RISO JOB]]

5 Press the function key.

The new job register name is confirmed and the Name entry window is closed.

The job register name of the selected print job setting now changes to the new one.

Print Job Memory Mode

Job Entry/Job Call

Personal1	Personal9
Personal2	Personal10
RISO JOB	Personal11
Personal4	Personal12
Personal5	Personal13
Personal6	Personal14
Personal7	Personal15
Personal8	Personal16

6 Press the function key.


The Print job memory window is closed and the basic window appears again.

Calling Up a Saved Print Job Setting

You can apply a desired print job setting saved in the memory to any print job whenever desired only by calling it up from the memory.

1 Press the MEMORY key.


The Print Job Memory window appears in the Main Display.

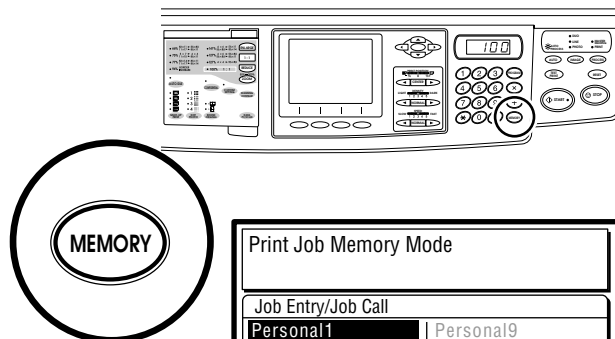

2 Select a desired print job setting.

Highlight the job register name of a desired print job setting in the list.


- NOTE**
- When the job register name is dimmed, no print job setting is saved under it.
 - To cancel this operation, press the **Close** function key. The Print job memory window is then closed.
 - It is recommended that you maintain a list of job register names and their associated settings.

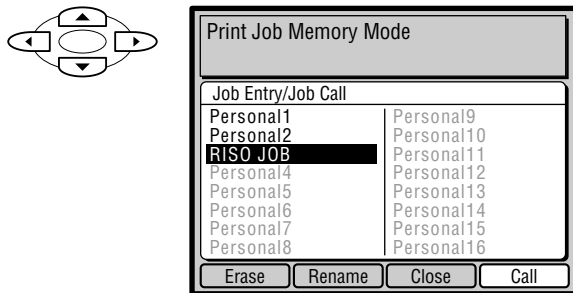

3 Press the **Call** function key.

The Print job memory window is closed and the basic window appears, showing the selected print job setting.




The indicators on the control panel also light according to the selected print job setting.

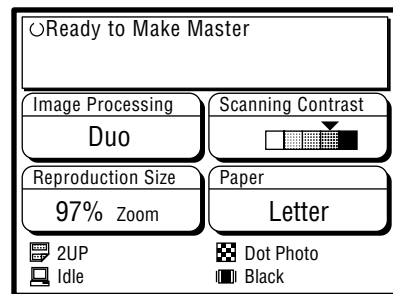

Erasing a Saved Print Job Setting



1 Press the MEMORY key.

The Print Job Memory window appears in the Main Display.

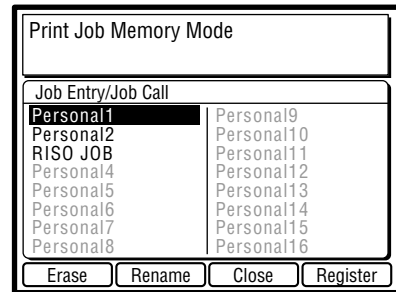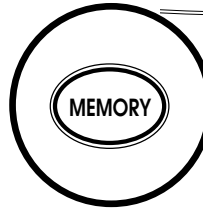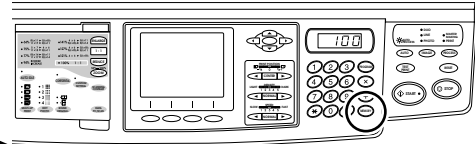

2 Select the print job setting to be erased.

 
Highlight the job register name of the corresponding print job setting in the list with the cursor keys.

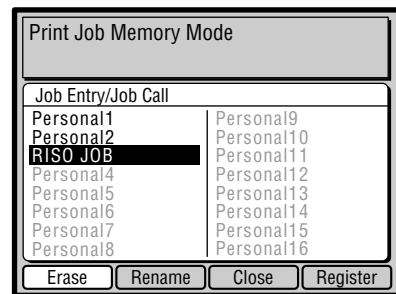

- NOTE**
- When the job register name is dimmed, no print job setting is saved under it.
 - To cancel this operation, press the **Close** function key. The Print job memory window is then closed.
 - It is recommended that you maintain a list of job register settings and their associated settings.

3 Press the **Erase** function key.

The confirmation message box appears.

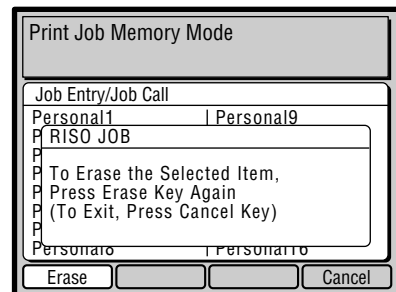

Storing Settings in Memory

4 Press the function key again.

The selected print job setting is erased from the memory and the selected job register name will be dimmed.

If the name was changed from the initial one, it will be returned to the initial one after the corresponding print job setting is erased from the memory.

NOTE To cancel this operation, press the function key in place of the function key.

Print Job Memory Mode	
Job Entry/Job Call	
Personal1	Personal9
Personal2	Personal10
Personal3	Personal11
Personal4	Personal12
Personal5	Personal13
Personal6	Personal14
Personal7	Personal15
Personal8	Personal16
<input type="button" value="Erase"/>	<input type="button" value="Rename"/>
<input type="button" value="Close"/>	<input type="button" value="Register"/>

Automatic Idle

The Automatic Idle feature assures consistent print quality even after a long break by rotating the Print Cylinder (Drum) to ensure even ink distribution, and saves you from wasting paper due to faint images in printing.




NOTE When ordinary or test printing takes place after a long break, the Automatic Idle feature is ignored even when the Automatic Idle indicator is lit.

Whenever the Automatic Idle indicator is lit, the Automatic Idle feature is on. If you want to use this feature when the indicator is not lit, press the AUTO IDLE key to activate it.

This feature is automatically activated if the power is switched on when the machine has not been used for a certain period (6 to 12 hours).

NOTE You can select the minimum period required for the automatic activation of the Automatic Idle feature.

p.70.....You can customize initial settings.

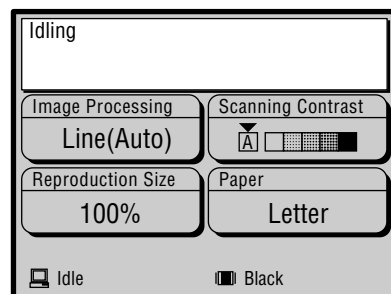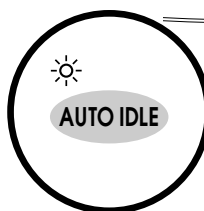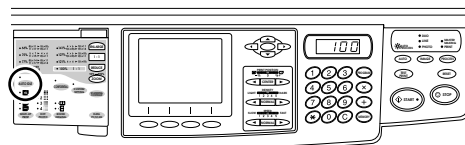




Customizing the Initial Settings

You can customize some of the initial settings to which the machine status will be returned when the power is turned on, or the RESET key is held down for more than one second.



NOTE When you customize the initial settings, they remain valid until they are changed again.


1 Press the CUSTOM SETTING key.

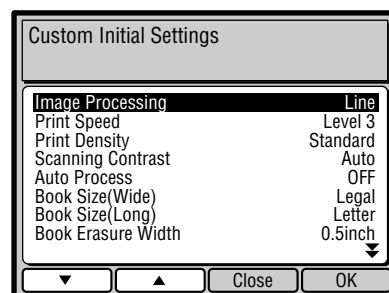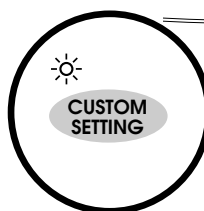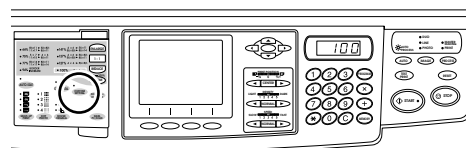The Custom Initial Settings List window appears in the Main Display.




2 Select an item that you want to customize.

Highlight a desired item name by pressing the  or  function key or the cursor keys.

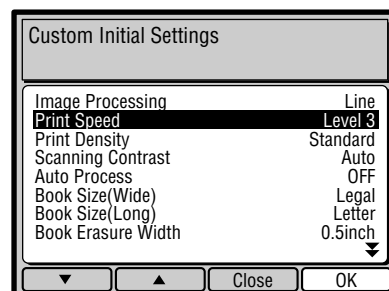


3 Press the function key.

The Initial setting selection box of the selected item appears.

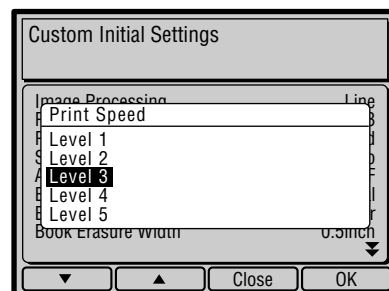

4 Select a desired initial setting.


Highlight a desired setting by pressing the or function key or the cursor keys.

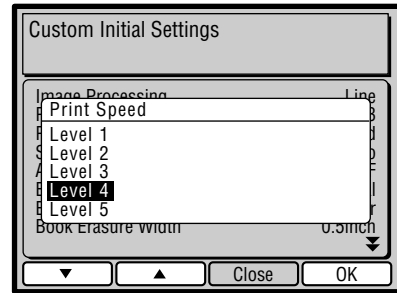

5 Press the function key.

A new initial setting is confirmed and the Initial setting selection box is closed. The initial setting of the selected item now changes to the new one in the Custom Initial Setting List window.

NOTE To cancel this operation, press the function key in place of the key.

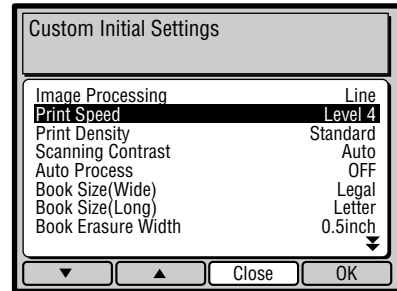

6 Press the function key.

The Custom Initial Setting List window is closed and the new (custom) initial settings are applied to the selected items.

Customizing the Initial Settings

INITIAL SETTINGS OPEN TO ARBITRARY CHANGES

Title	Description	Choices	Ref. Page
Image Processing	Selects the initial image processing mode.	<input type="checkbox"/> Line, Duo, Photo	p.30
Print Speed	Selects the initial print speed (copies per minute).	Level 1(=60), Level 2(=80), <input type="checkbox"/> Level 3(=100), Level 4(=120), Level 5(=130)[cpm]	p.40
Print Density	Selects the initial print density.	Light, Medium light, <input type="checkbox"/> Standard, Medium dark, Dark	p.41
Scanning Contrast	Selects the initial setting of the Original scanning contrast.	<input type="checkbox"/> Auto, Light, Medium light, Standard, Medium dark, Dark	p.36
Auto Process	Selects the initial status of the Auto Process feature.	ON, <input type="checkbox"/> OFF	p.32
Book Size (Wide)	Selects the initial opened book size to be specified for the book placed wide on the Stage glass.	RN2050/2150 : A3, <input type="checkbox"/> B4, A4, B5, A5, Foolscap RN2000/2030/2130 : Ledger, <input type="checkbox"/> Legal, Letter, Statement	p.38
Book Size (Long)	Selects the initial opened book size to be specified for the book placed longways on the Stage glass.	RN2050/2150 : <input type="checkbox"/> A4, B5, A5 RN2000/2030/2130 : <input type="checkbox"/> Letter, Statement	p.38
Book Erasure Width	Specifies the initial erasure width of the book spine shadow applied in the Bound Original processing feature.	RN2050/2150 : <input type="checkbox"/> 10 mm RN2000/2030/2130 : <input type="checkbox"/> 0.5inch	p.38
Multi-Up Interval	Selects if an interval is required or not, for replacing the original placed on the Stage glass for Multi-Up printing.	<input type="checkbox"/> None(No interval), 15 Seconds	p.46
Energy Saving Mode	Selects if energy is required to be saved or not, while your RISOGRAPH is idle. Two modes, "Auto Power-off" and "Auto Sleep", are available to save energy. If "Auto Power-off" is selected, the power will be turned off automatically when your RISOGRAPH remains idle for a specified period. If "Auto Sleep" is selected, on the other hand, the power supply will be shut off only for the control panel under the same condition, thus allowing your RISOGRAPH to receive PC data even in the energy saving mode.	Auto Power-OFF, Auto Sleep, <input type="checkbox"/> OFF NOTE The "Auto Sleep" mode is available as standard only for the RN21 series models. For the RN20 series models, the optional Printer Control Board RISORINC2 is required to use the "Auto Sleep" mode.	p.26, 82
	NOTE You can specify the idle period required to lead your RISOGRAPH into the energy saving mode, using the Energy save timer. ☞ See the next page.		


* The framed item is the default setting.

Title	Description	Choices	Ref. Page
Energy Save Timer	Selects the idle period required to lead your RISOGARAPH into the energy saving mode.	5 minutes, 10 minutes , 30 minutes	p.72
Auto Idle Period	Selects the period required for automatic activation of the Auto idle feature.	12 hours , 6 hours, OFF (No auto activation)	p.69
Semi-Auto>Master (Available only when the optional ADF Unit is installed)	Activates the Semi-auto process feature or not, when multiple originals are placed in the optional ADF Unit. If this feature is activated, the master-making process will start automatically for the following original placed in the optional ADF Unit after the current printing, even when the Auto process feature is not activated.	ON, OFF	p.55
Minimum Print Quantity	Selects the minimum print quantity which should be produced from one master.	1 , 10, 20, 30 [copies]	
Master Image Limit	Selects the maximum image area for a master. When "Auto" is selected, the maximum image area is automatically set according to the size of the printing paper loaded on the Feed tray.	RN2050/2150 : Auto , B4, A4, B5, B5-Wide, Foolscap , Custom RN2030/2130 : Auto , Legal, Letter, Statement, Custom RN2000 : Auto , Letter, Statement, Custom	
Paper Feed Mode	Selects the current paper feed mode. "Light-weight" is for light-weight paper and "Custom" for the paper which requires special adjustment in feeding. Select an appropriate one according to paper type.	Standard , Card Stock, Light-weight, Custom	p.20
Job Separator Line	Selects if the data line is required to be opened for the optional Job Separator. Select "Open" when attaching the Job Separator.	Closed , Open	p.122
LCD Mode Priority (Optional for RN20 series models)	Selects the initial basic window shown in the Main Display. "Scan Data Mode" is to be used when operating your RISOGARAPH stand-alone. "PC Data Mode" is, on the other hand, to be used when printing out the PC document data.	Scan Data Mode , PC Data Mode	p.14, 76, 80
Beep Sound	Selects if a beep sound is to be emitted or not, to signal the following elements; key operation, status change and errors.	ON , OFF	
Displayed Language	Selects a displayed language.	Consult your service representative.	
Clock/Calendar	Adjusts the time and date of the system clock and calendar. (The system clock time is used as the data receipt time given in the PC data mode.)		
Meter Display	Displays the Master Count, Copy Count, and Cylinder(Drum) Meter. • Master Count: the total number of masters made on your RISOGARAPH • Copy Count: the total number of copies printed on your RISOGARAPH • Cylinder(Drum) Meter: the total number of copies printed with the existing Print Cylinder (Drum). When you want to check the meter of another Print Cylinder (Drum), install it before this operation.		

* The framed item is the default setting.

Changing Print Color

To print with an optional color Cylinder (Drum), simply remove the existing Cylinder (Drum) from your RISOGRAPH and replace with the color of choice. When a Print Cylinder (Drum) other than the Black one is in place, the "Color" message appears in the Main Display.

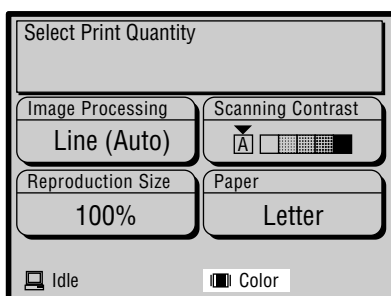


⚠ Caution Only use RISOGRAPH RN Print Cylinder (Drum).

- NOTE**
- Change Print Cylinder (Drum) with the power ON.
 - Store the removed Print Cylinder (Drum) horizontally in the Print Cylinder (Drum) case.
 - Never store Print Cylinder (Drum) in an upright position.

Changing Print Cylinders (Drums)


1 Open the Front Cover.

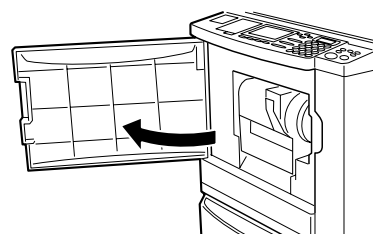

2 Be sure that the Print Cylinder (Drum) Release Button lights.


If not, press it. The Print Cylinder (Drum) will rotate and stop at the release position, leading the button to light.

NOTE If the Print Cylinder (Drum) Release Button does not light, the Print Cylinder (Drum) cannot be pulled out.

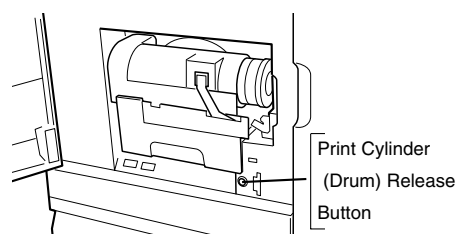

3 Pull out the Print Cylinder (Drum).

Grasp the Print Cylinder (Drum) Handle and pull out the Print Cylinder (Drum) until it stops.

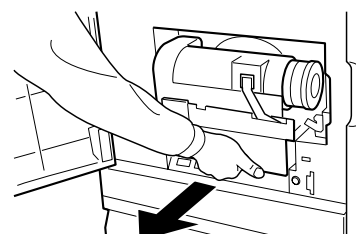


4 Remove the Print Cylinder (Drum) from the unit.

Lift the Print Cylinder (Drum) with both hands to remove it.

Important!


There is ink on the master wrapped around the Print Cylinder (Drum). Keep your hands and clothing away from it.

If your hands come into contact with ink, wash thoroughly.

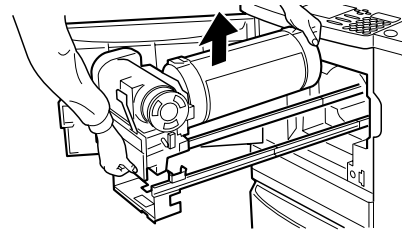


5 Load another color Print Cylinder (Drum) onto the holder.

Place another Print Cylinder (Drum) on the holder horizontally.

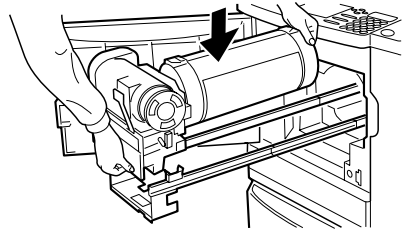


6 Slide the Print Cylinder (Drum) into the unit.

Holding the Print Cylinder (Drum) Handle, slide the Print Cylinder (Drum) into the unit until it stops. Then release the handle and close the Front Cover.

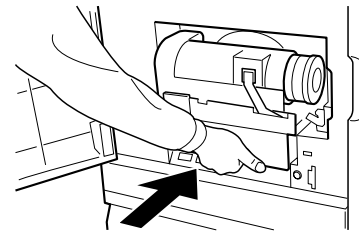

⚠ Caution The Print Cylinder (Drum) contains highly sensitive electronic components. To avoid damage by an electrostatic charge, do not touch the Print Cylinder (Drum) Connector.

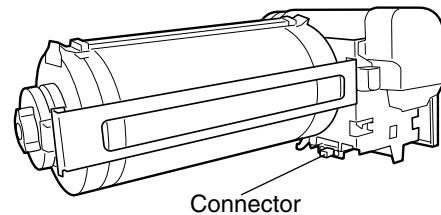

Interfacing with a Computer (Optional for the RN20 Series Models)

Your RISOGRAPH can be interfaced with personal computers (Windows and Macintosh) in two ways: by directly connecting a computer printer cable to them (local connection mode) and over the public telecommunication line (remote transmission mode).


The network enhancement is also available as optional.

For detailed description about operations with personal computers, see the section "Computer Interface Guides".


☞ p.77

NOTE The optional Network Interface Card RISORINC2-NET-A is required to connect your RISOGRAPH to Macintosh.

= Local connection mode =

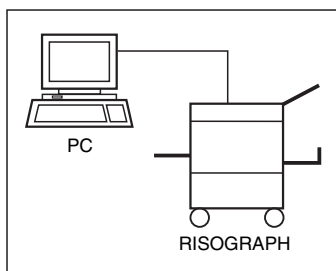

= Remote transmission mode =

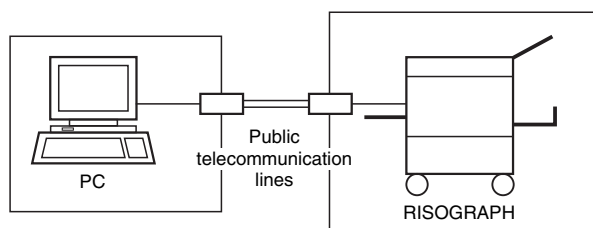

NOTE The dedicated interface control boxes are also connectable to the RN20 series models.

☞ p.122

When the RISOGRAPH is processing PC document data, the PC data mode basic window appears in the Main Display.

In this window, you can print out the document data sent from the personal computers.

The data processing status of the PC data mode is also indicated in the standard (Scan data mode) basic window, allowing you to check if any PC document data is waiting to be printed out in the PC data mode, during operation in the Scan data mode.

If you want to print out the waiting PC document data, in this case, press the Data Source Selection key in the Sub control panel and open the PC data mode basic window.

NOTE When the PC data mode basic window appears in the Main Display, you cannot make copies of originals.

If you want to make copies of originals, in this case, press the Data Source Selection key in the Sub control panel and change the window in the Main Display.

= PC Data Mode Basic Window =

<input type="radio"/> Ready to Receive Data	
PC Data Mode	
Communication Mode	:Local Connection
Doc.Data Spooling	:OFF
Data Process Step	:PC Selection
180° Rotation	:OFF
<input type="checkbox"/> Letter	<input type="checkbox"/> Black
Settings	

DATA
PC/SCAN

= Scan Data Mode Basic Window =


<input type="radio"/> Ready to Print	
Image Processing	Scanning Contrast
Duo	
Reproduction Size	Paper
100%	Letter
<input type="checkbox"/> 2UP	<input type="checkbox"/> Dot Photo
<input type="checkbox"/> Pause-Selection	<input type="checkbox"/> Black



Computer Interface Guides

- Optional for RN20 Series Models

This section describes various operation patterns and functions which are available for printing out the document files created on your computer in the PC data mode.

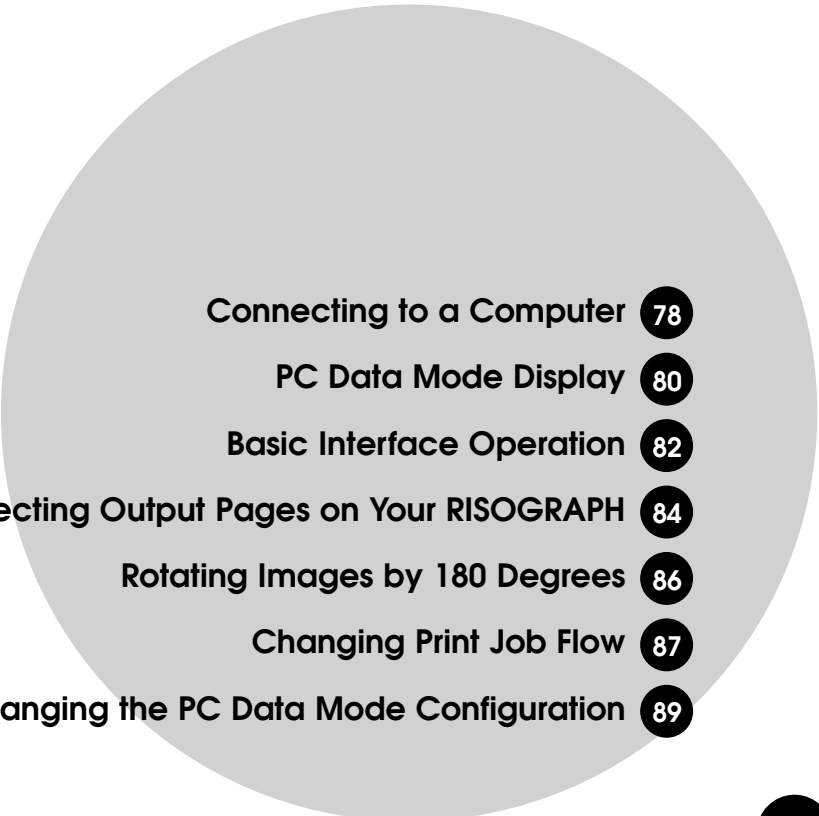

Connecting to a Computer	78
PC Data Mode Display	80
Basic Interface Operation	82
Selecting Output Pages on Your RISOGRAPH	84
Rotating Images by 180 Degrees	86
Changing Print Job Flow	87
Changing the PC Data Mode Configuration	89

Connecting to a Computer

You can connect your RISOGGRAPH to a computer in two ways, i.e. with direct cable connection (Local connection mode) and over the public telecommunication lines (Remote transmission mode).

For direct cable connection, the standard parallel port (IEEE 1284A) is provided on your RISOGGRAPH.

For data transmission over the public telecommunication lines, on the other hand, the standard serial port (DB-9) is mounted there.

NOTE An extra network port can be added to enable the connection of standard Ethernet cables (10Base-T and 100Base-TX) by building the optional network interface card into your RISOGGRAPH.

☞ p.122

Using the Standard Printer Cable



To print out the document file created on your Windows PC which is placed beside your RISOGGRAPH, connect the standard parallel printer cable, IEEE 1284-compliant one, between the printer port of your computer and the parallel port of your RISOGGRAPH.

With this connection, you will be able to send the document data created on your Windows PC directly to your RISOGGRAPH.

In this case, you are required to select "Local connection" as communication mode on your RISOGGRAPH.

Important!

- Always use a commercially available IEEE 1284-compliant printer cable.
- Be sure to turn off the personal computer and the RISOGGRAPH when connecting the cable.
- The allowable maximum input voltage of the parallel port is 5 V.

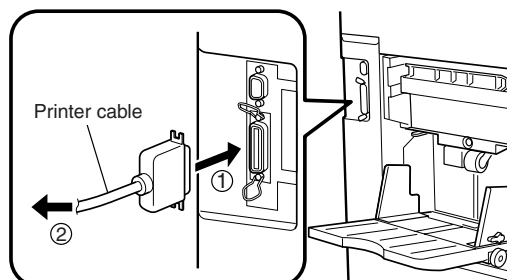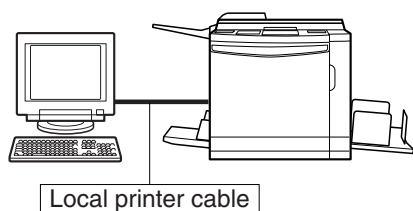

- ① To the parallel port of your RISOGGRAPH
- ② To the printer port of your Windows PC


NOTE If you want to connect your RISOGGRAPH to a Macintosh PC or use your RISOGGRAPH in the LAN (Local area network) environment, you are required to install the optional network interface card into the RISOGGRAPH and add the Ethernet network port (RJ45) to allow the connection of the 10Base-T or 100Base-TX Ethernet cable.

Using the Public Telecommunication Lines

To print out the document file sent from a remote location over the public telecommunication lines, connect the standard serial communication cable (RS-232C) between the modem (or terminal adapter) and the DB-9 serial port of your RISOGRAPH. With this connection, you will be able to receive the document data created on the computer in a remote location over the public telecommunication lines. In this case, you are required to select "Remote transmission" as communication mode on your RISOGRAPH.

Important!


- Be sure to turn off the modem (or terminal adapter) and the RISOGRAPH when connecting the cable.
- The allowable maximum input voltage of the serial port is 12 V.
- Poor contact trouble may occur when a 9-pin-to-25-pin adapter is used for this connection.
- In some countries, this communication mode may not be available due to the unsuitable local telecommunication environment.

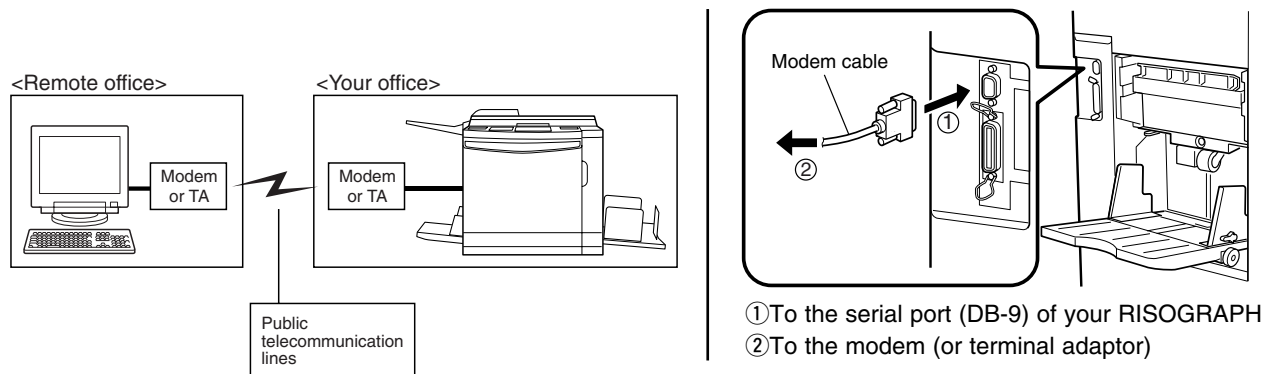


NOTE To assist you to transmit the document data from the remote location to the RISOGRAPH, the dedicated communication utility software, RISORINC Manager, is included in the accessory software CD-ROM.

PC Data Mode Display


Basic Window

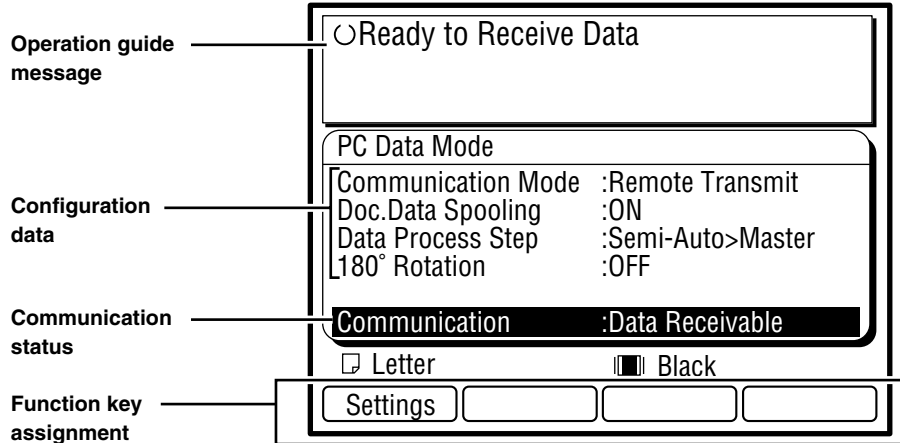

* The communication status is displayed in the Remote transmission mode only.

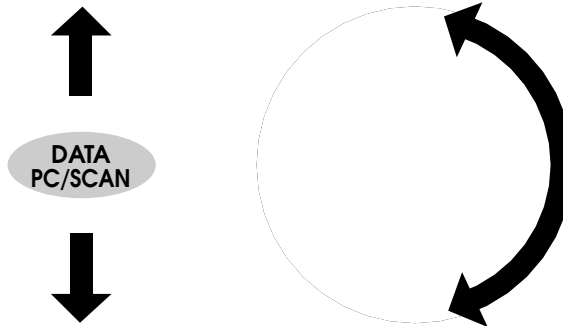

Output Option Window

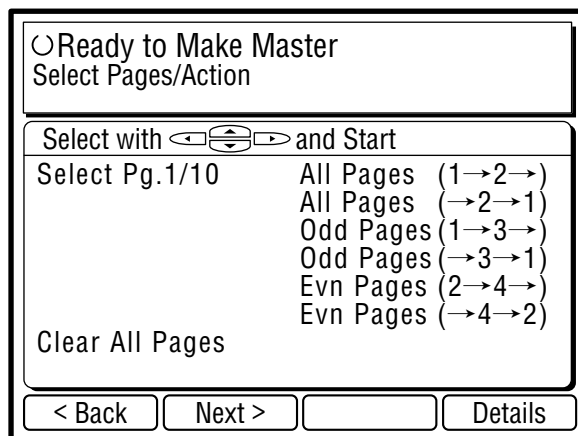

p.84

NOTE You can open these windows by pressing the Data Source Selection key on the Sub Control panel.

Mode Configuration Window

Settings



PC Data Mode Settings	
Communication Mode	Remote Transmit
Copy Count Entry	Not necessary
RMT Error Transact	Pause
Doc.Data Spooling	ON
Data Process Step	Semi-Auto>Master
RMT Data Receiver	Modem
Serial Com.Speed	115200bps
Resolution Review	OFF

▼ ▲ Close OK

p.89

Utility Window

Utility



Ready to Print

Page No.99/99

PC Data Mode
Select with [▼][▲] and Start

Skip Current Page

Renew Current Page

1 Rotate and Renew Current Page

Cancel Current Print Job

Letter Black

▼ ▲ Close

p.87

File Data Window

Details



Ready to Make Master

Select Pages/Action

Received File Data	No.1
File Name	RISO JOB 1
Page Count	Page.4
Paper Size	8.5 x 11
Resolution	300 x 400 dpi
Receipt Data	11:00 7/1 2000
Host Name	RISO SERVER

< Back Next > Details


p.85

NOTE This window is available only for the Remote transmission mode.

Basic Interface Operation



1 Turn the power switch ON.

The power switch is located on the lower right side of the machine.

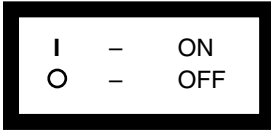

NOTE When your RISOGRAPH is sleeping in the Energy Saving mode, the indicator on the START key lights. In this case, press the START key to wake up your RISOGRAPH.

 ☞ p.72

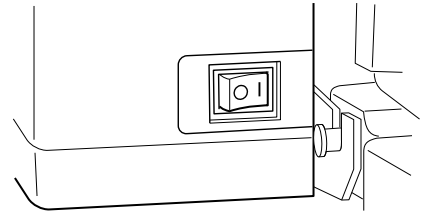

2 Open the PC data mode basic window in the Main Display.

Press the Data Source Selection key.
If this window is already opened, skip this step.

DATA
PC/SCAN

3 Check the mode configuration data in the Main Display.


Confirm that your RISOGRAPH is appropriately configured to process your print job.
If not, change the configuration in the Mode configuration window.

☞ p.89


NOTE Always confirm that the correct communication mode is selected.

- Local Connection: To send data directly from your Windows PC.
- Remote Transmit: To receive data over the public telecommunication lines.

= Local connection mode =

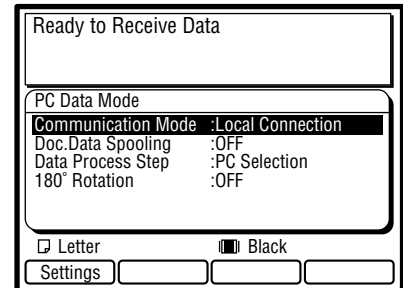

= Remote transmission mode =

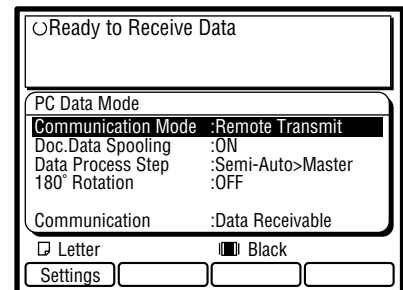


4 Check the current paper size and print color.

If you require another size of paper and/or print color, replace paper on the Paper Feed Tray and/or the Print Cylinder (Drum).

☞ p.20Setting Up the Paper Feed Tray

☞ p.74Changing Print Cylinders (Drums)

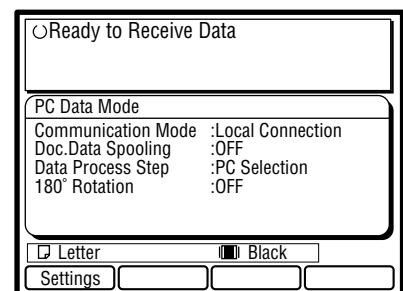

5 Send the document data to your RISOGRAPH.

Using the dedicated printer driver or the communication utility software, send your selected document file from the computer to the RISOGRAPH.




The RISOGRAPH processes the received document data according to the current mode configuration and the print conditions specified on the computer. If required, operate the control panel of the RISOGRAPH to finish your print job.

NOTE To interrupt operation, press the STOP key.

For detailed descriptions about the operation with the computer, consult the user's guides included in the accessory software CD-ROM or those of the related software.

NOTE The dedicated printer driver program, which is included in the accessory software CD-ROM, is required to be installed in the computer in advance.

Display transition pattern for the full automatic process operation in the Local connection mode

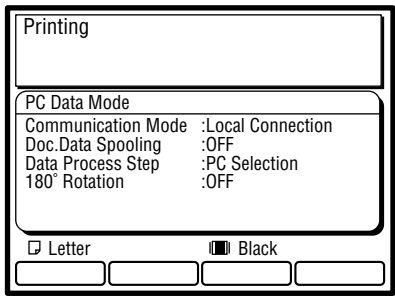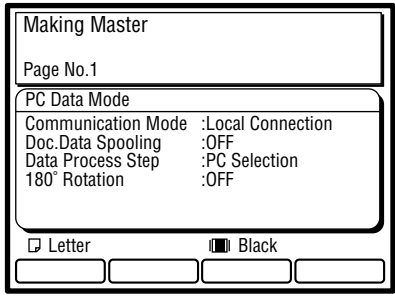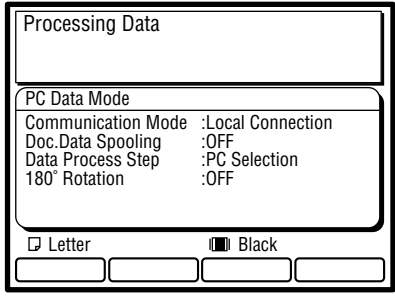

Selecting Output Pages on Your RISOGRAPH


Your RISOGRAPH can store the document data received from the computer in the memory without printing them, allowing you to select the pages to be printed out on the RISOGRAPH.

Besides, the document data stored in the memory remain there until they are cleared with key operation, enabling the repeated output of the same document data.

To enable this function of your RISOGRAPH, open the Mode configuration window in the Main Display and change the setting of the "Document Data Spooling" function to "ON".


p.89

NOTE When the communication mode is changed to "Remote Transmission", the "Document Data Spooling" function is automatically activated. It is highly recommended to keep this function activated in the "Remote Transmission" mode.

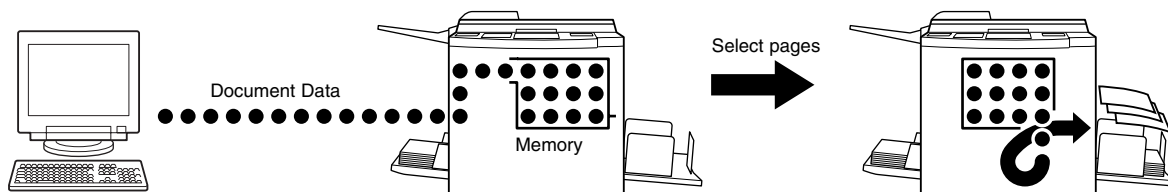

In the RISOGRAPH, each document data is first stored in the Job memory in a compressed format and then transferred into the Print memory and developed there to be printed out. While the Job memory is not full, the RISOGRAPH can receive document data additionally.

NOTE If the Document Data Spooling function is not selected, further operation will automatically start in your RISOGRAPH after all document data have been received, thus printing out all pages of the received document data in order.

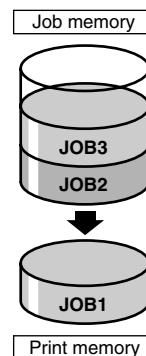

Selecting Pages


When the "Document Data Spooling" function is activated, the Output option window appears in the Main Display after all document data are received.

Select a page or pages you want to print out in this window and press the START key.

The selected page or pages will be processed and printed out as specified.

= Selecting a desired single page =


Press the **<Back>** or **<Next>** function key and show a desired page number in the window.

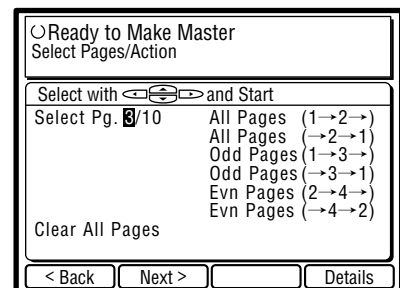

Selecting Output Pages on Your RISOGRAPH


= Selecting multiple pages =

 Press the cursor keys on the control panel and highlight a desired output option.



The following output options are available.

- All Pages (1→2→): To print all pages in order.
- All Pages (→2→1): To print all pages in reverse order.
- Odd Pages (1→3→): To print only odd pages in order.
- Odd Pages (→3→1): To print only odd pages in reverse order.
- Evn Pages (2→4→): To print only even pages in order.
- Evn Pages (→4→2): To print only even pages in reverse order.

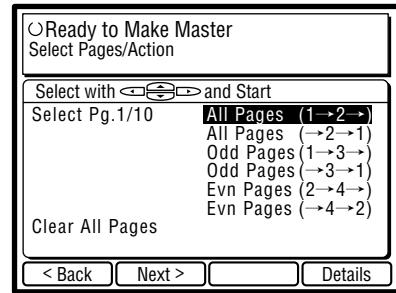


NOTE • You can cancel the current print job in the Utility window if you select a multiple-page output option.

p.87

- If you press the **Details** function key in this window, the detailed information of the received document file whose pages can be printed out can be checked in the File data window, which is available only in the Remote transmission mode.

When the dedicated communication utility software, RISORINC Manager, is used to transmit the document data, all listed items of information will be given in this window.

If another communication software is used instead, however, no data will be provided for some listed items. In this case, "Unknown" will appear in the lines of the corresponding items.

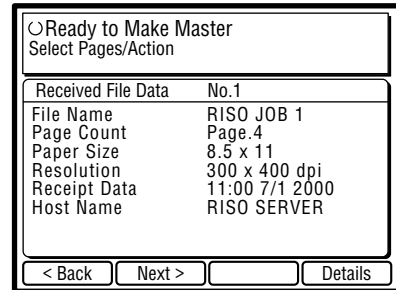

Clearing Document Data from the Memory


 
 
Only one document data file can be printed out at one time.

To print out another data file stored in the memory, you are required to clear the current document data from the memory after all required pages are printed out.


When the selected print job is finished, the Output option window appears again in the Main Display.

To clear the current document data, select "Clear All Pages" in this window by pressing the cursor keys on the Control panel and press the START key.

The following document data stored in the memory will then be available in the Output option window.

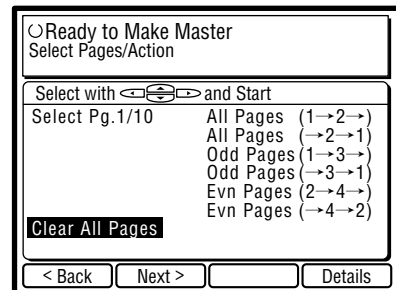

NOTE • All document data that are received by your RISOGRAPH will be cleared when turning off the Main power switch.


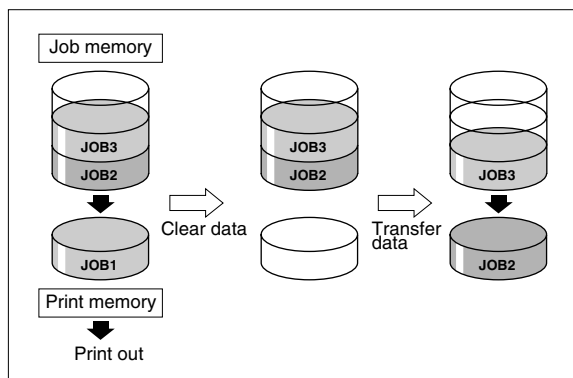


Rotating Images by 180 Degrees

You can rotate images in the received document data by 180 degrees before printing them out. This function will be useful to improve paper ejection condition in case printed copies cannot be ejected well due to the presence of large solid areas at the page top, or to print on special paper whose feed direction is limited to one way.

To activate this function, press the function key to change the status display of "180° Rotation" to "ON" in the Mode configuration window. Then press the START key to make a new or another master for the current document data, rotating images by 180 degrees.

 To cancel this function, press the function key again.

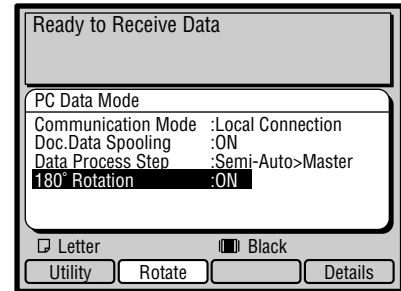

- NOTE**
- This function is available only before master-making process. Once a master is made, therefore, return to the master-making process by pressing the Process Selection key or select "Rotate and Renew Current Page" in the Utility window, if you want to rotate images on the current page.
 - When you select the 180-degree image rotation feature for the current print job on the computer, avoid selecting this function. Otherwise, the 180-degree image rotation feature will be canceled.

Changing Print Job Flow

You can change the print job flow specified when the current document data was sent to the RISOGRAPH according to the current print job requirements.

The new job flows which are available for the current print job are listed in the Utility window, which can be opened by pressing the function key.

Select a desired job flow by pressing the or function key and press the START key.


The current print job is resumed in the selected new job flow.

Renewing the Current Page

When operation is stopped before printing (the "Ready to Print" window is opened), you can renew (remake) the master with/without image rotation.


1 Press the function key.

The Utility window appears.

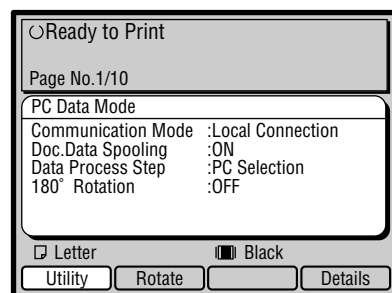


2 Select "Renew Current Page" or "Rotate and Renew Current Page" by pressing the or function key.

NOTE To cancel this operation, press the function key to close this window.

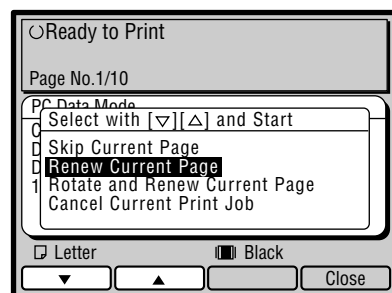

3 Press the START key.

The current page will be renewed.

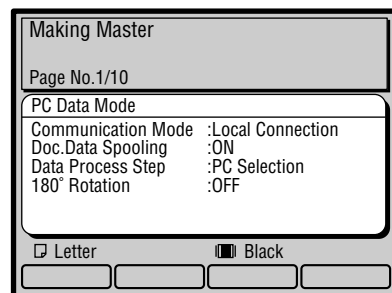

Job Flow List

- Skip Current Page

Cancels the print job of the current page and starts to make a master for the following page.

- Renew Current Page

Cancels the print job of the current page and starts to make another master for the current page.

- Rotate and Renew Current Page

Cancels the print job of the current page and starts to make another master for the current page, rotating images by 180 degrees.

NOTE The above two job flow options cannot be selected when the specified number of copies have been produced for the current page without the Document Data Spooling function activated.
If you want to select either of them, therefore, press the STOP key to interrupt printing.

- Cancel Current Print Job


Cancels the total print job of the multiple pages specified for the current document data.

When the Document Data Spooling function is not activated, the current document data will be cleared from the memory of your RISOGRAF.

When this function is activated, on the other hand, you can select another output option for the current document data in the Output option window.

Changing the PC Data Mode Configuration


You may be required to change the initial PC data mode configuration according to your operation requirements for printing out the document data sent from the computer. To allow you to change the PC data mode configuration, therefore, the following window, Mode configuration window, is prepared. Follow the procedures described below to change the configuration according to your needs.

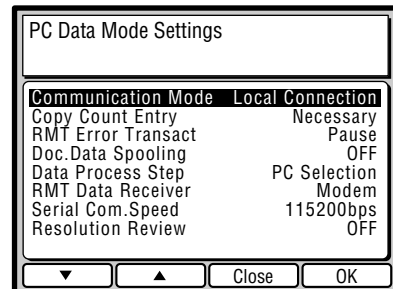


1 Press the **Settings** function key in the PC data mode basic window.

The Mode configuration window appears.

NOTE When the PC data mode basic window does not appear in the Main Display, press the Data Source Selection key on the Sub control panel.

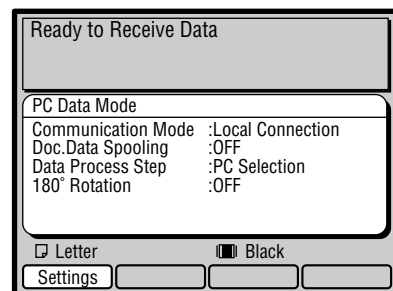


2 Press the **▼** or **▲** function key and highlight a desired item.

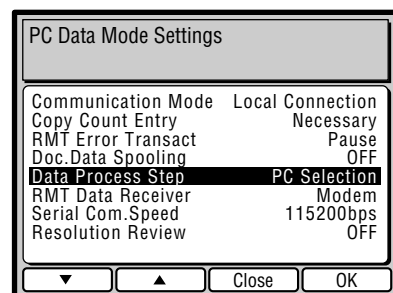


3 Press the **OK** function key.

The Configuration option window for the selected item appears.

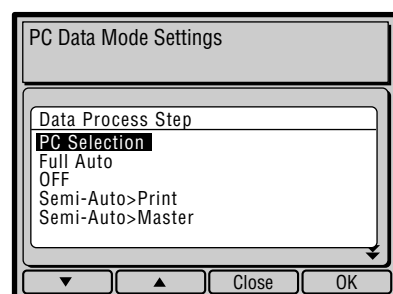


4 Press the **▼** or **▲** function key and highlight a desired option.

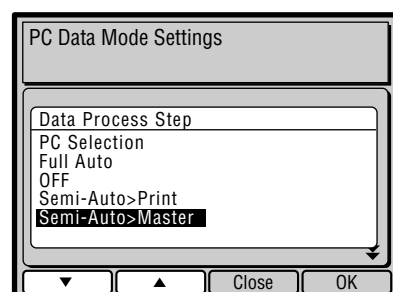

Changing the PC Data Mode Configuration


5 Press the function key.

The selected item is configured as specified in the selected option and the Mode configuration window reappears, displaying the new configuration for the selected item.

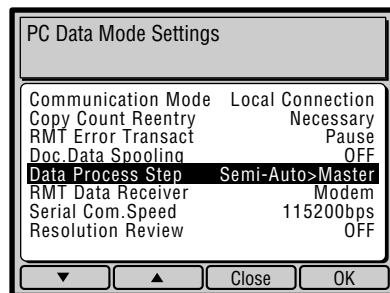

6 Press the function key.

The new PC data mode configuration specified in the Mode configuration window is confirmed and the Main Display returns to the basic window.

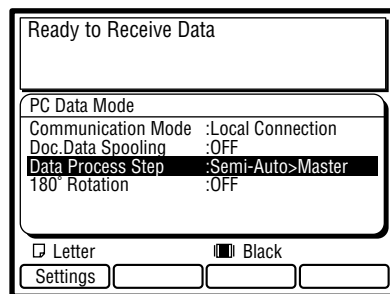

Changing the PC Data Mode Configuration

= Configuration Items and Their Options =

Items	Descriptions	Options
Communication Mode	Selects the current communication mode.	Local Connection, Remote Transmit
Copy Count Entry (Available only when the Document Data Spooling function is activated)	Selects if the number of copies is required to be specified for the current print job on the Control panel of the RISOGRAPH, or Not. If "Not Necessary" is selected, the number of copies specified on the computer will be applied.	Necessary, Not necessary
RMT Error Transact (Available only for the Remote transmission mode)	Selects how to process communication errors in the Remote transmission mode. To suspend the data transmission when an error occurs, select "Pause". To continue the data transmission clearing the document data which has caused the error, on the other hand, select "Skip the Error". NOTE When "Pause" is selected, an error message appears in the Main Display on the RISOGRAPH to inform you that an error has occurred in data transmission. You can check when the error occurred by printing out the document data already received.	Pause, Skip the Error
Doc. Data Spooling	Selects the current status of the Document Data Spooling function. If "ON" is selected, the document data sent from the computer are stored in the memory of the RISOGRAPH and not printed out immediately after data receipt. NOTE When you select "Remote Transmit" as communication mode, this function is automatically activated.	ON, OFF
Data Process Step	Selects the current status of the Auto process function. - PC Selection: Applies the setting specified on the computer. - Full Auto: Processes all print jobs without interruption. - Manual: Interrupts print jobs by the step, i.e., after master-making process and printing process. - Semi-Auto>Print: Interrupts print jobs after printing process. - Semi-Auto>Master: Interrupts print jobs after master-making process. NOTE If you select other options than "PC Selection", the Auto process feature setting specified on the computer will be ignored.	PC Selection, Full Auto, Manual, Semi-Auto>Print, Semi-Auto>Master
RMT Data Receiver (Available only for the Remote transmission mode)	Selects the data receiving device for the Remote transmission mode. NOTE Consult your service representative for the appropriate model of the respective devices.	Modem, TA (Terminal Adapter), Cellular Phone, Others

The framed option is selected as default one.

Changing the PC Data Mode Configuration

Items	Descriptions	Options
Serial Com. Speed (Available only for the Remote transmission mode)	Selects the serial communication speed between the RISOGRAPH and the data receiving device for the Remote transmission mode.	<input checked="" type="checkbox"/> 115200bps, <input type="checkbox"/> 57600bps, <input type="checkbox"/> 38400bps, <input type="checkbox"/> 19200bps, <input type="checkbox"/> 9600bps, <input type="checkbox"/> 4800bps, <input type="checkbox"/> 2400bps
Resolution Review (Available only for the Remote transmission mode)	Selects if the resolution of the document data received should be converted into the printing resolution of the RISOGRAPH. The document data resolution will be converted only when it is different from the printing resolution of the RISOGRAPH. Select "ON" if you want to activate this function. NOTE If the document data resolution is converted, the image quality will deteriorate, compared with the original one.	<input checked="" type="checkbox"/> ON, <input type="checkbox"/> OFF
AT Command Output (Available only for the Remote transmission mode)	Outputs a selected AT command to the connected data receiving device (modem or TA). You can check if your selected data receiving device can properly communicate with the RISOGRAPH by transmitting a desired AT command. For detailed descriptions about the AT commands, refer to the user's guide of the selected data receiving device.	See the list below.

The framed option is selected as default one.

< AT Command Selection List >

No.	No.	No.	No.
001 ATB0&W	014 AT&B1&W	027 AT&M7&W	040 AT%X0&W
002 ATB1&W	015 AT&B2&W	028 AT&W0	041 AT%C0&W
003 ATLO&W	016 AT&D0&W	029 AT&W1	042 AT%C1&W
004 ATL1&W	017 AT&D1&W	030 AT&Y0&W	043 AT%C2&W
005 ATL2&W	018 AT&D2&W	031 AT&Y1&W	044 AT%C3&W
006 ATL3&W	019 AT&D3&W	032 AT \J0&W	045 AT&K0&W
007 ATM0&W	020 AT&F&W	033 AT \J1&W	046 AT&K1&W
008 ATM1&W	021 AT&F0	034 AT \N0&W	047 AT&K2&W
009 ATM2&W	022 AT&F1	035 AT \N1&W	048 AT&K3&W
010 ATM3&W	023 AT&M0&W	036 AT \N2&W	
011 ATY0	024 AT&M4&W	037 AT \N3&W	
012 ATY1	025 AT&M5&W	038 AT \N4&W	
013 AT&B0&W	026 AT&M6&W	039 AT \N5&W	

The 0's in the No. fields are zeros.

Auto Process Function


You can specify how to process print jobs in the PC data mode, i.e., to process without interruption or to interrupt print jobs after a specified process step, on your RISOGRAPH. By interrupting print jobs, you can check print position and quality with sample copies before printing process or change the print job flow according to your print requirements.

The operations listed in the chart below are available after each process step when the print job is interrupted.

After printing process	After master-making process
<ul style="list-style-type: none"> 180-degree image rotation for the following page ☞ p.86 Paper replacement Received file information review ☞ p.85 	<ul style="list-style-type: none"> Print position/quality check Job flow change ☞ p.87

After interruption, you can resume the print job by pressing the START key.

The figure below shows the key operation timing with the respective Auto-process options.

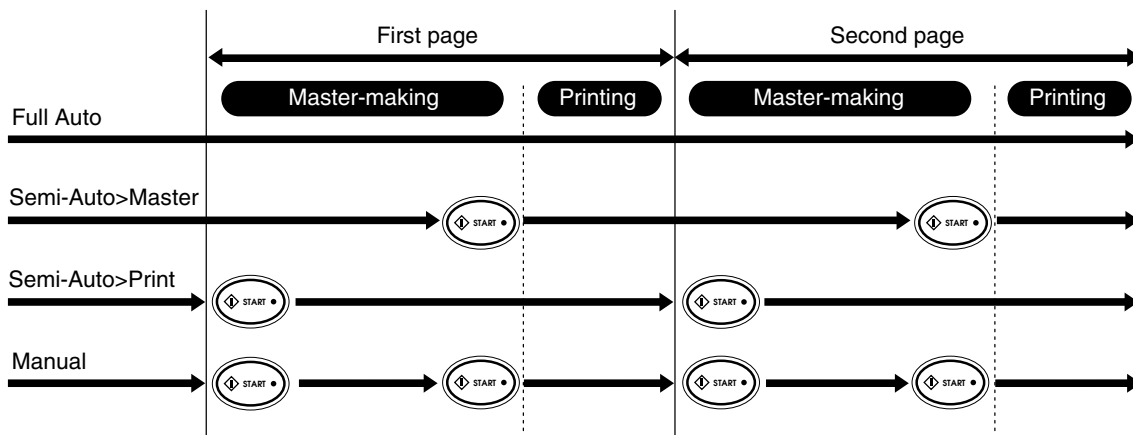

R eplenishing and Disposing Supplies


This section describes how to replenish supplies and dispose of them regularly.



- Replacing the Ink Cartridge **96**
- Replacing the Master Roll **98**
- Emptying the Master Disposal Box **100**


Replacing the Ink Cartridge

1 Open the Front Cover.

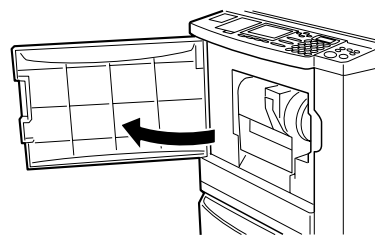


2 Turn the Ink Cartridge Locking Lever to the right.

The Ink Cartridge is released.

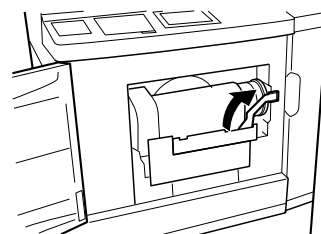


3 Turn the Ink Cartridge Holder off position.


Pull the Ink Cartridge Locking Lever toward you.

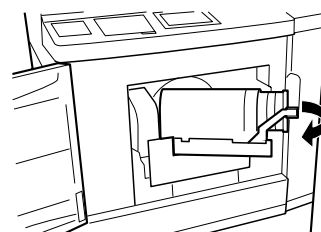

4 Pull the empty Ink Cartridge out of the Ink Cartridge Holder.

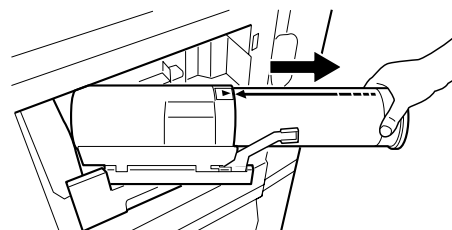


5 Remove the cap from a new Ink Cartridge.

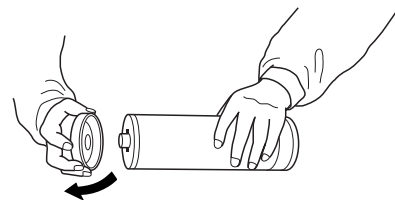


6 Insert the new Ink Cartridge into the Ink Cartridge Holder.

Align the arrow on the Ink Cartridge with the ► mark on the Ink Cartridge Holder and push the Ink Cartridge until it stops.

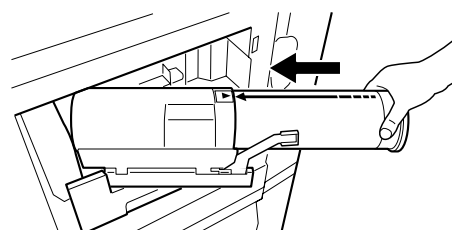

7 Push back the Ink Cartridge Holder into position.

Push the Ink Cartridge Locking Lever.

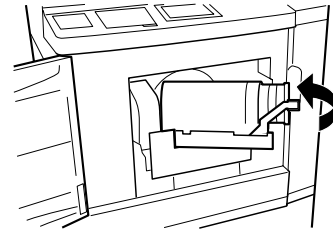


8 Turn back the Ink Cartridge Locking Lever to the left.

The Ink Cartridge is locked.



9 Close the Front Cover.

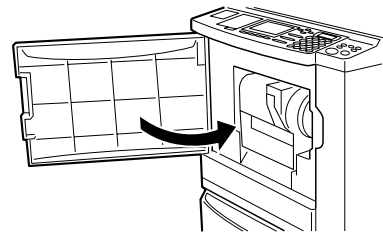

Important!

- Always use the ink cartridge whose name's suffix is the same alphabetic character as of the initial suffix of your machine name, for "Black".

- Never insert a cartridge of a different color ink.

Always be sure that the color of the new Ink Cartridge is the same as that of the old one being replaced. If you want to change the print color, you must replace the entire Print Cylinder (Drum).

- Dispose of the empty Ink Cartridge following the disposal rule in your community.


The Ink Cartridge is made of the following material: Polypropylene and Polyethylene.

Regarding the components of ink, consult your service representative.

Replacing the Master Roll


1 Raise the Scanner Table.

Hold the Scanner Table Release Lever and raise the Scanner Table until it stops.

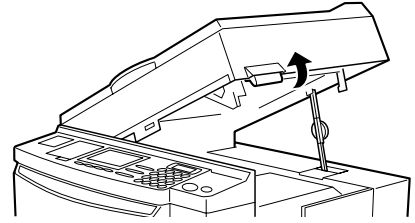


2 Open the Master Roll Cover.

Pull down the Master Roll Cover.

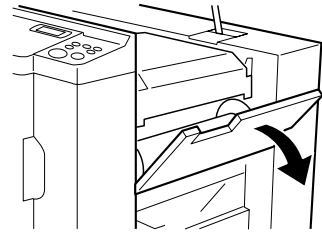


3 Open the Master Making Unit.

Open the Master Making Unit by pulling down the green Master Making Unit Release Lever, which is located on the right side of the unit.

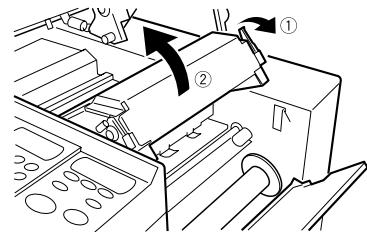


4 Remove the depleted Master Roll.

Pull the depleted Master Roll toward you and remove it from the supporter.

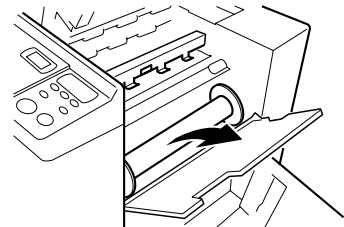

5 Remove both left and right flanges.

Remove both left and right flanges from the depleted Master Roll.

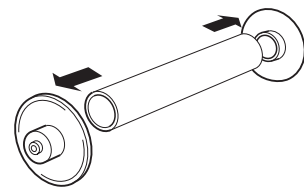


6 Attach the existing flanges to a new Master Roll.

Unpack a new Master Roll.


Attach the flanges removed from the depleted Master Roll to the new one, with the colored flange to the right end and the white one to the left end.

Then unwrap the new Master Roll.

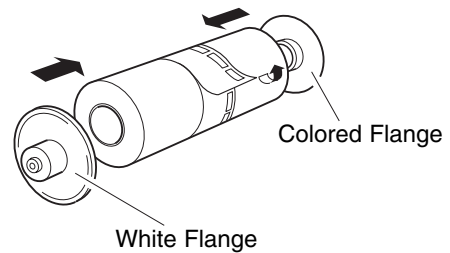


7 Install the new Master Roll.

Insert the Master Roll into the supporter, placing the colored flange on the right-hand flange holder.

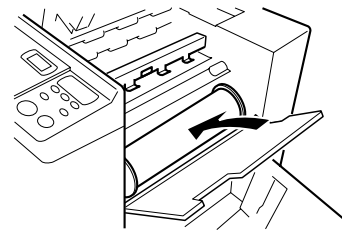

8 Insert the leading edge of the Master Roll into the Master Entrance.


Unroll the Master Roll by pulling on the leading edge, pass the Master under the Master End Sensor on the right side and feed it until the leading edge reaches the Master Stopper. Then take the slack winding the Master Roll.

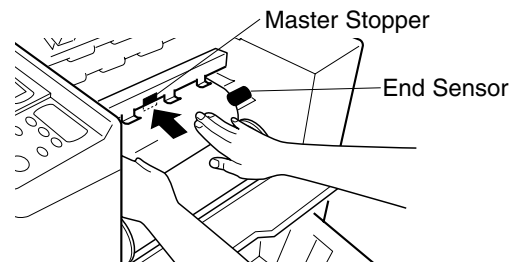

9 Close the Master Making Unit and the Master Roll Cover gently.

10 Close the Scanner Table.

Pull the Scanner Table Support toward you until it stops and then push down the Scanner Table gently.

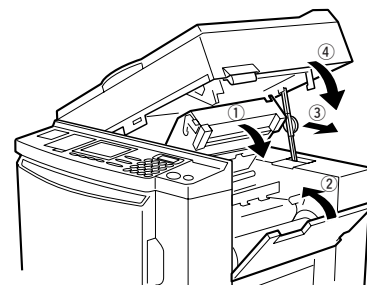


Emptying the Master Disposal Box

1 Pull out the Master Disposal Box.


Hold the handle of the Master Disposal Box and pull out the box.

Important!

Make sure that the Paper Feed Tray is lowered to the bottom. If not, the Master Disposal Box could not be pulled out or might be damaged in removal.

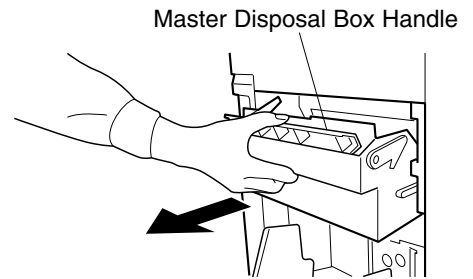


2 Discard used masters.

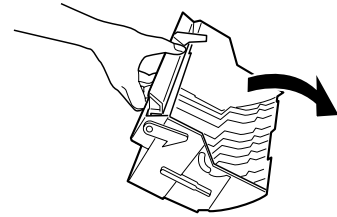

3 Insert the Master Disposal Box into position.


Holding the handle, insert the Master Disposal Box into position as far as it will go. Then release the handle.

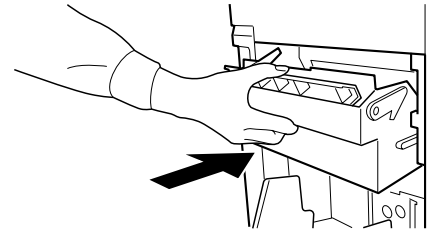




Advisory Messages

This section describes how to respond to advisory messages in the Main Display. If you need help in following a message's direction, consult the alphabetized index chart on the next page and refer to the corresponding page.

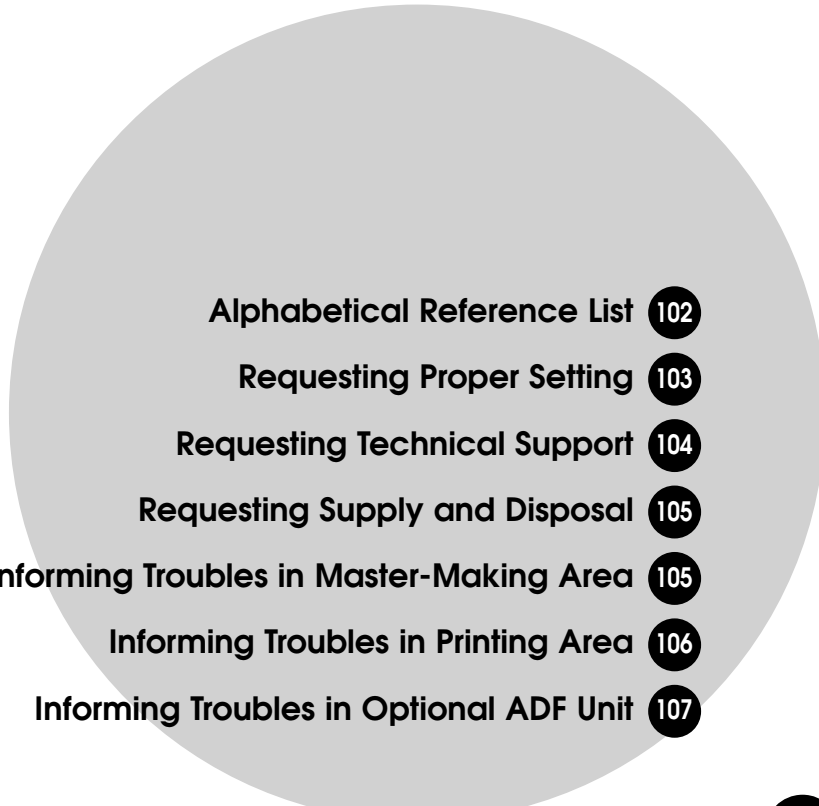

Alphabetical Reference List	102
Requesting Proper Setting	103
Requesting Technical Support	104
Requesting Supply and Disposal	105
Informing Troubles in Master-Making Area	105
Informing Troubles in Printing Area	106
Informing Troubles in Optional ADF Unit	107

 Alphabetical Reference List

A	Add Paper	105
B	Battery Replacement.....	104
C	Check Paper Feed Tray.....	107
	Close Disposal Entrance Cover	103
	Close Front Cover	103
	Close Master Making Unit.....	103
	Close Scanner Table	103
E	Empty Master Disposal Box.....	105
I	Insert Card in Key/Card Counter.....	103
	Install Ink Cartridge	103
	Install Master Disposal Box.....	103
	Install Print Cylinder	103
M	Maintenance.....	105
	Master Disposal Error	106
	Master Jammed in Disposal Unit.....	106
	Master Mis-Feed	105
	Master Not Set in Place	103
	Master was Not Loaded	105
N	No Ink / Replace Ink Cartridge.....	105
	No Master on Print Cylinder (Drum)	106
	No Master / Replace Master Roll.....	105
O	Original Jam	107
P	Paper Jam / Check Paper Ejection Area	107
	Paper Jam / Check Paper Feed Area.....	106
	Paper Jam / Pull Out Print Cylinder (Drum).....	106
	Pull Out Print Cylinder (Drum)	105
S	Set Master Disposal Box in Place.....	103
	Set Print Drum in Place.....	103
	System Error / Press  Key	104
	System Error / Rewind Master Roll.....	105
	System Error / Turn Main Power SW OFF	104
W	Wrong-Type Ink Cartridge.....	104
	Wrong-Type Print Cylinder (Drum)	104

Requesting Proper Setting

Message	Description and Action	Reference
Insert Card in Key/Card Counter	An operator card is requested to be inserted into the Key/card counter (optional). Action Insert it.	
Install Print Cylinder [Set Print Drum in Place]	The Print Cylinder (Drum) is not properly installed. Action Slide it into place, holding the handle.	p.74
Install Ink Cartridge	An Ink cartridge is not properly installed. Action Insert it into the Ink cartridge holder completely and lock it.	p.96
Master Not Set in Place Insert Lead Edge of Master into Master Entrance and Close Master Making Unit	Master is not properly loaded. Action Install a Master roll, if required, and insert the lead edge into the Master entrance. Then close the Master making unit.	p.98
Close Front Cover	The Front cover is not properly closed. Action Close it tightly, pressing on the lower right-hand area.	
Close Scanner Table	The Scanner table is not properly closed. Action Close it tightly, holding it down.	
Install Master Disposal Box [Set Master Disposal Box in Place]	The Master disposal box is not properly loaded. Action Insert it completely, holding the handle.	p.100
Close Master Making Unit	The Master making unit is open. Action Open the Scanner table and close the Master making unit securely.	
Close Disposal Entrance Cover	The Disposal entrance cover is not properly closed. Action Close it securely.	

Requesting Proper Setting

Message	Description and Action	Reference
Wrong-Type Print Cylinder (Drum) Installed	This type of Print Cylinder (Drum) is not acceptable for this machine. Action Install a correct Print Cylinder (Drum). If you don't know what Print Cylinder (Drum) is the correct one, contact your service representative.	p.74
Wrong-Type Ink Cartridge Installed	This type of ink cartridge is not acceptable for this machine. Action Insert a correct type. If you don't know what Ink cartridge is the correct type, contact your service representative.	p.96

Requesting Technical Support

Message	Description and Action	Reference
!!Battery Replacement!! Call Service (To continue, Press R*8v Key)	The battery has lost most of the power. Action Contact your authorized service representative and request to replace a battery. To continue operation, press the R*8v function key.	p.118
!!Maintenance!! Call Service (To Continue, Press R*8v Key)	The periodical maintenance service is required. Action Contact your authorized service representative. To continue operation, press the R*8v function key.	p.118
!!System Error!! Press R*8v Key If Recovery has Failed, Call Service & Quote the Error Code	An error has occurred in the system. Action Press the R*8v function key. If this message still appears, contact your authorized service representative and report him or her the error code.	
!!System Error!! Turn Main Power SW OFF Then ON If Recovery has Failed, Call Service & Quote the Error Code	An error has occurred in the system. Action Turn the power off and then on again. If this message still appears, contact your authorized service representative and report him or her the error code.	

Requesting Supply and Disposal


Message	Description and Action	Reference
No Ink Replace Ink Cartridge	An Ink cartridge is empty. Action Replace it with a new one.	p.96
No Master Replace Master Roll	A Master roll is depleted. Action Install a new one.	p.98
Empty Master Disposal Box	The Master disposal box is full of used masters. Action Pull out the box and discard used masters.	p.100
Add Paper	Paper is depleted and/or not loaded in the Paper feed tray. Action Load paper in the Paper feed tray.	p.20

Informing Troubles in Master-Making Area

Message	Description and Action	Reference
Master was Not Loaded on Print Cylinder (Drum) Correctly Pull Out Print Cylinder (Drum) and Remove Master on it	Master has not been properly loaded on the Print Cylinder (Drum). Action ①Open the Front cover and pull out the Print Cylinder (Drum). Then remove the master on the Print Cylinder (Drum) and return the Print Cylinder (Drum) into the original position. ②Open the Master making unit and wind the Master roll. Then reset master in place. After closing the Master making unit, resume operation from master-making.	p.74, 98
Master Mis-Feed Rewind Master Roll and Reset Master in Place	Master has misfed. Action Open the Master making unit and wind the Master roll. Then reset master in place. Press the START key to resume operation.	p.98
Pull Out Print Cylinder (Drum) and Remove Master on it	Master was not cut correctly. Action ①Open the Front cover and pull out the Print Cylinder (Drum). Then remove the master on the Print Cylinder (Drum) and return the Print Cylinder (Drum) into the original position. ②Open the Master making unit and wind the Master roll. Then reset master in place. After closing the Master making unit, resume operation from master-making.	p.74, 98
!!System Error!! Rewind Master Roll and Close Master Making Unit	The cutter did not operate in master cutting. Action Open the Master making unit and wind the Master roll. Then close the Master making unit.	p.98

Informing Troubles in Master-Making Area


Message	Description and Action	Reference
Master Disposal Error Pull Out Print Cylinder (Drum) and Discard Master	A used master remains on the Print Cylinder (Drum). Action Open the Front cover, pull out the Print Cylinder (Drum) and remove the remaining master. After returning the Print Cylinder (Drum) to its position, press the START key to restart the master-making operation.	p.74
Master Jammed in Disposal Unit Open Scanner Table and Disposal Entrance Cover, then Remove Master	A used master is stuck at the entrance of the Master disposal unit. Action Open the Scanner table and the Disposal entrance cover, and then remove the stuck master inside. To open the Disposal entrance cover, pull up the handle, tilting down the green lever.	p.98

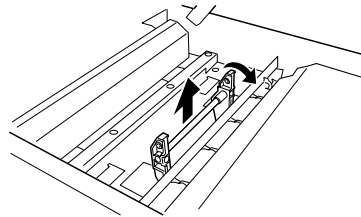

Informing Troubles in Printing Area



Message	Description and Action	Reference
No Master on Print Cylinder (Drum) Make a New Master	There is no master on the Print Cylinder (Drum). Action Place an original on the Stage glass or in the optional ADF unit and press the START key.	p.28
Paper Jam Check Paper Feed Area and Press R-3v Key	Paper was not fed or was improperly fed. Action Check paper on the Paper feed tray and remove jammed paper if any. Then press the R-3v function key.	p.20
Paper Jam Pull Out Print Cylinder (Drum) and Remove Paper	Paper is jammed on or under the Print Cylinder (Drum). Action Open the Front cover, pull out the Print Cylinder (Drum) and remove the paper.	p.74

Caution Take extra care not to hurt your hand by the sharp tip of the paper separation hook when removing the paper jammed inside the unit.

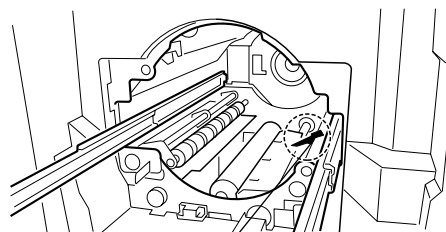

Paper Separation Hook

 
 
Informing Troubles in Printing Area

Message	Description and Action	Reference
Paper Jam Check Paper Ejection Area and Press  Key	Paper was not ejected properly. Action Check the paper ejection area and remove jammed paper if any. Then press the  function key.	p.21
Check Paper Feed Tray	The safety switch under the Paper feed tray has been activated. Action Check the paper feed area for any obstructions and clear it if an obstacle is found.	p.20

NOTE TO PREVENT PAPER JAMS

- Use flat printing paper that is free of folds. If curled paper is unavoidable, place it so that the curl faces down.
 p.18
- When using smooth paper for printing, set the Paper feed pressure adjustment lever to "CARD".
 p.20

 Informing Troubles in Optional ADF Unit

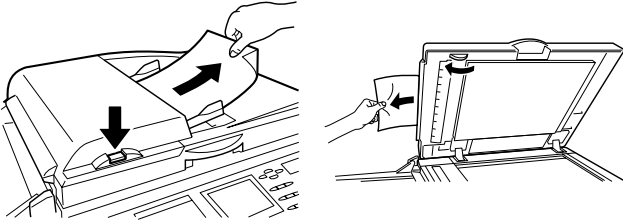Message	Description and Action	Reference
Original Jam Remove Original, Holding down Original Release Button, and Press  Key	An original has jammed in the optional ADF unit. Action Pull out the original, while holding down the Original release button.  Action If the original has fed too far to be removed from the entrance side of the ADF unit, open the ADF unit and pull out the original, while turning the Original release dial at the bottom of the unit.	



Troubleshooting Tips

This section describes how to take care of problems that may arise with your RISOGRAPH. Check the following "Tips List" and the related items before calling your authorized service representative.



- The unit does not start even when the power switch is pressed. 110**
- The "Close Front Cover" message appears even when the Front cover is closed. 110**
- There is no image on copies. 110**
- The unwanted background of an original is picked up on copies. 110**
- Copies are incomplete; some images are missing or unclear. 110**
- Printed copies are half or three quarter blank in the Multi-Up printing. 111**
- Printed images are excessively faint or blurred. 111**
- Vertical blank lines are found on printed copies. 111**
- The back of finished copies are smudged with ink. 111**
- Paper sticks to the surface of the Print Cylinder (Drum). 112**
- Paper cannot feed well. 112**

Troubleshooting Tips

The unit does not start even when the power switch is pressed.


- **Action** > Check whether the power cord is firmly connected to an electrical outlet.
- Check whether the power cord is connected to the unit.
- Check whether the commercial power circuit breaker is on.

The "Close Front Cover" message appears even when the Front cover is closed.

- There is a metal plate in the lower right-hand section of the Front cover. Unless this plate is in direct contact with the magnet on the lower right-hand part of the machine, the advisory message remains on the Main Display.

Action > Press on the lower right-hand area of the Front cover to close it tightly.

There is no image on copies.

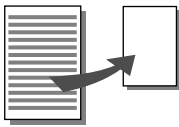

- Check whether the original is correctly placed.

Action > Be sure it is placed face down.

 
☞ p.28

- Check whether the master is correctly placed.

Action > Be sure that it is placed with the leading edge unrolled from below.

☞ p.98

The unwanted background of an original is picked up on copies.



- If newspaper or colored paper is used as an original, the background might have been picked up on copies.

Action > Press the SCANNING CONTRAST Adjustment key to make the scanning contrast lighter. Then replace the original and press the START key.

☞ p.36

Copies are incomplete; some images are missing or unclear.



- The Stage glass may be stained with correction fluid or glue.

Action > Open the Stage cover (or the optional ADF unit table) and clean the Stage glass using a soft cloth or tissue.

☞ p.119

- A foreign object may be on or under the master on the Print Cylinder (Drum).

Action > Pull out the Print Cylinder (Drum) and remove the object.

☞ p.74

- The Stage cover was open during scanning.

Action > Images were not scanned properly because of exposure to light. Be sure that the Stage cover (or the optional ADF unit table) is closed during scanning.

- The paper size indicated in the Main Display may be smaller than the actual size of printing paper loaded on the Paper feed tray.

In this case, the images placed beyond the displayed paper size on originals might not be printed on copies.

Action > Make the displayed paper size equal to the actual one.

☐ Printed copies are half or three quarter blank in the Multi-Up printing.



- The initial setting of the Multi-Up printing feature is adjusted to provide a 15-second interval for placing the following originals.
Action > Change the initial setting of the Multi-Up printing feature to cancel the interval time.
☞ **p.72**
- The STOP key may have been pressed by mistake during scanning originals.
Action > Repeat operation from the beginning.

☐ Printed images are excessively faint or blurred.



- If the machine is not used for a long period of time, ink on the surface of the Print Cylinder (Drum) may dry. Dry ink on the Print Cylinder (Drum) may cause faint or blurred printing.
Action > Press the TEST PRINT key several times until a clear printed image is obtained.
☞ **p.31**
Action > Activate the Automatic Idle feature before operation to prevent light images that may occur after periods of non-use.
☞ **p.69**
- Light originals result in light images.
Action > Press the SCANNING CONTRAST Adjustment key to make scanning contrast darker. Then replace the original and press the START key.
☞ **p.36**
- If the temperature is low (below 59°F or 15°C) or the Ink cartridges are stored in a cold place, ink may not flow smoothly.
Action > Warm the room or Ink cartridge before operating the unit.

☐ Vertical blank lines are found on printed copies.



- The Thermal print head (the device that makes the master) may be smudged with paper powder from the master.
Action > Open the Master making unit and clean the Thermal print head using a soft cloth or tissue.
☞ **p.119**
- The Stage glass may be stained with correction fluid or dust.
Action > Open the Stage cover (or the optional ADF unit table) and gently clean the Stage glass using a soft cloth or tissue.
☞ **p.119**

If the optional ADF unit is installed:

- The ADF scanner glass may be smudged with dust or correction fluid.
Action > Open the ADF unit table and clean the glass using a soft cloth or tissue.
☞ **p.120**


☐ The back of finished copies are smudged with ink.



- The rubber Pressure roller, which keeps printing paper pressed against the Print Cylinder (Drum) during printing, may be stained with ink.
Action > Remove the Print Cylinder (Drum) and clean the roller gently with a soft cloth or tissue.
☞ **p.119**
- The paper size indicated in the Main Display may be larger than the actual size of printing paper loaded on the Paper feed tray.
In this case, images might be printed beyond the paper frame, causing the rubber Pressure roller to be stained with ink.
Action > Make the displayed paper size equal to the actual one.
☞ **p.73**

Troubleshooting Tips

Paper sticks to the surface of the Print Cylinder (Drum).

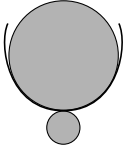

- Action** • Use recommended printing paper.
☞ **p.18**
- Lower the vertical print position with the VERTICAL PRINT POSITION Adjustment key.
☞ **p.39**
- Replace the original in the reverse direction and restart printing from the beginning (master-making).

Paper cannot feed well.

- Paper slips.
Action • Set the Paper feed pressure adjustment lever to "CARD".
☞ **p.20**
- Change the Paper feed mode according to the type of the paper in use.
☞ **p.20**

Printed copies are not ejected well.


- The Paper Ejection Wings are not set correctly.
Action • Position the Paper Ejection Wing Adjustment Levers according to the size and thickness of the printing paper.
☞ **p.22**



troubleshooting Tips (PC Data Mode)

This section describes how to take care of problems that may arise in relation to operations in the PC data mode.

Check the related items as instructed in this section before calling your authorized service representative.

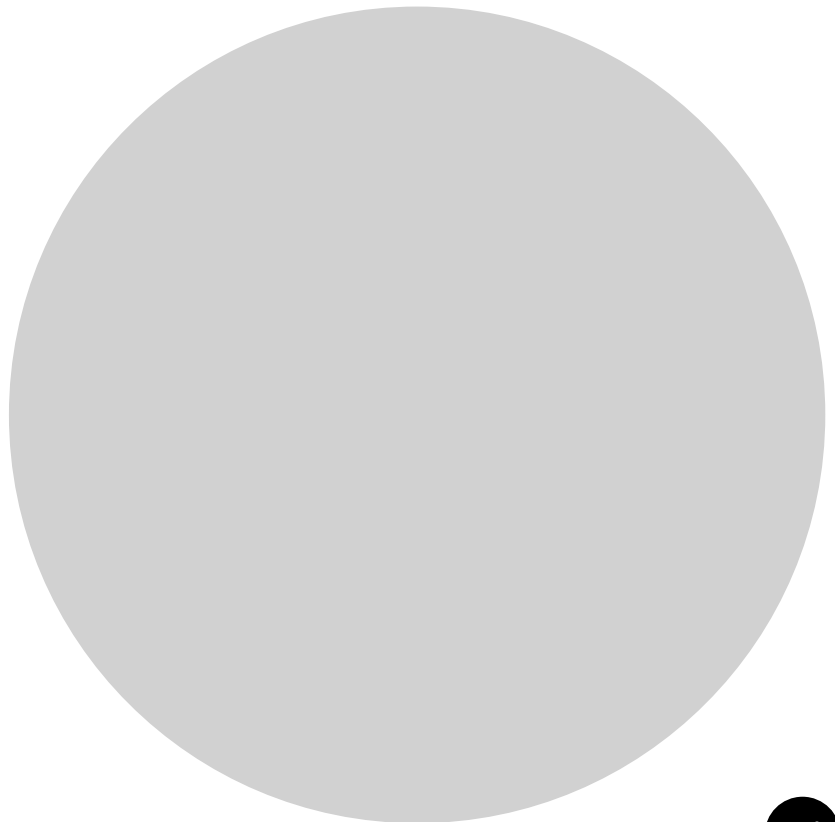

Troubleshooting Tips (PC Data Mode)

Problem	Cause	Action
The number of copies specified on the computer is not applied to the print job.	"Necessary" is selected for the "Copy Count Entry" in the Mode configuration window.	Change the setting to "Not necessary". ☞ p.91
The number of copies cannot be entered for the current print job.	The number of copies specified on the computer appears in the Print quantity display.	Press the C key to reset the Print quantity display to zero.
The print job does not proceed as specified in the Auto process feature on the computer.	"PC Selection" is not selected for the "Data Process Step" in the Mode configuration window.	Select "PC Selection". ☞ p.91
The print job does not start even when document data is received in the Local connection mode.	The Document data spooling function is activated.	Select "OFF" for the "Doc. Data Spooling" in the Mode configuration window.
The RISOGRAPH repeats the master-making process for each copy of the identical page.	The [Collate Copies] or [Collate] option was selected as a print condition for the received document data.	Cancel the current print job and send the document data concerned again without selecting the [Collate Copies] or [Collate] option as a print condition.
The message "Data Receiving Error" is displayed in the Output option window.	A communication error has occurred while receiving the current document data.	Print out the received document data to check what document data have not been received and request to transmit the remaining data again.
Document data cannot be received through the modem.	The modem has no power.	Check the power cord and power switch of the modem.
	The power of the RISOGRAPH is turned off.	Turn it on.
	The cables are not correctly connected to the modem and/or the public telecommunication line.	Check if the modem cable is securely connected between the serial port of your RISOGRAPH and the LINE terminal of the modem.
		Check if the telecommunication wire is securely connected between the PHONE terminal of the modem and the public telecommunication line socket.
	"Local Connection" is selected as communication mode in the Mode configuration window.	Select "Remote Transmit" as communication mode. ☞ p.91
	The interface memory of your RISOGRAPH is full of spooled document data.	Print out the spooled document data and clear them from the interface memory.
	A communication error has occurred while receiving the document data, causing the message "Data Receiving Error" to appear in the Output option window.	Print out the received document data and clear them from the interface memory of your RISOGRAPH.

Troubleshooting Tips (PC Data Mode)

Problem	Cause	Action
	A unique configuration is selected for the static memory in the modem.	Recover the factory-set configuration of the static memory in the modem, referring to the user's guide of the modem concerned.
	The data transmission level of the modem is not suitable for your RISOGRAPH.	Adjust the data transmission level of the modem, referring to the user's guide or contacting the manufacturer of the modem concerned.
"Unknown" appears in the lines of several listed items when the File data window is opened for the received document data.	The dedicated communication utility software, RISORINC Manager, was not used to transmit the document data.	Use the RISORINC Manager to transmit data if you want to know the details of all listed items in the File data window. ☞ p.85
The receipt time and/or date of the document data, which is displayed in the File data window, is not correct.	The system clock and calendar of your RISOGRAPH are not correctly adjusted.	Adjust them correctly in the Custom initial setting list window. ☞ p.73



Maintenance

This section describes the actions to be taken to maintain your RISOGRAPH in proper working order.



Safety Guides - Maintenance 118

Cleaning : Preventing Defective Prints 119

Safety Guides

- Maintenance

⚠ WARNING [To Avoid Personal Injury]

- DO NOT allow unauthorized persons to make adjustments or repairs.
- DO NOT remove any fixed covers.
- CALL your dealer immediately if you suspect any dangerous situations or have questions or problems with the unit.
- When you want to move the unit, contact your dealer.

 
⚠ Caution [To Avoid Mechanical Problems]

- Precision parts and driving mechanisms are contained in the unit. Do not perform actions other than those described in this manual.
- Don't make any modifications to the unit or remove parts.
- Neither RISO nor its dealer is responsible for maintenance service performed by non-RISO-authorized personnel.

Replacing the Lithium Battery

The lithium battery in your machine should last about five years.

When the battery has lost most of the power, however, the message to the right appears in the Main Display. In this case, call your authorized service representative and request to replace battery.

!!Battery Replacement!!
Call Service
(To Continue, Press  Key)

⚠ Caution The lithium battery must be replaced by a trained and authorized service representative.


Cleaning : Preventing Defective Prints

Cleaning the Thermal Print Head

Clean the Thermal Print Head after every two Master rolls. Lift up the Scanner table and open the Master making unit. Then gently wipe the Thermal Print Head (inside the unit) several times with a soft cloth or tissue.

NOTE For more effective cleaning, dampen a soft cloth or tissue with a small amount of alcohol before wiping the Thermal Print Head.

⚠ Caution Since the Thermal Print Head is very delicate, avoid shocks or scratching with a hard object.

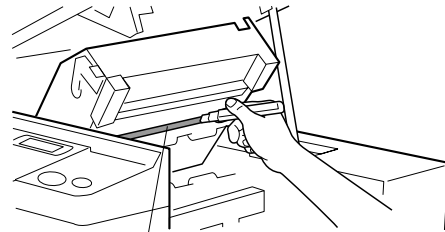


Thermal Print Head

Cleaning the Stage Glass and Stage Cover

If the Stage Glass and/or Stage Cover is stained, imperfections may appear on prints.

Wipe them gently with a soft cloth or tissue.

⚠ Caution Since the Stage Glass is very delicate, avoid shocks or scratching with a hard object.

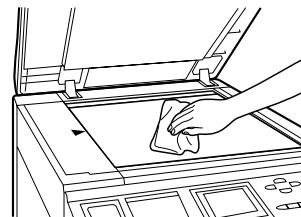


Cleaning the Pressure Roller

If the rubber Pressure Roller [that presses printing paper against the Print Cylinder (Drum)] is stained, smudged strips may appear on the back sides of copies.

In such a case, wipe the Pressure Roller thoroughly with a soft cloth dampened with alcohol, or pass used paper with a blank master loaded on the Print Cylinder (Drum) using the Confidential feature.

⚠ Caution Take extra care not to hurt your hand by the sharp tip of the Paper separation hook when wiping the Pressure roller.

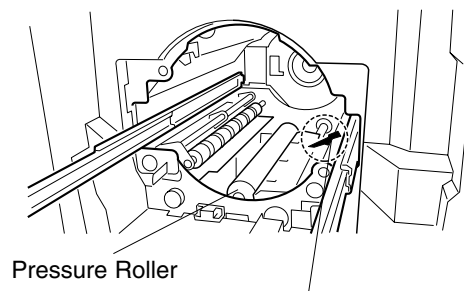

Pressure Roller


Paper Separation Hook

Cleaning the RISOGRAPH Exterior

To remove dust, wipe the machine exterior periodically with a soft cloth.


To remove stains, use an appropriate cleanser recommended by your authorized service representative.

⚠ Caution The machine exterior is plastic. Never use alcohol or solvent for cleaning.

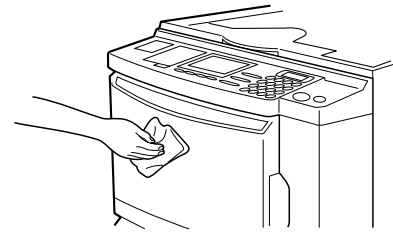

Cleaning the Optional ADF Scanner Glass

1 Open the Optional ADF Unit Table.

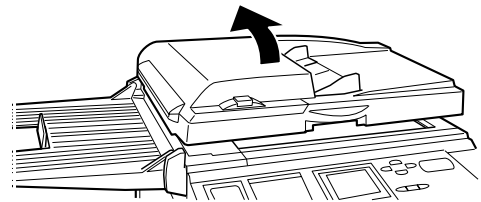


2 Wipe the Scanner Glass.

Gently wipe the Scanner Glass several times with a soft cloth or tissue.

NOTE For more effective cleaning, dampen a soft cloth or tissue with a small amount of alcohol before wiping the Scanner Glass.

⚠ Caution Since the Scanner Glass is very delicate, avoid shocks or scratching with a hard object.

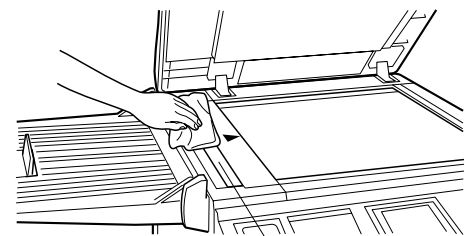


ADF Scanner Glass

Cleaning the Optional ADF White Sheet

1 Open the Optional ADF Unit Table.

2 Wipe the White Sheet.

Gently wipe the White Sheet several times with a soft cloth or tissue.

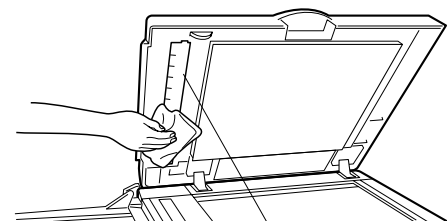

White Sheet

A ppendices

This section includes information on options and specifications.




Optional Accessories	122
Specifications - RN2000	123
Specifications - RN2030	124
Specifications - RN2050	125
Specifications - RN2130	126
Specifications - RN2150	127

Optional Accessories

A variety of optional accessories are available to enhance the capabilities of your RISOGRAPH RN series models.

Color Cylinder [Drum]

A variety of colors are available, such as blue, red, green, and brown. Each Cylinder (Drum) has its own case for storage.

 **p.74** ...By exchanging the Cylinder (Drum), you can achieve multicolor prints.

Job Separator III

This accessory efficiently sorts groups of prints with strips of paper as they are printed. The Job Separator is attached next to the Paper receiving tray.

RISOGRAPH ADF Unit V

The Automatic Document Feed (ADF) Unit automatically feeds up to 50 sheets for scanning. When you use the ADF Unit with the Auto Process, Programmed Printing, Multi-Up printing, or Print Job Memory features, multiple print jobs can be set up and completed automatically.

Interface Control Boxes [Except for RN21 series models]

The dedicated Interface control boxes enables you to combine all the advantages of your desktop publishing software with the high speed efficiency and low cost printing benefits of your RISOGRAPH.

Key/Card Counter IV

This counter shows the numbers of printed sheets and consumed masters within a preset period of time. This can help you control costs.

Network Interface Card RISORINC2-NET-A

This card can be seated on the built-in printer control board RISORINC2, extending the activity field of your RISOGRAPH into the Ethernet network environment. When your RISOGRAPH is connected to the Ethernet LAN environment, besides, the operation status can be checked on your PC screen, using the accessory monitoring utility software, RISO-MONITOR.

Printer Control Board RISORINC2 [Except for RN21 series models]

This printer control board can be built in your RISOGRAPH, converting it into a computer printer with standard parallel and serial communication ports. This control board also enables your RISOGRAPH to receive PC document data to be sent from a remote location over the public telecommunication lines.

Special Paper Feed Kit

This accessory will enhance the capabilities of your RISOGRAPH by widening the variety of available paper stock, especially card stock and envelopes.

Specifications

- RN2000

Processing	High-speed automatic digital scanning/fully automatic, thermal screening duplicating system
Time to First Copy	Letter or A4 original : approx. 20 seconds
Print Speed	5 selectable print speeds (60 to 130 sheets per minute)
Scanning Resolution	300 × 400 dpi
Original Input Type	Bound documents or sheets
Original Size	- For the Stage Glass - 2" × 3 ¹ / ₂ " (50 × 90 mm) to 11 ⁵ / ₈ " × 17" (ledger, A3, or 297 × 432 mm) - In the optional ADF Unit - 3 ¹ / ₂ " × 5 ¹ / ₂ " (A6 or 90 × 140 mm) to 11 ⁵ / ₈ " × 17" (ledger, A3, or 297 × 432 mm)
Output Paper Size	3 ¹ / ₂ " × 5 ¹ / ₂ " (A6 or 90 × 140 mm) to 11 ¹ / ₂ " × 15 ¹ / ₂ " (290 × 395 mm)
Original Weight	- For the Stage Glass - 22 lbs. (10 kg) or less - In the optional ADF Unit - 15-lb bond (50 g/m ²) to 28-lb bond (110 g/m ²)
Output Paper Weight	13-lb bond (46 g/m ²) to 110-lb index stock (210 g/m ²)
Image Area	Letter Cylinder (Drum) - 8 ¹ / ₄ " × 11 ¹ / ₂ " (210 × 290 mm)
Paper Capacity	1000 sheets in feed and receiving tray (16-lb bond or 64 g/m ²)
Enlargement Parameters	3 selectable enlargements: 141%, 127% and 121%
Reduction Parameters	4 selectable reductions: 94%, 77%, 75% and 66%
Zooming Parameters	50% to 200%
Features	<ul style="list-style-type: none"> • Large-format display screen • Print Speed/Density control (auto/manual) • Confidential mode • Multi-Up printing • Bound Book processing • Programmed printing • Print job memory mode • Duo processing • Dot-screening • Photo enhancement • Interface capabilities • Automatic idle • Scanning contrast adjustment (auto/manual) • Precision stacking tray • Preventive maintenance call
Print Colors	A wide range of colors including: black, blue, red, green, brown, yellow, etc.
Optional Accessories	Color Cylinder (Drum), ADF Unit V, Job Separator III, Key/Card Counter IV, Special Paper Feed Kit, Printer Control Board, Network Interface Card and Interface Control Boxes
Power Source	RN2000UI : 120 V AC, 60 Hz <3 A>
<Requirements>	⚠ WARNING Always check the rating plate on the machine before connecting the power.
Weight	Approx. 209 lbs. (95 kg)
Dimensions (W × D × H)	In use: 51" × 25.4" × 41" (1,300 × 645 × 1,045 mm) In storage: 29" × 25.4" × 41" (735 × 645 × 1,045 mm)

NOTE The specifications are subject to change without prior notice. Please acknowledge that the illustrations and descriptions in this manual may differ from the actual machine, due to the change in specifications.

Specifications

- RN2030

Processing	High-speed automatic digital scanning/fully automatic, thermal screening duplicating system
Time to First Copy	Letter or A4 original : approx. 20 seconds
Print Speed	5 selectable print speeds (60 to 130 sheets per minute)
Scanning Resolution	300 × 400 dpi
Original Input Type	Bound documents or sheets
Original Size	- For the Stage Glass - 2" × 3 1/2" (50 × 90 mm) to 11 5/8" × 17" (ledger, A3, or 297 × 432 mm) - In the optional ADF Unit - 3 1/2" × 5 1/2" (A6 or 90 × 140 mm) to 11 5/8" × 17" (ledger, A3, or 297 × 432 mm)
Output Paper Size	3 1/2" × 5 1/2" (A6 or 90 × 140 mm) to 11 1/2" × 15 1/2" (290 × 395 mm)
Original Weight	- For the Stage Glass - 22 lbs. (10 kg) or less - In the optional ADF Unit - 15-lb bond (50 g/m ²) to 28-lb bond (110 g/m ²)
Output Paper Weight	13-lb bond (46 g/m ²) to 110-lb index stock (210 g/m ²)
Image Area	Legal Cylinder (Drum) - 8 1/4" × 14" (210 × 357 mm)
Paper Capacity	1000 sheets in feed and receiving tray (16-lb bond or 64 g/m ²)
Enlargement Parameters	3 selectable enlargements: 141%, 127% and 121%
Reduction Parameters	4 selectable reductions: 94%, 77%, 75% and 66%
Zooming Parameters	50% to 200%
Features	<ul style="list-style-type: none"> • Large-format display screen • Print Speed/Density control (auto/manual) • Confidential mode • Multi-Up printing • Bound Book processing • Programmed printing • Print job memory mode • Duo processing • Dot-screening • Photo enhancement • Interface capabilities • Automatic idle • Scanning contrast adjustment (auto/manual) • Precision stacking tray • Preventive maintenance call
Print Colors	A wide range of colors including: black, blue, red, green, brown, yellow, etc.
Optional Accessories	Color Cylinder (Drum), ADF Unit V, Job Separator III, Key/Card Counter IV, Special Paper Feed Kit, Printer Control Board, Network Interface Card and Interface Control Boxes
Power Source <Requirements>	RN2030AS: 220-240 V AC, 50/60 Hz <1.5 A> ⚠ WARNING Always check the rating plate on the machine before connecting the power.
Weight	Approx. 209 lbs. (95 kg)
Dimensions (W × D × H)	In use: 51" × 25.4" × 41" (1,300 × 645 × 1,045 mm) In storage: 29" × 25.4" × 41" (735 × 645 × 1,045 mm)

NOTE The specifications are subject to change without prior notice. Please acknowledge that the illustrations and descriptions in this manual may differ from the actual machine, due to the change in specifications.

Specifications

- RN2050

Processing	High-speed automatic digital scanning/fully automatic, thermal screening duplicating system	
Time to First Copy	Letter or A4 original : approx. 20 seconds	
Print Speed	5 selectable print speeds (60 to 130 sheets per minute)	
Scanning Resolution	300 × 400 dpi	
Original Input Type	Bound documents or sheets	
Original Size	- For the Stage Glass - 2" × 3 1/2" (50 × 90 mm) to 11 5/8" × 17" (ledger, A3, or 297 × 432 mm) - In the optional ADF Unit - 3 1/2" × 5 1/2" (A6 or 90 × 140 mm) to 11 5/8" × 17" (ledger, A3 or 297 × 432 mm)	
Output Paper Size	3 1/2" × 5 1/2" (A6 or 90 × 140 mm) to 11 1/2" × 15 1/2" (290 × 395 mm)	
Original Weight	- For the Stage Glass - 22 lbs. (10 kg) or less - In the optional ADF Unit - 15-lb bond (50 g/m ²) to 28-lb bond (110 g/m ²)	
Output Paper Weight	13-lb bond (46 g/m ²) to 110-lb index stock (210 g/m ²)	
Image Area	B4 Cylinder (Drum) - 9 7/8" × 14" (251 × 357 mm)	
Paper Capacity	1000 sheets in feed and receiving tray (16-lb bond or 64 g/m ²)	
Enlargement Parameters	3 selectable enlargements: 141%, 122% and 116%	
Reduction Parameters	4 selectable reductions: 94%, 87%, 82% and 71%	
Zooming Parameters	50% to 200%	
Features	<ul style="list-style-type: none"> • Large-format display screen • Print Speed/Density control (auto/manual) • Confidential mode • Multi-Up printing • Bound Book processing • Programmed printing • Print job memory mode • Duo processing 	<ul style="list-style-type: none"> • Dot-screening • Photo enhancement • Interface capabilities • Automatic idle • Scanning contrast adjustment (auto/manual) • Precision stacking tray • Preventive maintenance call
Print Colors	A wide range of colors including: black, blue, red, green, brown, yellow, etc.	
Optional Accessories	Color Cylinder (Drum), ADF Unit V, Job Separator III, Key/Card Counter IV, Special Paper Feed Kit, Printer Control Board, Network Interface Card and Interface Control Boxes	
Power Source	RN2050EN : 120 V AC, 60 Hz <3 A>	
<Requirements>	RN2050AN : 110 V AC, 60 Hz <3 A>	
	RN2050AW : 220-240 V AC, 50/60 Hz <1.5 A>	
	⚠ WARNING Always check the rating plate on the machine before connecting the power.	
Weight	Approx. 209 lbs. (95 kg)	
Dimensions (W × D × H)	In use: 51" × 25.4" × 41" (1,300 × 645 × 1,045 mm) In storage: 29" × 25.4" × 41" (735 × 645 × 1,045 mm)	

NOTE The specifications are subject to change without prior notice. Please acknowledge that the illustrations and descriptions in this manual may differ from the actual machine, due to the change in specifications.

Specifications

- RN2130

Processing	High-speed automatic digital scanning/fully automatic, thermal screening duplicating system
Time to First Copy	Letter or A4 original : approx. 20 seconds
Print Speed	5 selectable print speeds (60 to 130 sheets per minute)
Scanning Resolution	300 × 400 dpi
Original Input Type	Bound documents or sheets
Original Size	- For the Stage Glass - 2" × 3 ¹ / ₂ " (50 × 90 mm) to 11 ⁵ / ₈ " × 17" (ledger, A3, or 297 × 432 mm) - In the optional ADF Unit - 3 ¹ / ₂ " × 5 ¹ / ₂ " (A6 or 90 × 140 mm) to 11 ⁵ / ₈ " × 17"(ledger, A3, or 297 × 432 mm)
Output Paper Size	3 ¹ / ₂ " × 5 ¹ / ₂ " (A6 or 90 × 140 mm) to 11 ¹ / ₂ " × 15 ¹ / ₂ " (290 × 395 mm)
Original Weight	- For the Stage Glass - 22 lbs. (10 kg) or less - In the optional ADF Unit - 15-lb bond (50 g/m ²) to 28-lb bond (110 g/m ²)
Output Paper Weight	13-lb bond (46 g/m ²) to 110-lb index stock (210 g/m ²)
Image Area	Legal Cylinder (Drum) - 8 ¹ / ₄ " × 14" (210 × 357 mm)
Paper Capacity	1000 sheets in feed and receiving tray (16-lb bond or 64 g/m ²)
Enlargement Parameters	3 selectable enlargements: 141%, 127% and 121%
Reduction Parameters	4 selectable reductions: 94%, 77%, 75% and 66%
Zooming Parameters	50% to 200%
Features	<ul style="list-style-type: none">• Large-format display screen• Print Speed/Density control (auto/manual)• Confidential mode• Multi-Up printing• Bound Book processing• Programmed printing• Print job memory mode• Duo processing• Dot-screening• Photo enhancement• Direct computer interface• Automatic idle• Scanning contrast adjustment (auto/manual)• Precision stacking tray• Preventive maintenance call
Print Colors	A wide range of colors including: black, blue, red, green, brown, yellow, etc.
Optional Accessories	Color Cylinder (Drum), ADF Unit V, Job Separator III, Key/Card Counter IV, Special Paper Feed Kit and Network Interface Card
Power Source	RN2130UI : 120 V AC, 60 Hz <3 A>
<Requirements>	RN2130AS: 220-240 V AC, 50/60 Hz <1.5 A>
	⚠ WARNING Always check the rating plate on the machine before connecting the power.
Weight	Approx. 213 lbs. (97 kg)
Dimensions (W × D × H)	In use: 51" × 25.4" × 41" (1,300 × 645 × 1,045 mm) In storage: 29" × 25.4" × 41" (735 × 645 × 1,045 mm)

Interface Specifications

CPU	SH-3 (66 MHz)
Available PDL	RISORINC2
Applicable OS	Windows95/98, WindowsNT4.0 and MAC OS*
Available Input Port	<ul style="list-style-type: none">• Parallel (IEEE1284A Centronics)• Serial (RS-232C) for communication devices• Ethernet (10BASE-T/100BASE-TX)*
Memory	64MB

* The optional Network Interface Card RISORINC2-NET-A is required to use the RN21 series model as a network printer in LAN (Local Area Network) or to connect with Macintosh.

Specifications

- RN2150

Processing	High-speed automatic digital scanning/fully automatic, thermal screening duplicating system
Time to First Copy	Letter or A4 original : approx. 20 seconds
Print Speed	5 selectable print speeds (60 to 130 sheets per minute)
Scanning Resolution	300 × 400 dpi
Original Input Type	Bound documents or sheets
Original Size	- For the Stage Glass - 2" × 3 ¹ / ₂ " (50 × 90 mm) to 11 ⁵ / ₈ " × 17" (ledger, A3, or 297 × 432 mm) - In the optional ADF Unit - 3 ¹ / ₂ " × 5 ¹ / ₂ " (A6 or 90 × 140 mm) to 11 ⁵ / ₈ " × 17" (ledger, A3 or 297 × 432 mm)
Output Paper Size	3 ¹ / ₂ " × 5 ¹ / ₂ " (A6 or 90 × 140 mm) to 11 ¹ / ₂ " × 15 ¹ / ₂ " (290 × 395 mm)
Original Weight	- For the Stage Glass - 22 lbs. (10 kg) or less - In the optional ADF Unit - 15-lb bond (50 g/m ²) to 28-lb bond (110 g/m ²)
Output Paper Weight	13-lb bond (46 g/m ²) to 110-lb index stock (210 g/m ²)
Image Area	B4 Cylinder (Drum) - 9 ⁷ / ₈ " × 14" (251 × 357 mm)
Paper Capacity	1000 sheets in feed and receiving tray (16-lb bond or 64 g/m ²)
Enlargement Parameters	3 selectable enlargements: 141%, 122% and 116%
Reduction Parameters	4 selectable reductions: 94%, 87%, 82% and 71%
Zooming Parameters	50% to 200%
Features	<ul style="list-style-type: none">• Large-format display screen• Print Speed/Density control (auto/manual)• Confidential mode• Multi-Up printing• Bound Book processing• Programmed printing• Print job memory mode• Duo processing• Dot-screening• Photo enhancement• Direct computer Interface• Automatic idle• Scanning contrast adjustment (auto/manual)• Precision stacking tray• Preventive maintenance call
Print Colors	A wide range of colors including: black, blue, red, green, brown, yellow, etc.
Optional Accessories	Color Cylinder (Drum), ADF Unit V, Job Separator III, Key/Card Counter IV, Special Paper Feed Kit and Network Interface Card
Power Source <Requirements>	RN2150EN : 120 V AC, 60 Hz <3 A> RN2150AN : 110 V AC, 60 Hz <3 A> RN2150AW : 220-240 V AC, 50/60 Hz <1.5 A> ⚠ WARNING Always check the rating plate on the machine before connecting the power.
Weight	Approx. 213 lbs. (97 kg)
Dimensions (W × D × H)	In use: 51" × 25.4" × 41" (1,300 × 645 × 1,045 mm) In storage: 29" × 25.4" × 41" (735 × 645 × 1,045 mm)

Interface Specifications

CPU	SH-3 (66 MHz)
Available PDL	RISORINC2
Applicable OS	Windows95/98, WindowsNT4.0 and MAC OS*
Available Input Port	<ul style="list-style-type: none">• Parallel (IEEE1284A Centronics)• Serial (RS-232C) for communication devices• Ethernet (10BASE-T/100BASE-TX)*
Memory	64MB

* The optional Network Interface Card RISORINC2-NET-A is required to use the RN21 series model as a network printer in LAN (Local Area Network) or to connect with Macintosh.

NOTE The specifications are subject to change without prior notice. Please acknowledge that the illustrations and descriptions in this manual may differ from the actual machine, due to the change in specifications.

Index

Symbols and Numerals

× key (illustration)	12
× key, using	50
* key (illustration)	12
* key, using	50, 53
+ key (illustration)	12
+ key, using	50, 53
1:1 key (illustration)	13
1:1 key, using	34, 35

A

accessories	122
adding paper	21
ADF original guides (illustration)	10
ADF original guides, adjusting	28
ADF original receiving tray (Illustration)	10
ADF original stop (Illustration)	10
ADF originals, restrictions	19
ADF release button (illustration)	10
ADF scanner glass, cleaning	120
ADF unit (illustration)	10
adjustment of printing position, horizontal	39
adjustment of printing position, vertical	39
advice window	15
advisory messages: informing troubles in master-making area	105, 106
advisory messages: informing troubles in optional ADF unit	107
advisory messages: informing troubles in printing area	106, 107
advisory messages: requesting proper setting	103, 104
advisory messages: requesting supply and disposal	105
advisory messages: requesting technical support	104
AT command output	92
AT command selection list	92
AUTO IDLE key (illustration)	13
AUTO IDLE key, using	69
auto idle period, initial setting	73
auto process function	93
AUTO PROCESS key (Illustration)	12
AUTO PROCESS key, using	32
auto scanning contrast adjustment indicator	36
auto scanning contrast adjustment mode	36
automatic idle feature	69, 73
automatic printing	32
automatic sorting into groups	49

B

basic interface operation	82
basic processes	25
basic window	14, 80
beep sound, initial setting	73
beep, 15-seconds (place second original)	46, 47
book erasure width, initial setting	72
book spine shadow processing	38
book-long	38
book-size (wide/long), initial setting	72
book-wide	38
bound documents, reproducing	38
bound original feature	38
BOUND ORIGINAL Selection key (illustration)	13
BOUND ORIGINAL Selection key, using	19, 38

C

C key (illustration)	12
C key, using	50, 51, 53, 58
calling up saved print job setting	66
calling up saved program setting	60
cautions, handling machine	24

cautions, installation	8
changing PC data mode configuration	89
changing print job flow	87
cleaning ADF white sheet	120
cleaning (preventing defective prints)	119
cleaning ADF scanner glass	120
cleaning pressure roller	119
cleaning RISOGRAPH exterior	120
cleaning stage glass and stage cover	119
cleaning thermal print head	119
clearing document data from memory	85
clock/calendar, initial setting	73
color print cylinders (drums)	74, 122
color, print	74
communication mode	91
computer interface	76
confidential documents, protecting	48
CONFIDENTIAL key (illustration)	13
CONFIDENTIAL key, using	48
configuration items	91
connecting to a computer	78
control panel, checking	26
copy count entry	91
copyright infringement, caution	24
cursor keys (Illustration)	12
cursor keys, using	56, 58, 60, 61, 64-67
CUSTOM SETTING key (illustration)	13
CUSTOM SETTING key, using	70
customizing initial settings	70

D

data process step	91
data source selection key (Illustration)	13
data source selection key, using	27, 76, 82
defective prints, preventing	119
DENSITY mode	41
dimensions	123, 124, 125, 126, 127
discarding used masters	100
display (illustration)	14
displayed language	73
disposal box, master	100
disposal entrance cover (Illustration)	11
doc. data spooling	91
documents, bound (reproducing)	38
documents, confidential	48
DOT	19, 37
DOT PHOTO Selection key (illustration)	13
DOT PHOTO Selection key, using	19, 37
dotted images, producing	37
DUO	19, 30

E

energy save timer, initial setting	73
energy saving mode, initial setting	72
ENLARGE key (illustration)	13
ENLARGE key, using	34
enlargement, preset	34
enlarging originals	34
entering number of copies	29
environment, recommended	8
erasing saved print job setting	67
erasing saved program setting	61
extension cord, capacity	8

F

feature window	15
features	9, 123, 124, 125, 126, 127
feed tray descent button (illustration)	10
feed tray descent button, using	21

feed tray paper guide lock lever (Illustration)	10
feed tray paper guides (illustration)	10
feed tray paper guides, using	20
file data window	81
flanges, master roll	98, 99
front cover (illustration)	11
function keys (Illustration)	12
function keys, using	15, 80

G

groups, automatic sorting into	49
--------------------------------	----

H

half-tone processing	30
handling machine, warnings and cautions	24
horizontal adjustment of printing position	39
Horizontal Print Position Adjustment Dial (Illustration)	10
Horizontal Print Position Adjustment Dial, using	39

I

image contrast on prints, changing	36
image processing mode selection, initial setting	42, 72
image processing modes	19
IMAGE PROCESSING Selection key (illustration)	12
IMAGE PROCESSING Selection key, using	19, 30
images, dotted (producing)	37
INITIAL SETTING SELECTION	70
initial setting, image processing mode selection	42
initial setting, Main display	42
initial setting, master-making/print	42
initial setting, original scanning contrast	42, 72
initial setting, print density	42, 72
initial setting, print position	42
initial setting, print quantity display	42, 73
initial setting, print speed	42, 72
initial setting, size adjustment	42
initial settings, customizing	70
initial settings, return to	42, 70
injury, avoiding	8, 24, 118
ink cartridge (illustration)	11
ink cartridge locking lever (illustration)	11
ink cartridge, cautions	97
ink cartridge, replacing	96
interface (computer)	76

J

job flow list	88
job separator line, initial setting	73
Job Separator III (optional accessory)	49, 73, 122

L

LCD mode priority, initial setting	73
LINE	19, 30
lithium battery, replacing	118
location, recommended	8

M

main control panel (illustration)	10, 12
main display (illustration)	12
main display, about	14
main display, initial setting	42
main power switch (illustration)	11
maintenance, safety guides	118
master disposal box (illustration)	10
master disposal box, emptying and inserting	100
master roll (illustration)	11
master roll cover (illustration)	11
master roll, replacing	98
master-making	25

master-making/print, initial setting	42
mechanical problems, avoiding	8, 24, 118
memory feature	62
memory feature, saving	62
MEMORY key (illustration)	12
MEMORY key, using	62, 64, 66, 67
meter display, initial setting	73
misfeeds, preventing	18
mode configuration data	82
mode configuration window	81
mode configuration window	81
multi-up interval, initial setting	72
MULTI-UP PRINT key (illustration)	13
MULTI-UP PRINT key, using	45, 46
Multi-up printing (different originals)	46
Multi-up printing (same original)	45

N

NORMAL PRINT DENSITY key (Illustration)	12
NORMAL PRINT DENSITY key, using	41
NORMAL PRINT SPEED key (Illustration)	12
NORMAL PRINT SPEED key, using	40
number of copies (entering)	29

O

original scanning contrast, initial setting	42, 72
original, placing	28
originals, enlarging	34
originals, printing side by side	44
originals, reducing	34
originals, size recommendations	19
originals, weight recommendations	19
output option window	80

P

paper arranger (illustration)	11
paper arranger adjustment knob (illustration)	11
paper arrangers, setting	21
paper arrangers, using	18, 21
paper capacity	123, 124, 125, 126, 127
paper ejection wing adjustment lever (illustration)	11
paper ejection wings (illustration)	22
paper feed mode	20, 73
paper feed pressure adjustment lever (illustration)	10
paper feed pressure adjustment lever, using	20
paper feed pressure, setting	20
paper feed tray (illustration)	10
paper feed tray, setting up	20
paper jams, preventing	18
paper receiving tray (illustration)	11
paper receiving tray, closing	22
paper receiving tray, setting up	21
paper stop (illustration)	11
paper stop, using	22
paper, adding	21
paper, replacing	21
paper, size recommendations	18
paper, storing environment	18
paper, weight recommendations	18
PC data mode window	15, 82
PHOTO	19, 30
photo processing	30
plural-original program, setting up	53
power connection, recommended	8
power switch, turning on	26
preset enlargement, using	34
preset reduction, using	34
Preset Reduction/Enlargement size indicator (illustration)	13

pressure roller, cleaning.....	119	scanner table (illustration).....	11
preventing defective prints.....	119	SCANNING CONTRAST	
print color, changing.....	74	Adjustment keys (illustration).....	13
print colors.....	123, 124, 125, 126, 127	SCANNING CONTRAST adjustment keys, using.....	36
print cylinder (drum) (illustration).....	11	scanning resolution.....	123, 124, 125, 126, 127
Print Cylinder (drum) release button (illustration).....	11	selecting output pages.....	84
print cylinder (drum), operation.....	25	selecting pages.....	84
print cylinders (drums), replacing.....	74	semi auto>master.....	93
PRINT DENSITY Adjustment keys, using.....	41	semi auto>print.....	93
PRINT DENSITY indicator.....	12	semi-auto>master, initial setting.....	73
print density, changing.....	41	serial com. speed.....	91
print position, adjusting.....	39	Shifting.....	39
print position, initial setting.....	42	side-by-side printing (different originals).....	44, 46
Print Quantity Display (illustration).....	12	side-by-side printing (same original).....	44, 45
print quantity display, initial setting.....	42	single-original program, setting up.....	50
Print Quantity keys (0 to 9) (illustration).....	12	size adjustment, initial setting.....	42
print quantity, minimum.....	73	sorting into groups, automatic.....	49
PRINT SPEED Adjustment keys (illustration).....	12	Speed.....	40
PRINT SPEED Adjustment keys, using.....	40	stage cover (illustration).....	10
PRINT SPEED indicator.....	12	stage glass (illustration).....	10
print speed, changing.....	40	stage glass and stage cover, cleaning.....	119
printing.....	25	standard printer cable, using.....	78
printing, automatic.....	32	START key (illustration).....	12
printing, multi-up (different originals).....	44, 46	STOP key (illustration).....	12
printing, multi-up (same original).....	44, 45	storing environment, paper.....	18
printing, side-by-side (different originals).....	44, 46	sub control panel (illustration).....	13
printing, side-by-side (same original).....	44, 45		
PROCESS selection key (illustration).....	12	T	
processing, half-tone.....	30	temperature range, recommended.....	8
processing, photo.....	30	TEST PRINT key (illustration).....	12
PROGRAM key (illustration).....	12	TEST PRINT key, using.....	31
PROGRAM key, using.....	49, 50, 53, 60, 61	test prints, making.....	31
proof copies, making.....	31	thermal print head, cleaning.....	119
public telecommunication lines.....	79		
R		U	
receiving tray paper guide		used masters, discarding.....	100
adjustment knob (illustration).....	11	utility window.....	81
receiving tray paper guides (illustration).....	11		
receiving tray paper guides, using.....	18, 21, 22	V	
REDUCE key (illustration).....	13	vertical adjustment of printing position.....	39
REDUCE key, using.....	34	VERTICAL PRINT POSITION	
reducing originals.....	34	Adjustment keys (illustration).....	12
reduction, preset.....	34	VERTICAL PRINT POSITION	
renaming saved print job setting.....	64	Adjustment keys, using.....	39
renaming saved program setting.....	58	VERTICAL PRINT POSITION	
renewing the current page.....	87	CENTER key (illustration).....	12
replacing ink cartridge.....	96	VERTICAL PRINT POSITION CENTER key, using.....	39
replacing lithium battery.....	118	VERTICAL PRINT POSITION indicator.....	12, 39
replacing master roll.....	98		
replacing paper.....	21	W	
RESET key (illustration).....	12	warnings, handling machine.....	24
RESET key, using.....	42	warnings, Maintenance.....	118
resolution review.....	92	warnings, power connection.....	8
RISOGRAPH exterior, cleaning.....	120	weight.....	123, 124, 125, 126, 127
RMT data receiver.....	91	white sheet, cleaning.....	120
RMT error transact.....	91		
rotating images 180 degrees.....	86	Z	
		ZOOM key (Illustration).....	13
		zoom, using.....	35
S			
safety guides, installation.....	8		
safety guides, maintenance.....	118		
sample prints, making.....	31		
saved settings, calling up.....	60, 66		
saved settings, erasing.....	61, 67		
saved settings, renaming.....	58, 64		
saving current print job setting.....	72		
saving current program setting.....	56		
scanner table release lever (illustration).....	11		

